

AIR CONDITIONING SYSTEMS

Models:

V1DI-09
V1DI-12
V1DI-18
V1DI-24
V1DI-30
V1DI-36
V1DI-45
V1DI-50
V1DI-60

DC Inverter Ducted Air-Conditioning Unit Owner's Manual



Thank you for choosing
INVENTOR air conditioning
system. For correct use of
this unit, please read this
manual carefully and keep it
for future reference.

Contents

Safety Considerations	1
User Notice	3
I Displaying Part	4
1.1 LCD Display of Wired Controller	4
1.2 Instruction to LCD Display.....	5
II Buttons	6
2.1 Silk Screen of Buttons	6
2.2 Instruction to Function of Buttons	6
III Installation of Wired Controller	7
IV Instruction to Operation	8
4.1 On/Off	8
4.2 Mode Setting	8
4.3 Temperature Setting.....	9
4.4 Fan Speed Setting	9
4.5 Swing Control Function.....	10
4.6 Timer Setting.....	10
4.7 Air Exchange Setting *	11
4.8 Sleep Setting.....	12
4.9 Turbo Function Setting	14
4.10 SAVE Function Setting	14
4.11 E-HEATER Setting *	16
4.12 Blow Function Setting	17
4.13 Quiet Function Setting.....	18
4.14 Field Functions	19
4.15 Other Functions	19
V Error Display	21
VI Remote control operation procedure(standard fitting)	24
VII Unit Function	27
7.1 Setting of Double Indoor Room Sensors	27
7.2 Checking of Outdoor Ambient Temperature	27
7.3 Fresh Air Control.....	27

VIII Installation Instructions	29
8.1 Instructions of Unit Installation	29
8.2 Installation of Indoor Unit	33
8.3 Electrical Installation	41
IX Troubleshooting and Maintenance	45
Appendix	47

Safety Considerations

Please read this manual carefully before use and operate correctly as instructed in the manual.

You are specially warned to note the two symbols below:



WARNING! : A symbol indicating that improper operation might cause human death or severe injury.



WARNING! : A symbol indicating that improper operation might cause human property damage.



WARNING!

- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This unit shall be used in offices restaurants residences or similar places.
- Please seek an authorized repair station for installation work. Improper installation might cause water leakage, electric shock or fire.
- Please install at a place strong enough to support the weight of air conditioner unit. If not , the air conditioner unit might fall down and cause human injury or death.
- To ensure proper drainage, the drainage pipe shall be correctly installed according to installation instructions. Take proper measures for heat preservation to prevent condensing. Improper installation of pipes might cause .leakage and wet the articles in the room.
- Do not use or store flammable, explosive ,poisonous or other dangerous substances beside the air conditioner.
- In case of trouble (e. g .burnt smell) ,please immediately cut off the main power of air conditioner unit .
- Keep air flow to avoid shortage of oxygen in the room.
- Never insert your finger or any objects into air outlet and inlet grill.
- Never plug or unplug the power cable directly to start or stop the air conditioning unit.
- Please take constant care to check if the mounting rack is damaged after long use.
- Never modify the air conditioner. Please contact the dealer or professional installation workers for repair or relocation of the air conditioner.
- The appliance shall not be installed in the laundry.
- Before installation, please check the power supply for compliance with the ratings on nameplate. Check the power safety as well (Operating by professional)
- Before use, please check and confirm if the cables , drainage pipes and pipelines are correctly connected, hence to eliminate the risk of water leakage, refrigerant leakage, electric shock or fire.
- Main power must be securely earthed to ensure effective grounding of air conditioner unit and avoid the risk of electric shock. Please do not connect the earth cable to coal gas pipe, water pipe, lightning rod or telephone line.
- Once started , the air conditioner shall not be stopped at least after 5 minutes or longer, otherwise

the oil return to compressor may be affected.

- Do not let the child to operate the air conditioner unit.
- Do not operate the air conditioner unit with wet hands.
- Please disconnect the main power before cleaning the air conditioner or replacing the air filter.
- Please disconnect the main power if to put the air conditioner unit out of use for a long period.
- Please do not expose the air conditioner unit directly under corrosive environment with water or moisture.
- Please do not foot on or place any goods on air conditioner unit.
- After electrical installation, the air conditioner unit shall be energized for electrical leakage test .(Operating by professional)
- If the supply cord is damaged ,it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard .
- An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.
- The appliance shall be installed in accordance with national wiring regulations.
- The temperature of refrigerant circuit will be high, please keep the interconnection cable away from the copper tube.
- The power cord must be separated with the communication line.

User Notice

- ☆ Ensure unified power supply for each indoor unit.
- ☆ Never install wired controller in wet place or under sunlight directly.
- ☆ Shielding twisted pair line must be adopted as signal line or wiring (communication) of wired controller once the unit is installed in the place where there is electromagnetic interference.
- ☆ Make sure communication line is connected into correct port to avoid communication malfunction.
- ☆ Never knock, throw or frequently disassemble the wired controller.
- ☆ Never operate the wired controller with wet hand.

I Displaying Part



Fig.1 Outline of wired controller

1.1 LCD Display of Wired Controller



Fig.2 LCD display

1.2 Instruction to LCD Display

Table 1

No.	Description	Instruction to Displaying Contents
1	Swing *	Swing function
2	Air *	Air exchange function
3	Sleep	Sleeping states
4	Running mode	Each kind of running mode of indoor unit (auto mode)
5	Cooling	Cooling mode
6	Dry	Dry mode
7	Fan	Fan mode
8	Heating	Heating mode
9	Defrost	Defrosting state
10	Gate-control card *	Gate control
11	Lock	Lock state
12	Shield	Shielding state (buttons, temperature, on/off, mode or save is shielded by long-distance monitoring)
13	Turbo	Turbo function state
14	Memory	Memory state (Indoor unit resumes original setting state after power failure and then power recovery)
15	Twinkle	Flicking when unit is on without operation of buttons
16	Save	Energy-saving state
17	Temperature	Ambient/setting temperature value
18	E-Heater *	E-HEATER display means electric-heater is available
19	Blow	Blow mark
20	Timer	Timer-displayed location
21	Quiet	Quiet state(two types: quiet and auto quiet)
Notes: The functions with * are reserved for other models and are not applicable for the models listed in this manual.		

II Buttons

2.1 Silk Screen of Buttons



Fig. 3 Silk screen of buttons

2.2 Instruction to Function of Buttons

Table 2

No.	Description	Function of Button
1	Enter/cancel	① Function selection and canceling; ② Press it for 5s to enquiry the outdoor ambient temperature.
2	▲	① Running temperature setting of indoor unit, range :16~30°C
6	▼	② Timer setting, range:0.5-24hr ③ Switchover between quiet/auto quiet
3	Fan	Setting of high/middle/low/auto fan speed
4	Mode	Setting of cooling/heating/fan/dry mode of indoor unit
5	Function	Switchover among these functions of air/sleep/turbo/save/e-heater/blow/quite
7	Timer	Timer setting
8	On/off	Turn on/off indoor unit
4 Mode and 2 ▲	Memory function	Press Mode and ▲ for 5s under off state of the unit to enter/cancel key memory function (If memory is set, indoor unit will resume original setting state after power failure and then power recovery. If not, indoor unit is defaulted to be off after power recovery. Memory function is defaulted to be off before outgoing.)
2 ▲ and 6 ▼	Lock	Upon startup of the unit without malfunction or under off state of the unit, press ▲ ▼ key at the same time for 5s in to lock state. In this case, any other buttons won't respond the press. Repress ▲ ▼ key for 5s to quit lock state.

III Installation of Wired Controller

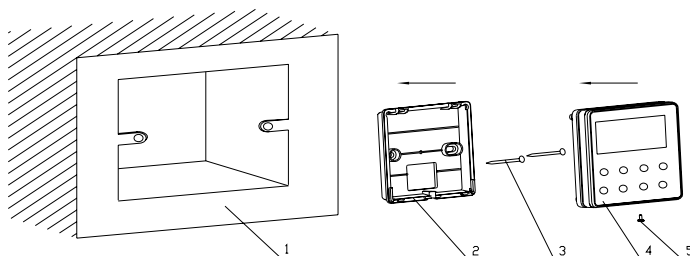


Fig.4 Sketch for Installation of Wired Controller

No.	1	2	3	4	5
Description	Socket's base box installed in the wall	Soleplate of controller	Screw M4X25	Front panel of controller	Screw ST2.2X6.5

Fig.4 Sketch for Installation of Wired Controller Pay attention to the following items during installation of wired controller:

1. Cut off power supply of heavy-current wire embedded in mounting hole in the wall before installation. It is prohibited to perform the whole procedure with electricity.
2. Pull out 4-core twisted pair line in mounting hole and then make it through the rectangle hole at the back of controller's soleplate.
3. Joint the controller's soleplate on wall face and then fix it in mounting hole with screws M4X25.
4. Insert the 4-core twisted pair line through rectangle hole into controller's slot and buckle the front panel and soleplate of controller together.
5. At last, fix the controller's front panel and soleplate with screws ST2.2X6.5.



Caution:

During connection of wirings, pay special attention to the following items to avoid interference of electromagnetism to unit and even failure of it.

1. To ensure normal communication of the unit, signal line and wiring (communication) of wired controller should be separate from power cord and indoor/outdoor connection lines. The distance between them should be kept 20cm in min.
2. If the unit is installed at the place where there is interference of electromagnetism, signal line and wiring (communication) of wired controller must be shielded by twisted pair lines.

IV Instruction to Operation

4.1 On/Off

Press **On/Off** button to turn on the unit.

Repress this button to turn **off** the unit.

Note: The state shown in Fig.6 indicates off-state of the unit after energization.

The state shown in Fig.7 indicates on-state of the unit after energization.



Fig.6 Off state of the unit



Fig.7 On state of the unit

4.2 Mode Setting

Under on-state of the unit, press **Mode** button to switch the operation modes as the following sequence:

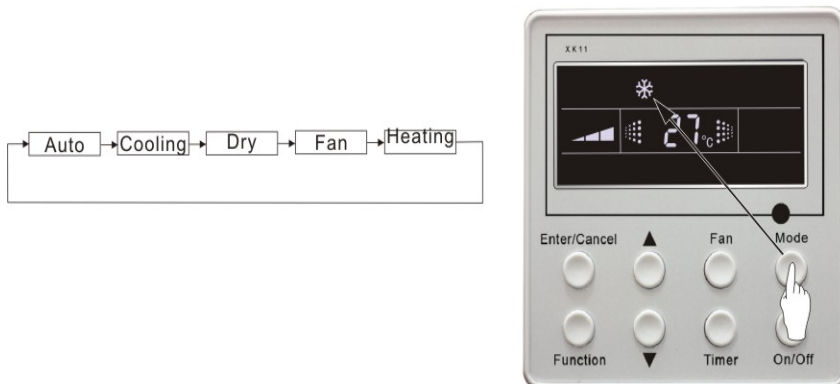


Fig.8

4.3 Temperature Setting

Press ▲ or ▼ button to increase or decrease of setting temperature under on-state of the unit. If press either of them continuously, temperature will be increased or decreased by 1°C every 0.5s.

In Cooling, Dry, Fan and Heating mode, temperature setting range is 16°C~30°C.

In Auto mode, the setting temperature is un-adjustable.

As shown in Fig.9.

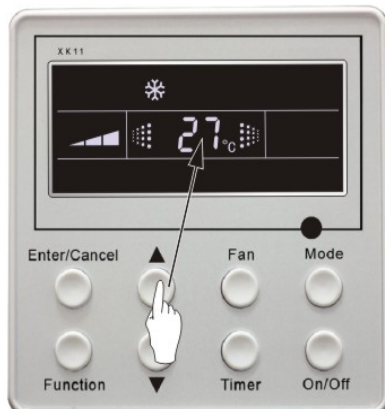


Fig.9

4.4 Fan Speed Setting

Press **Fan** button, fan speed of indoor unit will change as below:

As shown in Fig.10.

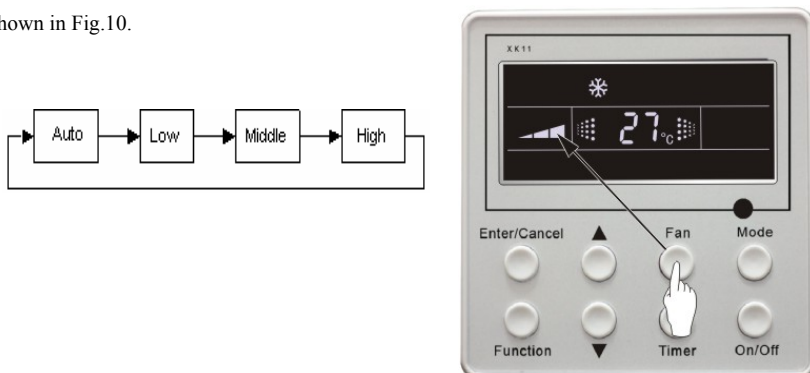


Fig.10

4.5 Swing Control Function

Under on-state of unit, press **Function** button till the unit enters swing control function and then press **Enter/cancel** button to turn on “swing” control function.

During swing function, press **Function** button till the unit enters swing control function and then press **Enter/cancel** button to cancel swing control function.

Swing control function setting is shown in Fig.11.

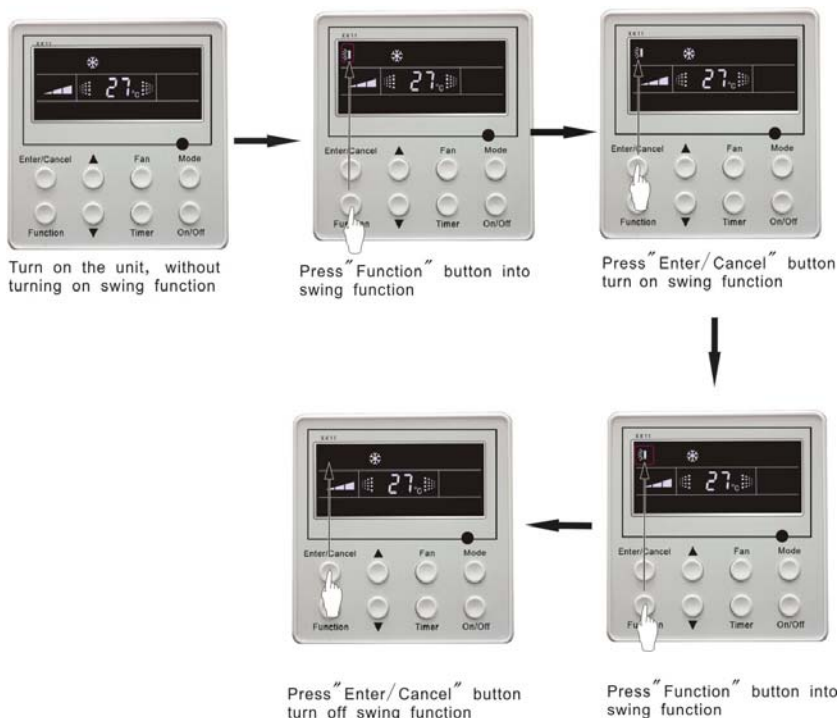


Fig.11

4.6 Timer Setting

Press **Timer** button to set timer off of the unit. Under off-state of the unit, press **Timer** button to set timer on of the unit in the same way.

Timer on setting: Under off-state of the unit without timer setting, if **Timer** button is pressed, LCD will display **xx. Hour**, with **ON** blinking. In this case, press **▲** or **▼** button to adjust timer on and then press **Timer** to confirm. If **Mode** button is pressed before pressing **Timer** button to confirm, timer mode will be switched to timer off setting mode. In this case, LCD displays **xx. Hour**, with **OFF** blinking. In this case, press **▲** or **▼** button to adjust timer off and then press **Timer** to confirm. When LCD displays :"**xx. Hour on off**"; **xx. Hour** means time of timer on, but time of timer off won't be displayed.

Timer off setting: Under **on-state** of the unit without timer setting, if **Timer** button is pressed, LCD will display **xx. Hour**, with **OFF** blinking. In this case, press **▲** or **▼** button to adjust timer on and then press **Timer** to confirm. If **Mode** button is pressed before pressing **Timer** button to confirm, timer

mode will be switched to timer on setting mode. In this case, LCD displays **xx. Hour**, with **ON** blinking. In this case, press **▲** or **▼** button to adjust timer on and then press **Timer** button to confirm. When LCD displays **xx. Hour On Off**, **xx. Hour** means time of timer off, but time of timer on won't be displayed.

Cancel timer: After setting of timer, if **Timer** button is pressed, LCD won't display **xx. Hour** so that timer setting is canceled.

Timer off setting under **on-state** of the unit is shown as Fig.12.

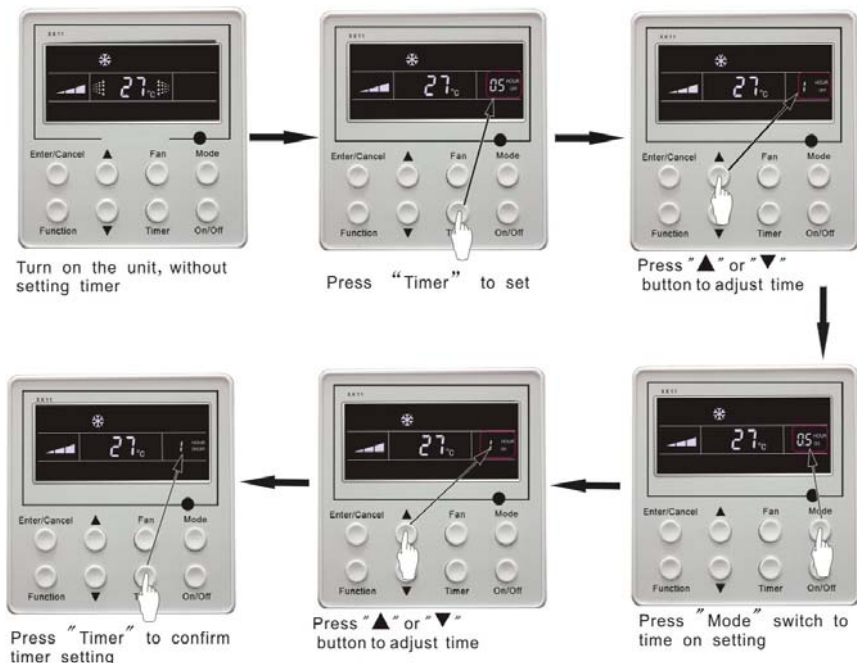


Fig.12 Timer setting under on state of the unit

Timer range: 0.5-24hr. Every press of **▲** or **▼** button will make setting time increased or decreased by 0.5hr. If press either of them continuously, setting time will automatically increase/decrease by 0.5hr every 0.5s.

Note:

1. If both timer on and timer off are set in unit on interface, the wired controller only display time of time off. If both of them are set in unit off-state, only time of timer on is displayed.
2. Timer on in unit on-state is timed from the time of unit off and timer off in unit off-state is timed from the time of unit on.

4.7 Air Exchange Setting *

Turn on air Exchange function:

Under on-state of the unit, press **Function** button to go to the this function setting (**Air** mark blinks). **AIR 1** displayed at the ambient temperature-displayed location (888) is defaulted (the last type of **AIR** will be displayed after adjustment). Press **▲** or **▼** button to adjust air type. Press **Enter/Cancel** button to turn on/off air function. After turning on this function, the air mark shows.

There are 10 types of **AIR**, but only 1-2 types are for remote control. Refer to the following details:

- 1——The unit continuously runs for 60min, and fresh air valve runs for 6 min.
- 2——The unit continuously runs for 60min, and fresh air valve runs for 12 min.
- 3——The unit continuously runs for 60min, and fresh air valve runs for 18 min.
- 4——The unit continuously runs for 60min, and fresh air valve runs for 24 min.
- 5——The unit continuously runs for 60min, and fresh air valve runs for 30 min.
- 6——The unit continuously runs for 60min, and fresh air valve runs for 36 min.
- 7——The unit continuously runs for 60min, and fresh air valve runs for 42 min.
- 8——The unit continuously runs for 60min, and fresh air valve runs for 48 min.
- 9——The unit continuously runs for 60min, and fresh air valve runs for 54 min.
- 10——The unit continuously runs for 60min, and fresh air valve always runs.

Turn off air Exchange function: During Air function, press **Function** button to go to the Air function. In this case, **air** mark is blinking, and then press **Enter/cancel** button to turn off this function. Air mark will subsequently disappear.

Air Exchange setting is shown as in Fig.13:

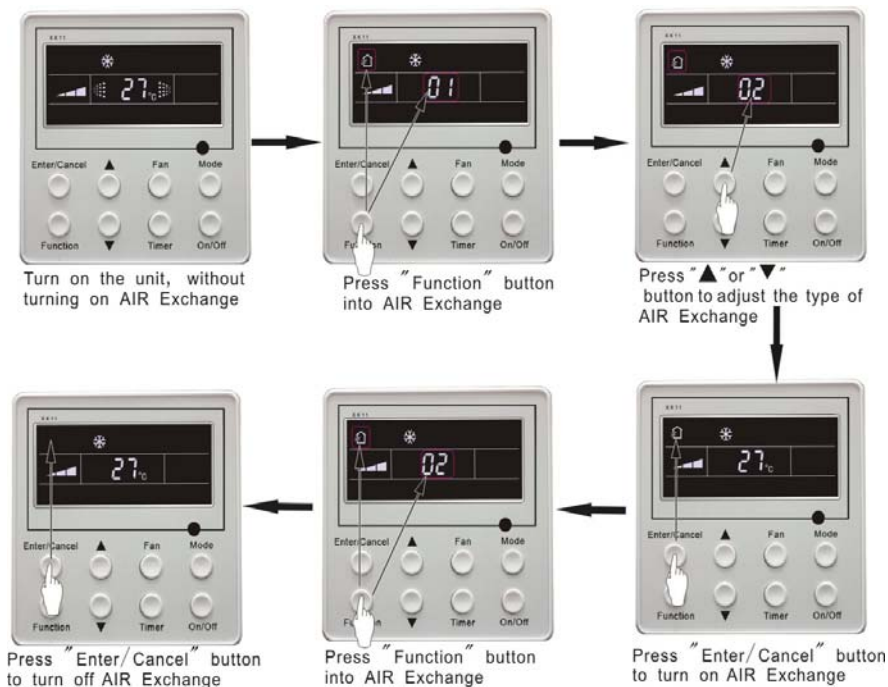


Fig.13 Air exchange device

Note: In air exchange mode, press **Function** button or there is not any operation within 5s after the last button operation, the system will be quit from **air exchange** setting and current energy-saving data won't be memorized.

4.8 Sleep Setting

Sleep on: Press **Function** button under on-state of the unit into sleep function and then press **Enter/cancel** button to turn on sleeping function.

Sleep off: During sleep on-state, press **Function** button to go to the sleep function and then press **Enter/cancel** button to turn off this function.

Sleep setting is shown as Fig.14:

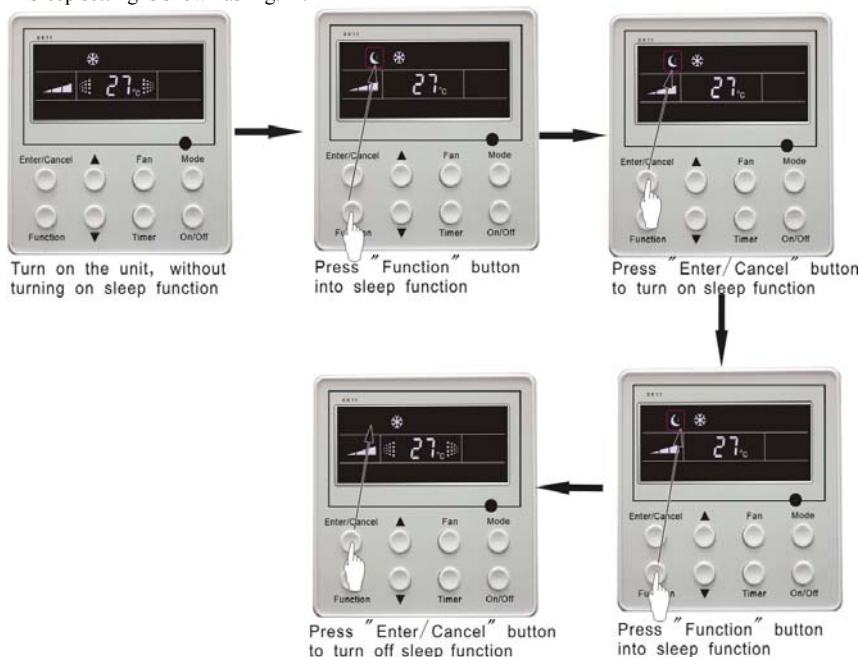


Fig.14 Sleep setting

Sleep setting is clear after power failure and then power recovery. There is not sleep function in fan and auto mode.

Note: In cooling and dry mode, if the unit with sleep function has run for 1 hour, the preset temperature will be increased by 1°C and 1°C in another 1 hour. After that, the unit will run at this temperature. In heating mode, if the unit with sleep function has run for 1 hour, the preset temperature will be decreased by 1°C and 1°C in another 1 hour. After that, the unit will run at this temperature.

4.9 Turbo Function Setting

TURBO function: The unit at high fan speed can realize quick cooling or heating so that room temperature can quickly approach setting temperature.

In cooling or heating mode, press **Function** button till the unit enters **TURBO** function and then press **Enter/cancel** button to turn on **TURBO** function.

During **TURBO** function, press **Function** button till the unit enters **TURBO** function and then press **Enter/cancel** button to cancel **TURBO** function.

TURBO function setting is shown in Fig.15 :

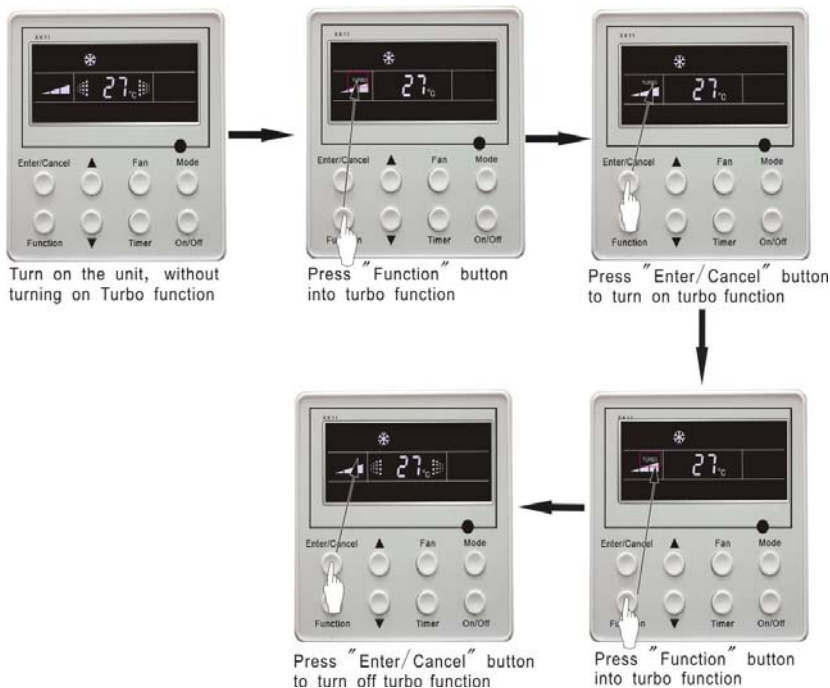


Fig.15 Turbo Function Setting

Note:

1. **TURBO** function will be turned off after power failure and then recovery. In dry, fan and auto mode, **TURBO** function can not be set and **TURBO** mark won't be displayed.
2. **TURBO** function will be automatically canceled after setting of quiet function.

4.10 SAVE Function Setting

Energy Saving Function: Energy saving can make the air conditioner runs in a smaller temperature range by setting lower limited value of setting temperature in cooling or dry mode and upper limited value in heating mode.

Energy Saving Setting for Cooling

Under on-state and in cooling or dry mode of the unit, press **Function** button into energy saving function, with **SAVE** blinking .Press ▲ or ▼ button to adjust lower limited value of setting temperature in cooling mode. After that press **Enter/Cancel** button to turn on energy saving function for cooling.

Energy Saving Setting for Heating

Under on state and in heating mode of the unit, press **Function** button into energy saving function, with **SAVE** blinking. Press **Mode** button into energy saving function for heating and then press **▲** or **▼** button to adjust upper limited value of setting temperature in heating mode. After that, press **Enter/Cancel** button to turn on energy saving function for heating.

After energy saving function is turned on, press **Function** button into energy saving function and press **Enter/cancel** to cancel this function.

The energy saving setting is shown in the Fig.16.

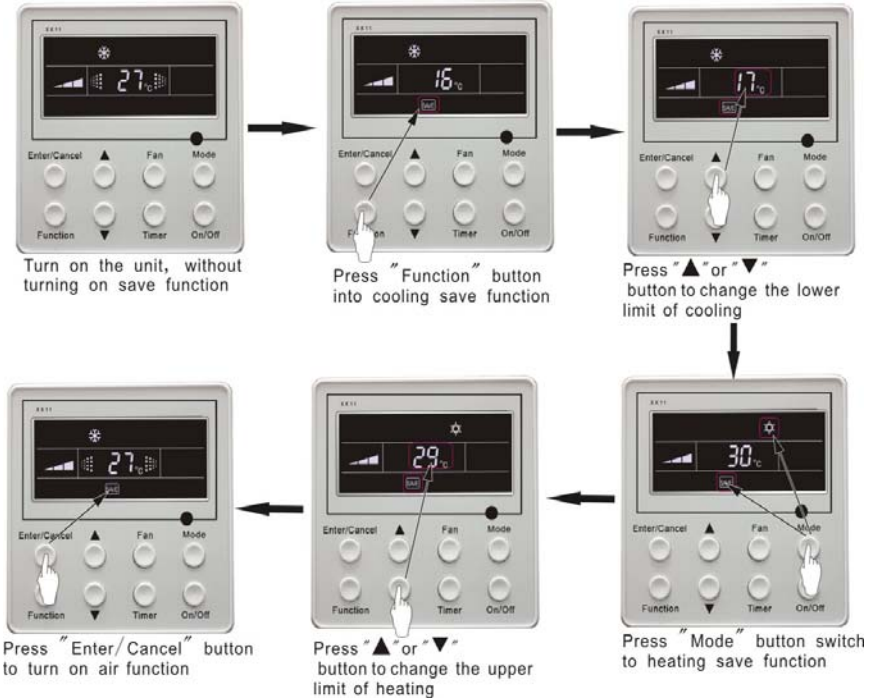


Fig.16 Energy Saving Setting

Note:

1. In Auto running mode with save function on, the unit will be forcibly quit Auto running Mode and change to current operation mode, After setting of save, sleep function will be canceled.
2. In save mode, if **Function** button is pressed or there is not any operation within 5s after the last button operation, the system will be quit from save function setting and current data won't be memorized.
3. After power failure and then recovery, save function setting will be memorized.
4. The lower limited value in cooling mode is 16°C and the upper limited value in heating mode is 30°C.
5. After save setting, if the setting temperature is out of the range in the mode, the limited value will prevail.

4.11 E-HEATER Setting ☆

E-HEATER: In the heating mode, E-heater is allowed to be turned on for improvement of efficiency. If heating mode is turned on by button operation, auxiliary electric heating function will be automatically turned on.

Press **Function** button in heating mode to go to the auxiliary electric heating function, the **E-HEATER** blinking, and press **Enter/cancel** button to turn on this function. In this case, the **E-HEATER** will be displayed, which means E-heater is allowed to be turned on.

If auxiliary electric heating function is on, press **Function** button to confirm or press **Enter/cancel** button to cancel. In this case, **E-HEATER** won't be displayed, which means E-heater is prohibited to be turned on.

The setting of this function is shown as Fig.17 below:

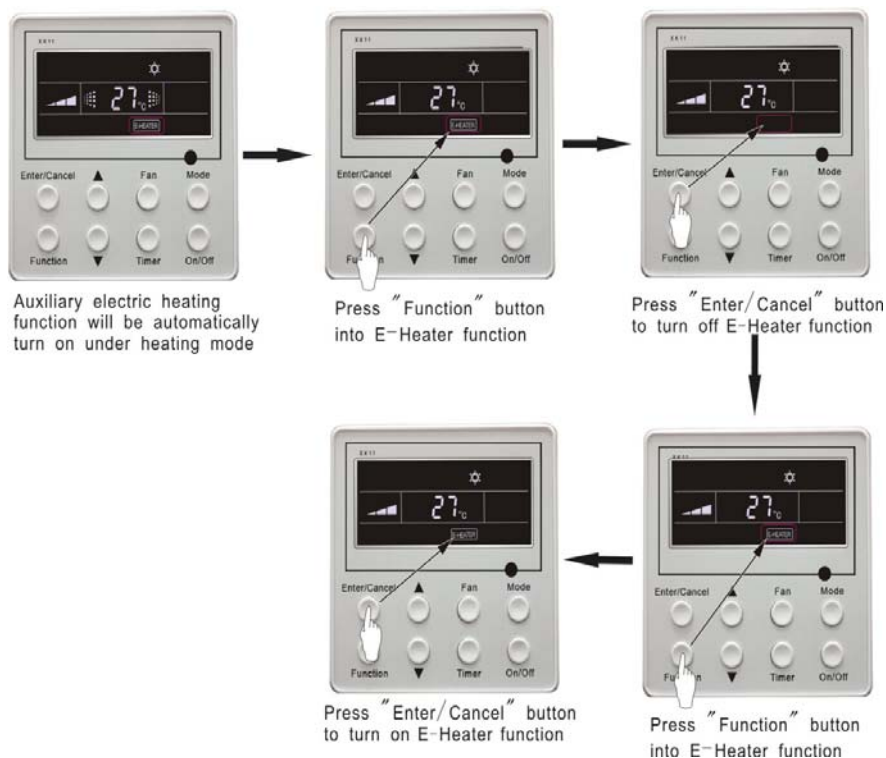


Fig.17 Auxiliary Electric Heating Function Setting

Note:

E-HEATER can not be set in cooling, dry and fan mode, **E-HEATER** mark won't be displayed. The setting is shown in Fig.17.

4.12 Blow Function Setting

BLOW function: After the unit is turned off, water in evaporator of indoor unit will be automatically evaporated to avoid mildew.

In cooling and dry mode, press **Function** button till the unit enters **BLOW** function, with **BLOW** blinking, and then press **Enter/cancel** button to turn on this function.

In BLOW mode, press **Function** button till the unit enters **BLOW** function and then press **Enter/cancel** button to cancel this function.

BLOW function setting is shown in Fig.18

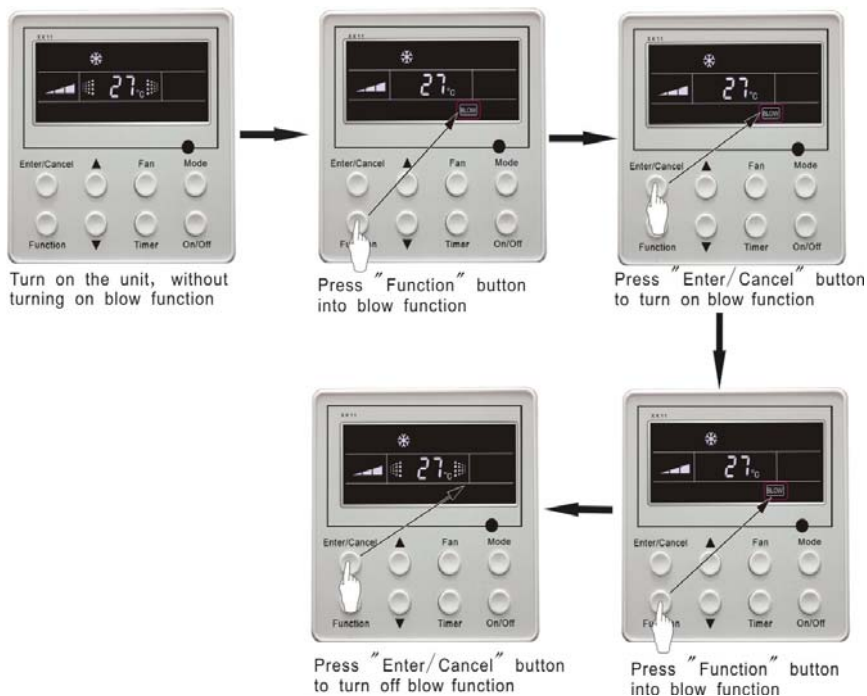


Fig.18 Blow function setting

Note:

1. After setting BLOW function, turn off the unit by pressing **On/Off** button on remote controller, indoor fan will run at low fan speed for 10 min. (**BLOW** shows). Meanwhile, if **BLOW** function is canceled indoor fan will be turned off directly.
2. There is not BLOW function in fan or heating mode.

4.13 Quiet Function Setting

Quiet function consists of two kinds: QUIET and AUTO QUIET.

Press **Function** button till the unit enters quiet function setting state, **Quiet or Auto Quiet** mark blinks. In this case, press **▲** or **▼** button to switch between Quiet and Auto Quiet and then press **Enter/cancel** button to turn on this function.

In quiet mode, press **Function** button till the unit enters quiet function. In this case, **Quiet or Auto Quiet** icon blinks and then press **Enter/cancel** button to cancel this function.

Quiet function setting is shown in Fig.19

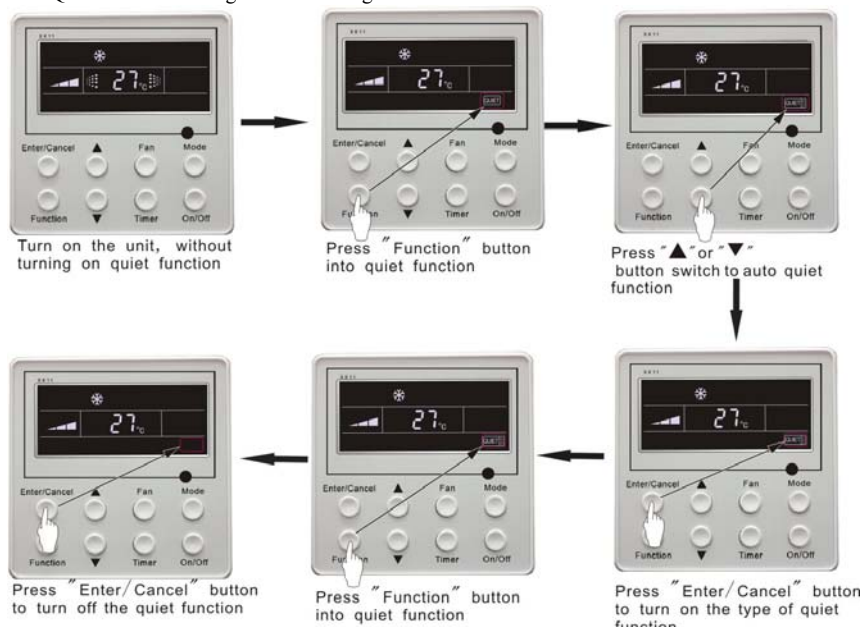


Fig.19 Quiet function setting

Note:

1. During quiet function, fan speed is un-adjustable.
2. When turning on auto quiet function, the unit will enter quiet running state according to temperature difference between room temperature and setting temperature. In this case, fan speed is adjustable. If temperature difference between room temperature and setting temperature $\geq 4^{\circ}\text{C}$, fan will keep its current speed; if $2^{\circ}\text{C} \leq \text{temperature difference} \leq 3^{\circ}\text{C}$, fan speed will be reduced by one grade, but if it is at minimum grade, it is un-adjustable; if temperature difference $\leq 1^{\circ}\text{C}$, fan speed will be at minimum grade
3. In auto quiet mode, fan speed can not be raised but reduced. If high fan speed is manually adjusted, auto quiet mode will quit.
4. There is not auto quiet function in fan or dry mode. Quiet off is default after power failure and then power recovery.
5. If quiet function is set, turbo function will be canceled.

4.14 Field Functions

Under off-state of the unit, press **Function** and **Timer** buttons continuously for 5s to go to the debugging menu. Press **Mode** button to adjust the setting items and ▲ or ▼ button to set the actual value.

4.14.1 Ambient Temperature Sensor Setting

In field setting mode, press **Mode** button to adjust the temperature displayed location displaying 00, and press ▲ or ▼ button to adjust setting state at timer displayed location. There are 3 types for selection:

- (1) Indoor ambient temperature is that at return air inlet (01 is displayed at timer displayed location)
- (2) Indoor ambient temperature is that at the place of screen (02 is displayed at timer displayed location)
- (3) Return air inlet temperature sensor shall be selected for cooling, dry and fan modes and wired controller temperature sensor (03 is displayed at timer displayed location) shall be selected for heating and auto modes.

4.14.2 Three Grades of Speed for Indoor Fan

In field setting mode, press **Mode** button to adjust the temperature displayed location displaying 01 and press ▲ or ▼ button to adjust setting state at timer displayed location. There are 2 types for selection:


- (1) 3 low grades (LCD displays 01)
- (2) 3 high grades (LCD displays 02)

Three low grades indicate high, medium and low grades and 3 high grades indicate super-high, high and medium grades.

Press **Enter/Cancel** button to save the setting and quit after setting. If there is not any operation within 20s after the system responds to the last button operation in this interface, the system will quit this menu and display normal off-state; meanwhile, current setting won't be saved.

4.15 Other Functions

4.15.1 Lock Function

Upon startup of the unit without malfunction or under off-state of the unit, press ▲ and ▼ buttons at the same time for 5s till the wired controller enters lock state. In this case, LCD displays: . After that, repress these two buttons at the same time for 5s to quit lock state.

Under lock state, any other buttons won't give any response to the press.

4.15.2 Memory Function

Memory switchover: Under off-state of the unit, press **Mode** and ▲ buttons at the same time for 5s to switch memory modes. During setting memory mode, **Memory** will be displayed. If this function is not set, the unit will be under off state after power failure and then power recovery.

Memory recovery: If memory mode has been set for wired controller, the wired controller after power failure will resume its original running state upon power recovery.

Note:

It will take about 5 seconds to save all the information, therefore, please do not cut down the power at this time, or it may fail.

4.15.3 Enquiry of Outdoor Ambient Temperature

Under on or off state of the unit, press **Enter/Cancel** button for 5s, outdoor ambient temperature will be displayed at temperature displaying location after a sound of click. This enquiry state will quit by pressing any button. If there is not any operation for 20s, it will automatically quit.

Note:

1. This function will be shielded after energization of 12hr for some models of the units without outdoor ambient sensors. Please refer to Instruction for details.
2. If malfunction of outdoor ambient sensor occurs, this function will be shielded in 12hr.

4.15.4 Selection of Centigrade and Fahrenheit

Under off state of the unit, press Mode and ▼ at the same time for 5s, the displayer panel will switch between Centigrade and Fahrenheit.

4.15.5 Master/Slave Wired Controller Setting


Under the off status of the unit, press “Enter/cancel” and “Mode” at the same time for 5 seconds to go to the master/slave wired controller setting interface, and then press ▲ or ▼ to make the adjustment. In this case, only in the temperature display is there numbers displayed, 01 for the master wired controller and 02 for the slave wired controller.


After that, press “Enter/cancel” to save the setting and quit this interface. If there is not any operation in 20 seconds on this interface after the last button press, the system will quit automatically to the normal off status without saving the current setting.

Note: If there is only one wired controller, it only can be set as the master; otherwise the unit won't run normally.


4.15.6 Gate-control Display Function ☆

If there is gate control system, the unit can run after plugging in card and stop after pulling out the card.

If memory function is on, the unit after plugging out of card and then plugging in will run according to the memory. If the card is not plugged in (or poor plugging), the mark  will show and the unit will be turned off.

If memory function is off, the unit after plugging out the out will be turned off and the mark  will show. If re-plugging in the card, the mark will disappear and the unit enter will enter off state.

Note:

1. During long-distance monitoring, the unit on /off cannot be controlled by the card, but the mark  will also show after plugging in the card.
2. The unit cannot be controlled by button operation after plugging out the card.

V Error Display

If there is malfunction during running of the system, the wired controller will display error code at temperature–displayed location. Once there is more than one malfunction, error codes will be displayed circularly. If there are multiple circuit systems, the system number of failed system will be displayed before the colon (not for single system).

If malfunction occurs, turn off the unit and contact nearest dealer for help.

As shown in Fig.20, it means high pressure protection of system 2 under unit on.



Fig.20

Table 3

Error code meaning:

Error code	Malfunction
E1	High pressure protection of compressor
E2	Indoor anti-freezing protection
E3	Low pressure protection of compressor
E4	High discharge temperature protection of compressor
E5	Compressor overload protection
E6	Communication malfunction
E9	Water overflow protection
F0	Indoor unit ambient sensor malfunction at air return opening
F1	Evaporator sensor malfunction
F2	Condenser sensor malfunction
F3	Outdoor unit ambient temperature sensor malfunction
F4	Discharge temperature sensor malfunction
F5	Ambient sensor malfunction on Displayer (or LED board)

Table 4 The LED Indicator Display on the Main Board of Outdoor Unit (09K/12K)
This table is applicable to the electric control box of the 09K and 12K C Series DC inverter air conditioners. Some of the items are not malfunction; they mean the normal running status

Running Status	Outdoor unit Yellow Lamp	Outdoor unit Red Lamp	Outdoor unit Green Lamp	wired controller Display
Compressor started	Flash once			
Defrosting	Flash twice			Displayed
Anti-freezing protection	Flash 3 times			E2
IPM protection	Flash 4 times			E5
Over-current protection	Flash 5 times			E5
Heat exchanger overload protection	Flash 6 times			/
Discharge protection	Flash 7 times			E4
Compressor overload protection	Flash 8 times			E5
Power protection	Flash 9 times			E5
Module overheating protection	Flash 10 times			E5
EEPROM reading error	Flash 11 times			E5
Low voltage protection	Flash 12 times			E5
High voltage protection	Flash 13 times			E5
PFC over-current protection	Flash 14 times			E5
Unmatched indoor and outdoor units	Flash 16 times			/
Limited frequency(current)		Flash once		/
Limited frequency (discharge)		Flash twice		/
Limited frequency (overload)		Flash 3 times		/
Reduced frequency (anti-freezing)		Flash 4 times		/
Outdoor ambient temperature sensor error		Flash 6 times		F3
Outdoor pipe temperature sensor error		Flash 5 times		F2
Outdoor discharge temperature sensor error		Flash 7 times		F4
Up to the startup temperature		Flash 8 times		/
Limited frequency (module temperature)		Flash 11 times		/
Limited frequency (power)		Flash 13 times		/
Communication normal			Flash continuously	/
Communication error			Black out	E6
Indoor ambient temperature sensor error				F0
Indoor pipe temperature sensor error				F1

Table 5 Definition of Malfunction Codes of DC Inverter General Outdoor Unit (V1.6)

This table is applicable to the electric control box of the other models of C-Series DC inverter air conditioners.

Malfunction Item	Outdoor unit display of dual 8 numeral tube	Indoor Unit Display
DC busbar over voltage protection	PH	E5
Overheat protection of radiator	P8	E5
Current sensor malfunction	Pc	E5
Carbon fin sensor malfunction	P7	E5
Compressor current protection	P5	E5
Low voltage protection	PL	E5
Compressor startup failure	Lc	E5
PFC abnormality	Hc	E5
Compressor clogged	LE	E5
Drive resetting	P0	E5
The compressor motor in loss of synchronization	H7	E5
Missing phase, Speed discard	Ld	E5
Malfunction from driving part to main-control communication	P6	E5
IPM module protection	H5	E5
Compressor over speed	LF	E5
Sensor connection protection	Pd	E5
Temperature drift protection	PE	E5
AC contactor protection	P9	E5
High-pressure protection	E1	E1
Low-pressure protection	E3	E3
Exhaust protection	E4	E4
Compressor overload protection	H3	E5
Communication malfunction (among indoor unit, outdoor unit and wired controller)	E6	E6
Outdoor ambient temperature sensor malfunction	F3	F3
Coil pipe intermediate temperature sensor malfunction of outdoor unit	F2	F2
Exhaust temperature sensor malfunction	F4	F4
Defrosting (non-malfunction)	08	defrost
Oil return (non-malfunction)	09	no display
Mismatch of indoor unit model	LP	no display
AC current protection (input side)	PA	E5
Driver board environment temperature sensor malfunction	PF	E5
AC input voltage abnormality *	PP	E5
Electrification loop malfunction *	PU	E5

VI Remote control operation procedure(standard fitting)

Names and Functions of Remote Controller Keys

Precautions:

- This remote controller is a general-purpose remote controller, which can be used in various types (functions) air conditioner. The keys not applicable to this air conditioner are not explained here.
- Ensure there is no obstacle between the remote controller and the signal receiving window of the air conditioner.
- The distance able to receive the signal of the remote controller can be as far as 8 meters.
- Never drop or throw at will the remote controller.
- Never let any liquid enter the remote controller. Avoid direct sunshine over the remote controller. Do not place the remote controller in an extremely hot place.

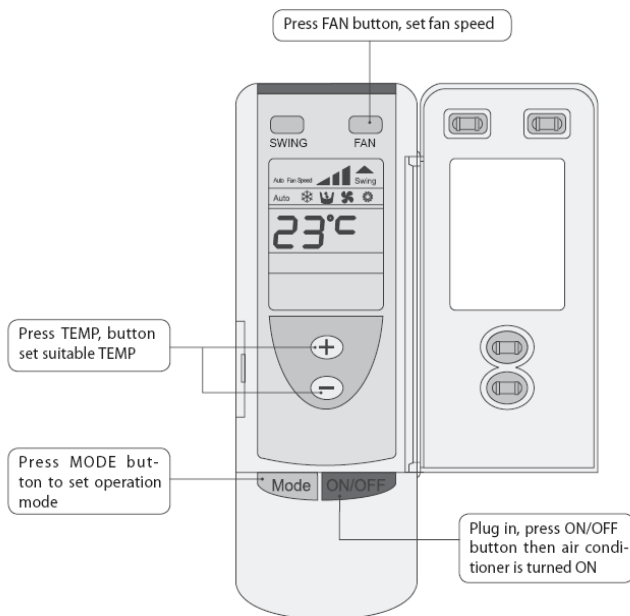


Fig.21

Cooling Mode Operation

Connect the unit to power supply. Press the “ON/OFF” key. Press the “MODE” key to select “Cooling” mode. Use the “Temperature” key to adjust the set temperature for the room. Refer to Fig.22.

Heating Mode Operation

Connect the unit to power supply. Press the “ON/OFF” key. Press the “MODE” key to select “Heating” mode. Use the “Temperature” key to adjust the set temperature for the room. Refer to Fig.23.

Under the heating mode, the unit has the functions of preventing cold air supply and supplying remaining heat. After the startup of the compressor, the indoor fan shall start operation when the evaporator temperature is larger or equals 35°C or after the unit has be started for 45 seconds, so as to avoid supply of cold air shortly after the unit is started. After the stop of the compressor, the indoor fan shall stop operation after supplying air for 120 seconds.

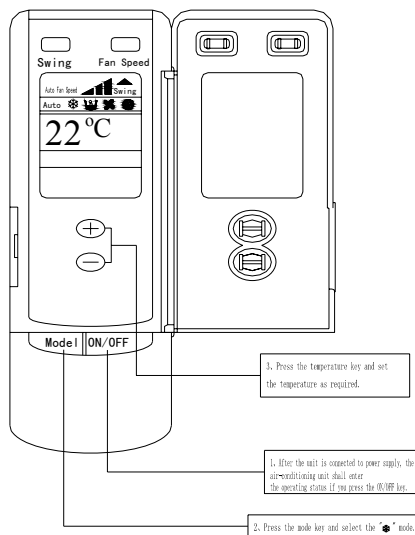


Fig.22 Cooling Mode Operation

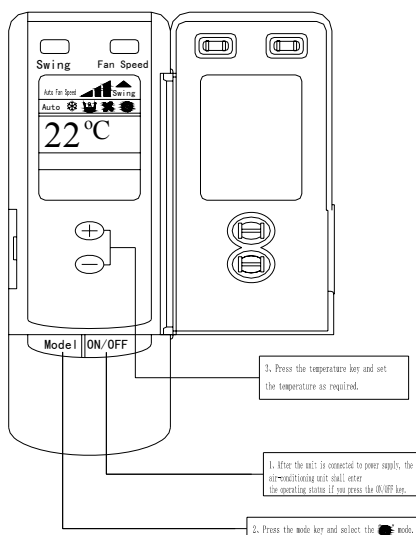


Fig.23 Heating Mode Operation

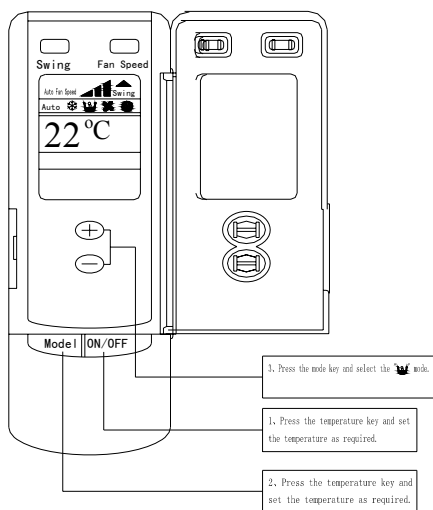


Fig.24 Dehumidifying Mode Operation

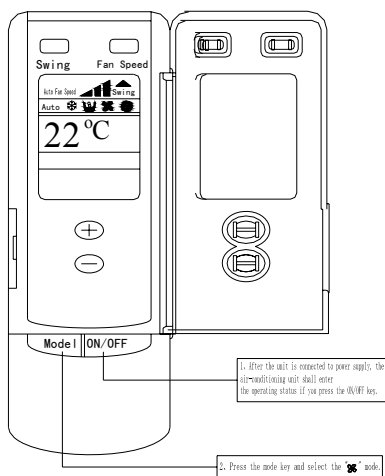



Fig.25 Fan Mode Operation

DRY (Dehumidifying) Mode Operations

Connect the unit to power supply. Press the “ON/OFF” key. Press the “MODE” key to select “DRY (Dehumidifying)” mode. Use the “Temperature” key to adjust the set temperature for the room. Refer to Fig.24.

Fan Mode Operation

Connect the unit to power supply. Press the “ON/OFF”key. Press the “MODE” key to select “FAN” mode. The unit shall operate under “FAN” mode. Press the “FAN” key to select from high, medium and low speed. Refer to Fig.25.

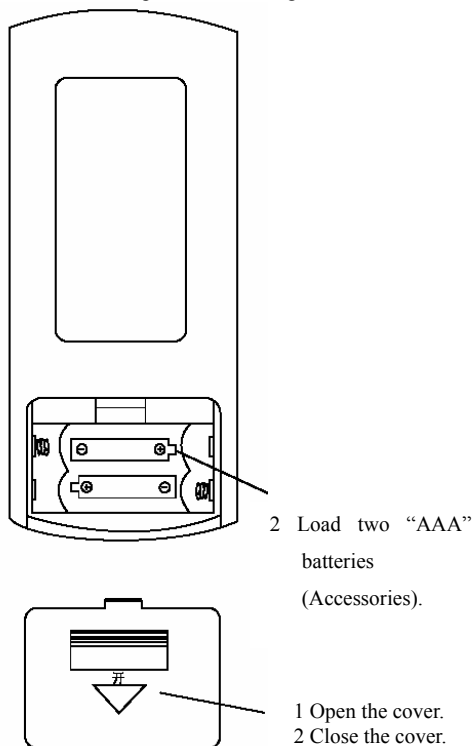

- After batteries are installed, the display shall display icons and letter codes of all functions.
- The life of batteries is about 1 year.
- Do not mix new and old batteries or mix different types of batteries in usage.
- If the remote controller shall not be used for a long time, take out the batteries to avoid liquid leakage and any subsequent failure.

Fig.26 Replacing Batteries for Remote

Loading Batteries Into Remote Controller

Refer to Fig.26 for the methods and steps of installing batteries into the remote controller.

VII Unit Function

7.1 Setting of Double Indoor Room Sensors

This series of ducted air-conditioning unit has two indoor room sensors. One is located at the air intake of the indoor unit and the other one is located inside the wire controller.

User can select one from the two indoor room sensors on the basis of the engineering requirement. (Refer to the section of wire controller instructions for detailed operation.)

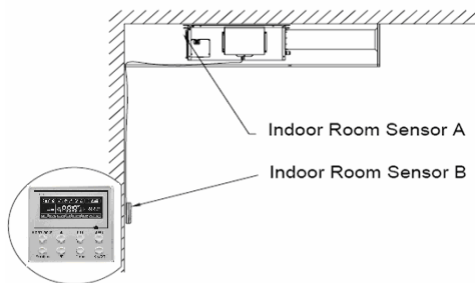


Fig.27

7.2 Checking of Outdoor Ambient Temperature

The outdoor ambient temperature can be checked on the wire controller for the convenience of users before going out. (Refer to the section of wire controller instructions for detailed operation.)

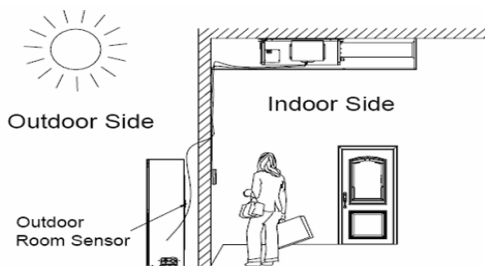


Fig.28

7.3 Fresh Air Control

11-levels control can be realized for the amount of fresh air taken in. The function not only facilitates the health of users, but also controls the electricity consumption loss because of taking in fresh air. This kind of control can be carried out through the wire controller. The function can set at any time, goes into effect at any time, and features very simple operation. (Refer to the section of wire controller instructions for detailed operation.)

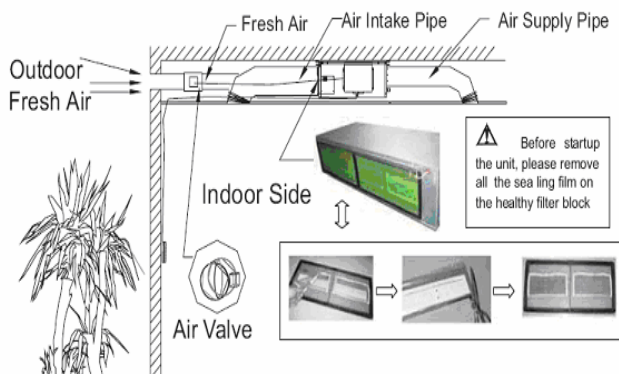


Fig.29

The head of delivery of the condensate drainage pump can reach 1.1m, so that the engineering installation is very convenient and prompt.

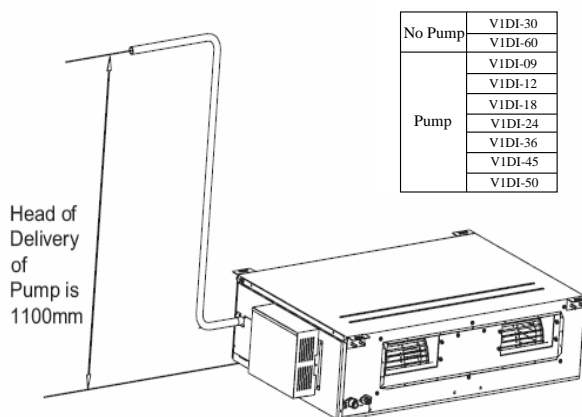


Fig.30

VIII Installation Instructions

8.1 Instructions of Unit Installation

8.1.1 Profile Dimensions of Indoor Unit

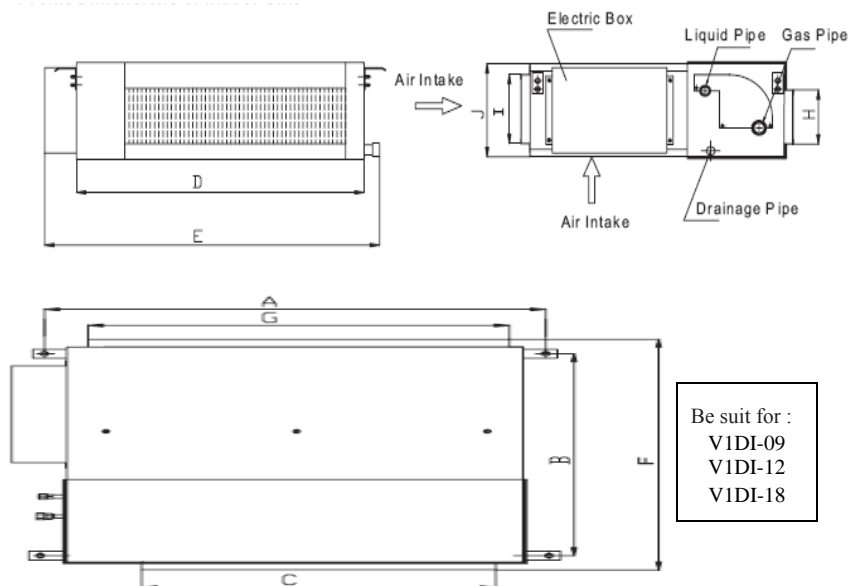


Fig.31

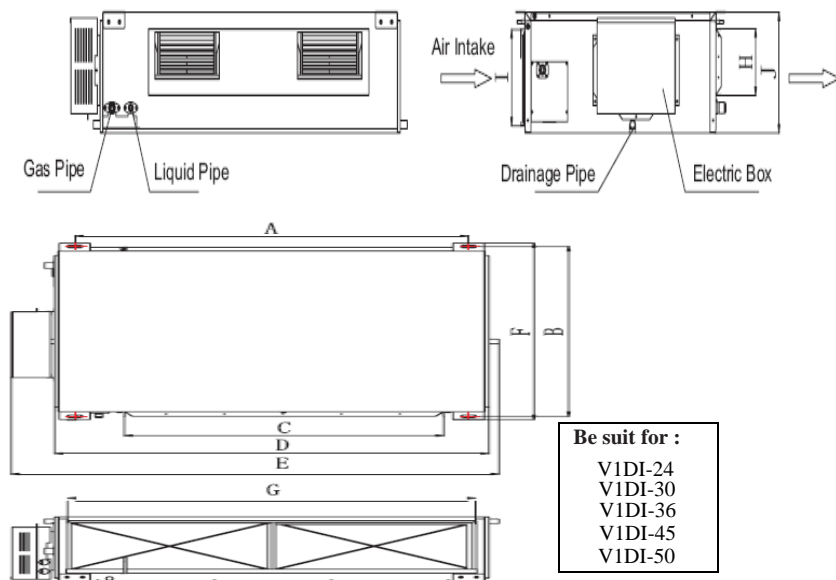


Fig.33

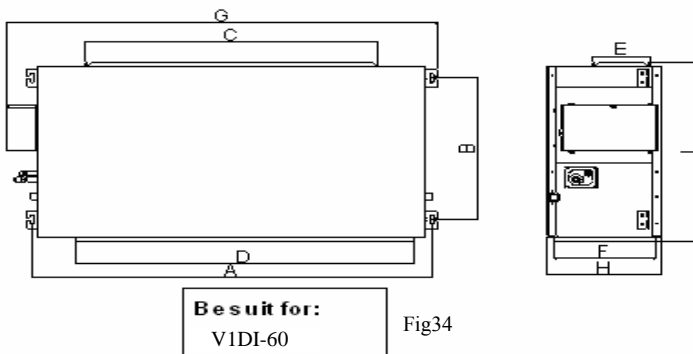


Fig34

Table 5

Item Model	A	B	C	D	E	F	G	H	I	J
VIDI-09	840	561	635	790	880	665	738	125	203	250
VIDI-12	932	430	738	892	980	721	738	125	203	266
VIDI-18	932	430	738	892	980	721	738	125	203	266
VIDI-24 VIDI-30	1101	515	820	1159	1270	530	1002	160	235	268
VIDI-36 VIDI-45	1011	748	820	1115	1226	775	979	160	231	290
VIDI-50	1015	788	820	1115	1226	815	979	160	261	330
VIDI-60	1353	632	992	1150	192	343	1463	389	799	--

Item Model	Connecting Pipe		Drainage pipe(Diameter×wall thickness)
	Liquid	Gas	
VIDI-09	1/4"	3/8"	φ20×1.2
VIDI-12	1/4"	3/8"	φ30×1.5
VIDI-18	1/4"	1/2"	φ30×1.5
VIDI-24 VIDI-30	3/8"	5/8"	φ20×1.2
VIDI-36 VIDI-45	3/8"	5/8"	φ20×1.2
VIDI-50	3/8"	5/8"	φ30×1.5
VIDI-60	3/8"	3/4"	φ30×1.5

Dimension Requirement of the Installation Space of Indoor Unit

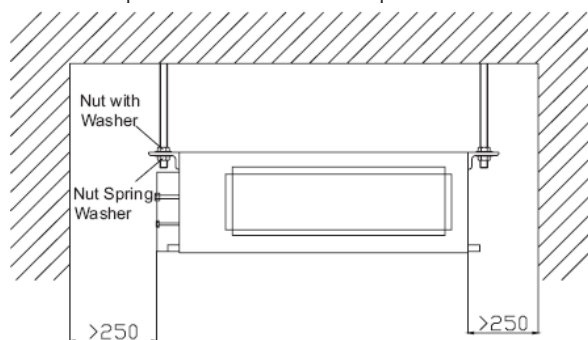


Fig.34

Be suit for :
V1DI-09
V1DI-12
V1DI-18


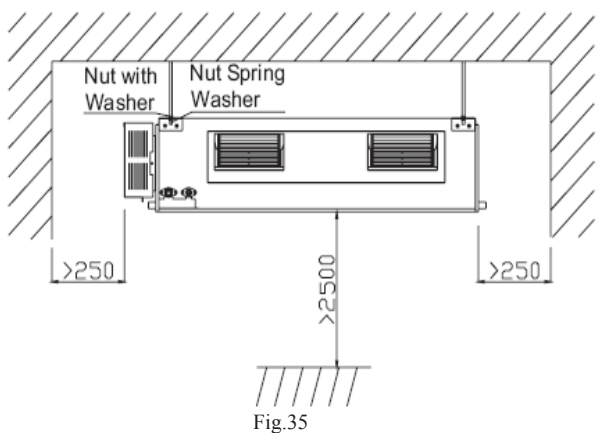


Fig.35

Be suit for :
V1DI-24
V1DI-30
V1DI-36
V1DI-45
V1DI-50

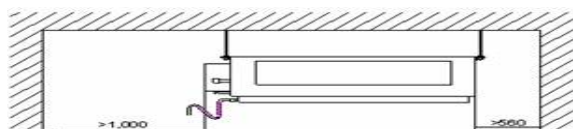

Be suit for :
V1DI-60


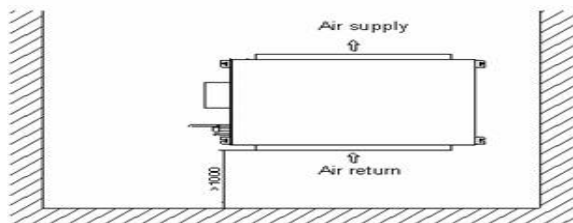


Fig.36



Warning: The height of installation for the indoor unit should be 2.5m above.

8.1.2 Profile Dimensions of Outdoor Unit

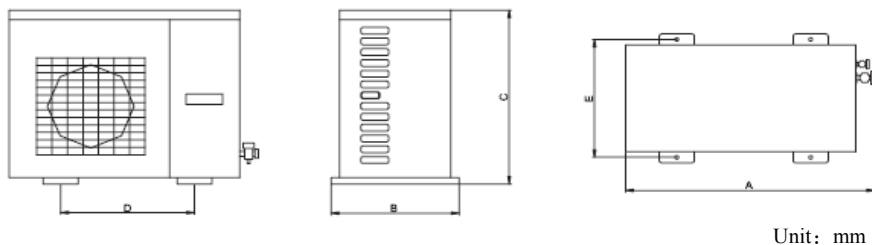

Unit: mm

Fig. 37

Table 6

Model \ Item	A	B	C	D	E
U1RS-09 U1RS-12	776	320	540	510	286
U1RS-18	955	396	700	560	360
U1RS-24 U1RS-30	980	427	790	610	395
U1RS-36 U1RT-36	1107	440	1100	631	400
U1RS-45 U1RT-45	1107	440	1100	631	400
U1RS-48 U1RT-50	1085	427	1365	620	395
U1RT-60	1085	427	1365	620	395

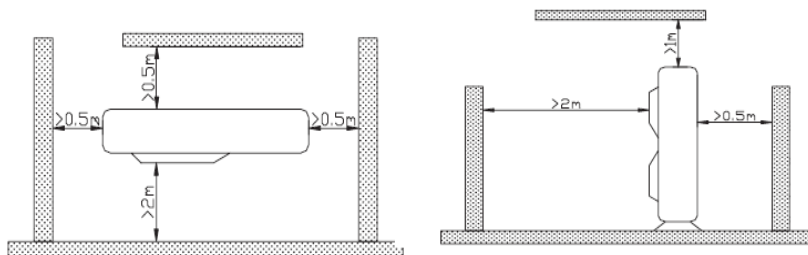


Fig.38

Unit Installation Instructions

Precautions on Installation of Outdoor Unit

To ensure the unit in proper function, selection of installation location must be in accordance with following principles:

- (1) Outdoor unit shall be installed so that the air discharged by outdoor unit will not return and that sufficient space for repair shall be provided around the machine.
- (2) The installation site must have good ventilation, so that the outdoor unit can take in and exhaust enough air. Ensure that there is no obstacle for the air intake and exhaust of the outdoor unit. If there is any obstacle blocking the air intake or exhaust, remove it.
- (3) Place of installation shall be strong enough to support the weight of outdoor unit, and it shall be able to insulate noise and prevent vibration. Ensure that the wind and noise from the unit will not affect your neighbors.
- (4) Avoid direct sunshine over the unit. It is better to set up a sun shield as the protection.

- (5) Place of installation must be able to drain the rainwater and defrosting water.
- (6) Place of installation must ensure the machine will not be buried under snow or subject to the influence of rubbish or oil fog.
- (7) The installation site must be at a place where the air exhaust outlet does not face strong wind.

8.2 Installation of Indoor Unit

8.2.1 Selection of Installation Site

- (1) Ensure the top hanging piece has strong strength to withstand the weight of the unit.
- (2) The drainage pipe has convenient flow of water.
- (3) There is no obstacle blocking the air intake and exhaust outlet, so as to ensure sound air circulation.
- (4) The installation spaces required by the drawing must be ensured, so as to provide enough space for the service and maintenance.
- (5) The installation site must be far away from heat source, leakage of inflammable gas or smoke.
- (6) The indoor unit is of ceiling mount (indoor unit is hidden inside the ceiling).
- (7) The indoor and outdoor units, the power cable and the connecting electrical lines must be at least 1 meter from any TV set or radio. This is to avoid image interference or noise of the TV set or radio. (Even if the distance is 1 meter, noise can also exist if there is strong electric wave.)

8.2.2 Installation of Indoor Unit

- (1) Insert a M10 expansion bolt into the hole. Drive a nail into the bolt. Refer to the profile dimensions drawing of the indoor unit for the distance between the holes. Refer to Fig. 39 for the installation of the expansion bolt.

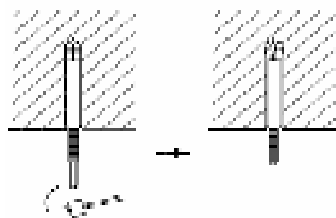


Fig.39

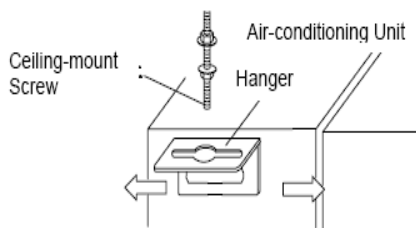


Fig.40

- (2) Install the hanger onto the indoor unit as Fig.40 shows.
- (3) Install the indoor unit at the ceiling as Fig.41 shows.

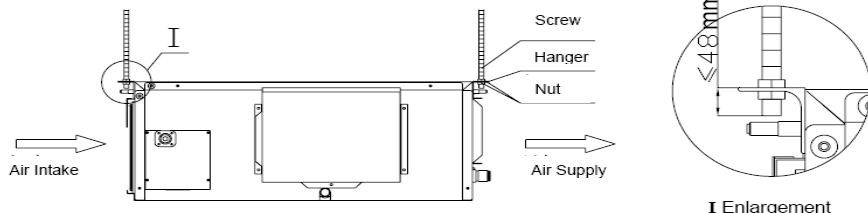


Fig.41



Precautions for unfavorable installation:

1. The preparation of all pipes (connecting pipes and drainage pipes) and cables (connecting lines of wire controller, indoor unit and outdoor unit) must be ready before the installation, so as to achieve

smooth installation.

2. Drill an opening on the ceiling. Maybe it is required to support the ceiling to ensure the evenness of it and avoid the vibration of it. Consult with the user or a construction company for details.

3. In case the strength of ceiling is not enough, use angle iron sections to set up a beam support. Place the unit at the beam and fix it.

8.2.3 Level Check of the Indoor Unit

After the indoor unit is installed, it is required to check the level of the whole unit. The unit must be placed horizontally, but the condensate pipe shall be installed obliquely, so as to facilitate the drainage of condensate.

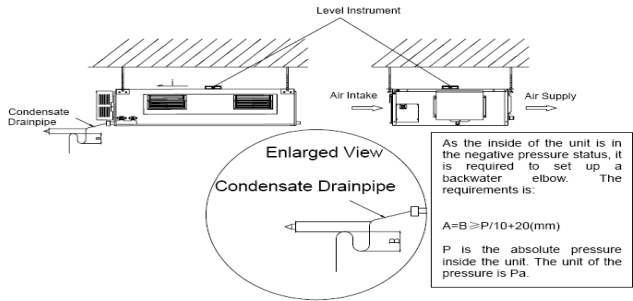


Fig.42

8.2.4 Installation of Rectangular Air Pipe

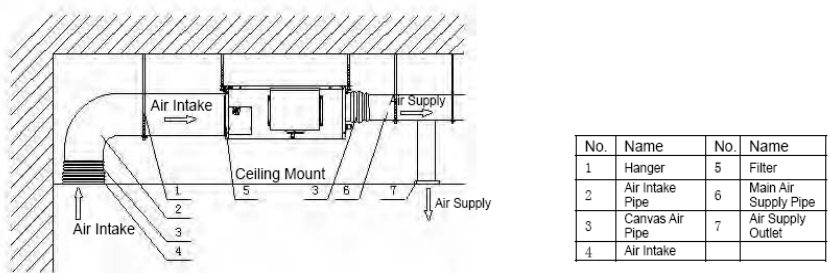


Fig.43



Cautions:

The air supply pipe, the air intake pipe and the fresh air pipe must be covered with a layer of thermal insulation, so as to avoid thermal leakage and condensation. Firstly apply liquid nail on the pipes, then attach the thermal insulation cotton with a layer of tinfoil. Use the liquid nail cover to fix it. Lastly use tinfoil adhesive tape to carefully seal the joints; other good thermal insulation materials can also be used.

The air supply pipes and the air intake pipes shall be fixed to the prefabricated boards of the ceiling by using iron supports. The joints of the pipes must be sealed by glue so as to avoid leakage.

The design and installation of air pipes must be in conformity with the relevant state engineering criteria.

he edge of the air intake pipe must be at least 150mm away from the wall. The air intake must be

covered with filter.

Silencing and shock absorption shall be considered in the design and installation of the air pipes. Additionally, the noise source must be far away from where people stay. The air intake shall not be located above the place where users stay (offices and rest places, etc.).

8.2.5 Installation of Drainage Pipeline

(1) The Drainage Pipeline shall be installed with an inclining angel of $5\sim 10^{\circ}$, so as to facilitate the drainage of condensate. The joints of the Drainage Pipeline must be covered by thermal insulation materials to avoid generation of exterior condensate. (As shown in Fig.44)

(2) A Drainage outlet is located at both the left and right sides of the indoor unit. After selecting one Drainage outlet, the other outlet shall be blocked by rubber plug. Bundle the blocked outlet with string to avoid leakage, and also use thermal insulation materials to wrap the blocked outlet.

(3) When shipped out from factory, both the Drainage outlets are blocked by rubber plugs.

(4) When connecting the drainage pipe with the unit, do not apply excessive force to the pipeline at the side of the unit. The fixing position of the pipeline shall be near the unit.

(5) Purchase general-purpose hard PVC pipe locally to be used as the drainage pipeline. When carrying out connection, place the end of the PVC pipeline into the drainage hole. Use flexible drainage tube and tighten it with thread loop. Never use adhesive to connect the drainage hole and the flexible drainage tube.

(6) When the laid drainage pipe is used for multiple units, the common pipe shall be about 100mm lower than the drainage outlet of each set of unit. A pipe with thicker wall shall be used for such purpose.

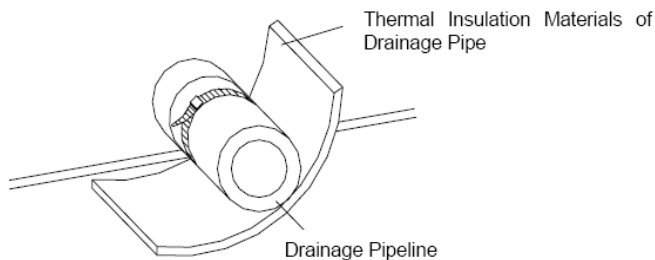


Fig.44 Thermal Insulation of Drainage Pipeline



Cautions: The joint of Drainage Pipeline must not have leakage.

8.2.6 Testing of Drainage System

(1) After the electrical installation is completed, carry out the testing of the drainage system.

(2) During the test, check if the water correctly flows through the pipelines. Carefully observe the joints to ensure that there is no leakage. If the unit is to be installed in a new house, carry out testing before decorating the ceiling.

8.2.7 Selection of Connecting Pipe

The refrigerant is R410A, GWP=2020 ODP=0

Table 7

<div> <div>Item</div> <div>Model</div> </div>	Size of Fitting Pipe(Inch)		Max. Pipe Length (m)	Max. Height Difference between Indoor Unit and Outdoor Unit m	Amount of Additional Refrigerant to be Filled (For Extra Length of Pipe)
	Liquid	Gas			
V1DI-09 U1RS-09	1/4"	3/8"	20	15	30g/m
V1DI-12 U1RS-12	1/4"	3/8"			
V1DI-18 U1RS-18	1/4"	1/2"			
V1DI-24 U1RS-24 V1DI-30 U1RS-30	3/8"	5/8"	30	15	60g/m
V1DI-36 U1RS-36 V1DI-36 U1RT-36	3/8"	5/8"			
V1DI-45 U1RS-45 V1DI-45 U1RT-45	3/8"	5/8"	50	30	60g/m
V1DI-50 U1RS-48 V1DI-50 U1RT-50	3/8"	5/8"			
V1DI-60 U1RT-60	3/8"	3/4"	50	30	60 g/m

Note :

1. The standard pipe length is 5m. When the length (L) of the connecting pipe is less than or equals 7m, there is no need to add refrigerant. If the connecting pipe is longer than 7m, it is required to add refrigerant. In the above table, the amounts of refrigerant to be added for the models are listed for each additional meter of pipe length.

2. The pipe wall thickness shall be 0.5-1.0 mm and the pipe wall shall be able to withstand the pressure of 6.0 MPa.

3. The longer the connecting pipe, the lower the cooling effect and the heating effect..

8.2.8 Connection of Pipeline

1. Align the flared end of the copper pipe with the center of the thread joint. Manually tighten the flared end nut.

2. Use torque spanner to tighten the flared end nut until the spanner clatters (Fig.45).

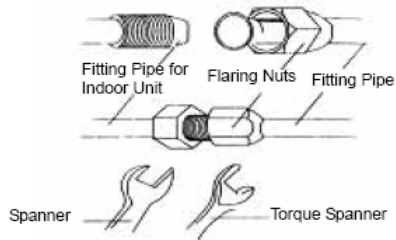


Fig.45

The following table describes the torques for tightening nuts of different pipe diameters.

Table 8

Pipe Diameter	Tightening Torque
1/4" (Inch)	15-30 (N·m)
3/8" (Inch)	35-40 (N·m)
5/8" (Inch)	60-65 (N·m)
1/2" (Inch)	45-50 (N·m)
3/4" (Inch)	70-75 (N·m)
7/8" (Inch)	80-85 (N·m)

3. The bending angle of the fitting pipe shall not be too large, and otherwise the pipe may break. Please use a bender when bending the fitting pipes.
4. Use sponge to wrap the connecting pipe and joint, Then use plastic tape to bundle the sponge.

8.2.9 Air Purging

The purpose of the air purging is to get rid of moisture and air in the system, otherwise moisture and air may cause ineffectiveness of the compressor which directly affects the cooling capacity.

1. Purging by Using Vacuum

- 1) Take out the nut cover of the inlet for refrigerant.
- 2) Connect the tube of the vacuum watch with the vacuum pump, having the low-pressure end linking to the inlet for refrigerant. As shown in figure on right.
- 3) Starting the vacuum pump, when the indicator turns to -1 bar, closing the low pressure handle and stopping vacuum. Keep for 15 minutes, ensuring the pressure of the vacuum watch remains.
- 4) Take out the valve cover of the gas valve together with the liquid valve.

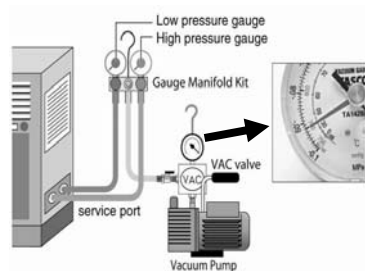


Fig.46

- 5) Loosing the cord of liquid valve until the pressure rise to 0 bar.
- 6) Dismantle the tube from the cover of the inlet for refrigerant then, tighten the cover.
- 7) Loose the valve cord of the gas valve as well as the liquid valve entirely.
- 8) Tighten the valve cover of the gas valve and liquid valve so as to check whether leakage occurred.

2. Gap Leakage Check

Check if it leaks or not by applying soapsuds on every joint and then inspect carefully. After the check, wipe them off completely.

Cover the indoor unit joint with pipe insulation and four plastic bands to prevent condensing at joints.

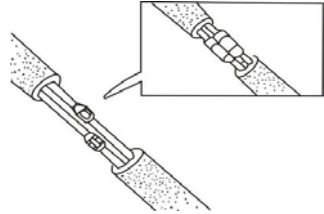


Fig.47

8.2.10 Liquid Pipe and Drain Pipe

If the outdoor unit is installed lower than the indoor unit (See Fig.48)

- 1) A drain pipe should be above ground and the end of the pipe does not dip into water. All pipes must be restrained to the wall by saddles.
- 2) Taping pipes must be done from bottom to top.
- 3) All pipes are bound together by tape and restrained to wall by saddles.

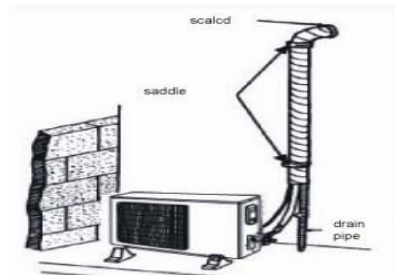


Fig.48

If the outdoor unit is installed higher than the indoor unit (See Fig.49)

- 1) Taping should be done from lower to the upper part.
- 2) All pipes are bound and taped together and also should be trapped to prevent water from returning to the room (See Fig.50)
- 3) Restraint all pipes to the wall with saddles.

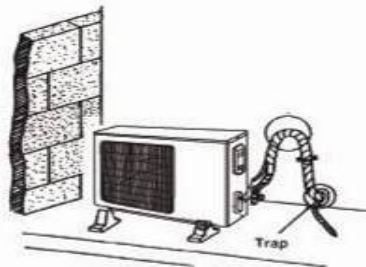


Fig 49

8.2.11 Installation of Protective Layer of Connecting Pipe

1. To avoid generation of condensate on the connecting pipe and avoid leakage, the big pipe and the small pipe of the connecting pipe must be covered by thermal insulation materials, be bundled by adhesive tape, and be isolated from air.

2. The joint connecting to the indoor unit must be wrapped by thermal insulation material. There shall be no gap between the connecting pipe joint and the wall of the indoor unit. Refer to Fig.50.

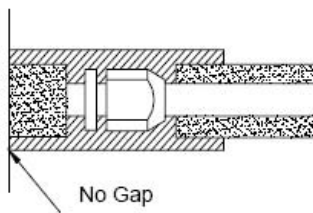


Fig.50

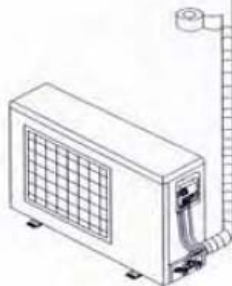


Fig.51



Cautions: After the pipes are wrapped by protective materials, never bend the pipes to form very small angle, and otherwise the pipes may crack or break.

3. Use adhesive tape to wrap the pipes:

(1) Use adhesive tape to bundle the connecting pipe and the cables together. To prevent condensate from overflowing out from the drainage pipe, separate the drainage pipe from the connecting pipe and the cables.

(2) Use thermal insulation tape to wrap the pipes from the bottom of the outdoor unit until the upper end of the pipe where the pipe enters the wall. When wrapping thermal insulation tape, the later circle of tape must cover half of the front circle of tape (Refer to Fig.51).

(3) Wrapped pipe must be fixed to wall using pipe clamps.



Cautions:

(1) Do not wrap the protective tape too tight, and otherwise the efficiency of thermal insulation may be decreased. Ensure that the condensate drainage flexible tube is separate from the bundled pipes.

(2) After the protective work is completed and the pipes are wrapped, use seal material to block the hole in the wall, so as to prevent rain and wind from entering the room.

8.2.12 Position and Method of Installing Wire Controller

1. One end of the control wire of the wire controller is connected with main board of electric box of indoor unit inside, it should be tightened by wire clamp, the other end should be connected with the wire controller (installation sketch map as shown in below). The control wire be used for the indoor unit and wire controller, which is special, the length is 8 meters, the material be adopted for the control wire should be metallic substance. The wire controller could not be disassembled and the control wire be used for the wire controller should not be changed by users optionally, the installation and maintenance should be carried out by the professional personnel.

2. First select an installation position. According to the size of the control wire of the wire controller, leave a recess or a embedded wire hole to bury the control wire.

3. If the control wire between the wire controller and the indoor unit is surface-mounted, use 1# metallic pipe and make matching recess in the wall (refer to Fig.52; If concealed installation is adopted, 1# metallic pipe can be used (Refer to Fig.53).

4. No matter if surface mounting or concealed mounting is selected, it is required to drill 2 holes (in the same level) which distance shall be the same as the distance (60mm) of installation holes in the

bottom plate of the wire controller. Then insert a wood plug into each hole. Fix the bottom plate of the wire controller to the wall by using the two holes. Plug the control wire onto the control panel.

Lastly install the panel of the wire controller.

Caution:

During the installation of the bottom plate of the wire controller, pay attention to the direction of the bottom plate. The plate’s side with two notches must be at the lower position, and otherwise the panel of the wire controller cannot be correctly installed.

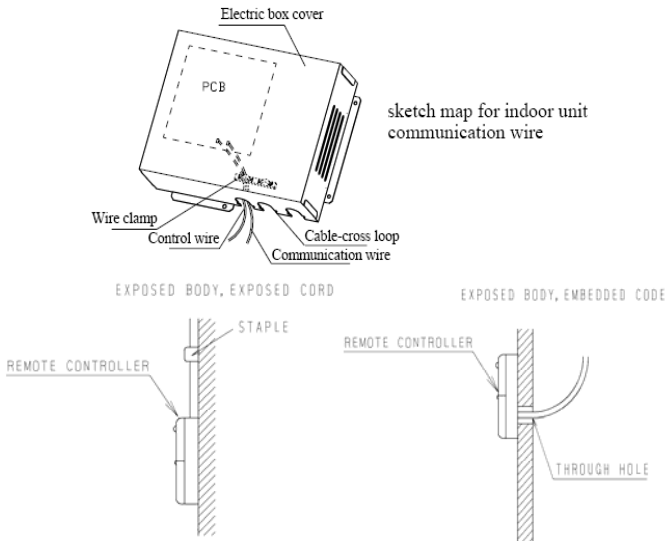


Fig.52 Surface mounting of Cable

Fig.53 Concealed mounting of Cable

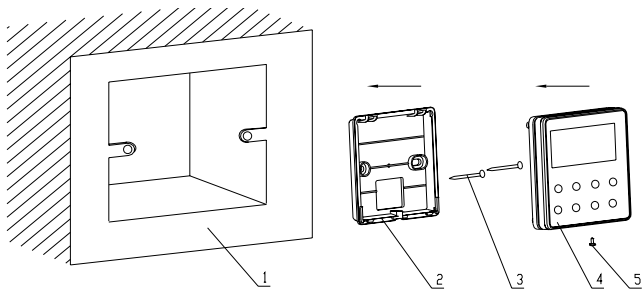


Fig.54Sketch for Installation of Wired Controller

Table 9

No.	Name
1	Wall Surface
2	Bottom Plate of Wire Controller
3	Screw M4X10
4	Panel of Wire Controller
5	Screw ST2.2X6.5

⚠️Cautions:

1. The communication distance between the main board and the wire controller is 8 meters.

2. The wire controller shall not be installed in a place where there is water drop or large amount of water vapor.

8.3 Electrical Installation



Cautions: Before installing the electrical equipment, please pay attention to the following matters which have been specially pointed out by our designers:

(1) Check to see if the power supply used conforms to the rated power supply specified on the nameplate.

(2) The capacity of the power supply must be large enough. The section area of fitting line in the room shall be larger than 2.5mm².

(3) The lines must be installed by professional personnel.

An electricity leakage protection switch and an air switch with gap between electrode heads larger than 3mm shall be installed in the fixed line.

1. Connection of signal wire

(1) Use wire stripper to strip the insulation layer (25mm long) from the end of the signal wire.

(2) Remove the screw at the terminal board of the air-conditioning unit.

(3) Use pliers to bend the end of the signal wire so that a loop matching the screw size is formed.

(4) Put the screw through the loop of the signal wire and fix the loop at the terminal board.

2. Connection of multiple twisted wires

(1) Use wire stripper to strip the insulation layer (10mm long) from the end of the multiple twisted wires.

(2) Remove the screw at the terminal board of the air-conditioning unit.

(3) Use crimping pliers to connect a terminal (matching the size of the screw) at the end of the multiple twisted wires.

(4) Put the screw through the terminal of the multiple twisted wires and fix the terminal at the terminal board.



Warning:

If the power supply flexible line or the signal line of the equipment is damaged, only use special flexible line to replace it.

1. Before connecting lines, read the voltages of the relevant parts on the nameplate. Then carry out line connection according to the schematic diagram.

2. The air-conditioning unit shall have special power supply line which shall be equipped with electricity leakage switch and air switch, so as to deal with overload conditions.

3. The air-conditioning unit must have grounding to avoid hazard owing to insulation failure.

4. All fitting lines must use crimp terminals or single wire. If multiple twisted wires are connected to terminal board, arc may arise.

5. All line connections must conform to the schematic diagram of lines. Wrong connection may cause abnormal operation or damage of the air-conditioning unit.

6. Do not let any cable contact the refrigerant pipe, the compressor and moving parts such as fan.

7. Do not change the internal line connections inside the air-conditioning unit. The manufacturer shall not be liable for any loss or abnormal operation arising from wrong line connections.

8.3.1 Power Cable Connection:

1. Air-conditioning unit with single-phase power supply

- (1) Remove the front-side panel of the outdoor unit.
- (2) Pass the cable through rubber ring.
- (3) Connect the power supply cable to the “L, N” terminals and the grounding screw on the metal electric box.

(4) Use cable fastener to bundle and fix the cable.

2. Air-conditioning unit with 3-phase power supply

(1) Remove the front-side panel of the outdoor unit.

(2) Attach rubber ring to the cable-cross hole of the outdoor unit.

(3) Pass the cable through rubber ring.

(4) Connect the power cable to the terminal marked “L1,L2,L3 & N”. Connect earth wire to the earthed terminal screw on the electric box.

(5) Use cable fastener to bundle and fix the cable.



Cautions:

Take great care when carrying out the following connections, so as to avoid malfunction of the air-conditioning unit because of electromagnetic interference.

(1) The signal line of the wire controller must be separated from the power line and the connecting line between the indoor unit and the outdoor unit.

(2) In case the unit is installed in a place vulnerable by electromagnetic interference, it is better to use shielded cable or double-twisted cable as the signal line of the wire controller.

8.3.2 Connection of Signal Line of Wire Controller

1. Open the cover of the electric box of the indoor unit.


2. Pull the signal cable of the wire controller through the rubber ring.

3. Plug the signal line of the wire controller onto the 4-bit pin socket at the circuit board of the indoor unit.

4. Use cable fastener to bundle and fix the signal cable of the wire controller.

8.3.3 Cable Connecting Diagram of Unit

The section area of cables selected by users must not be smaller than the specifications shown diagram. The signal wire between indoor and outdoor unit shall be installed in the shielded bushing
Schematic Diagram of Unit Line Connection:

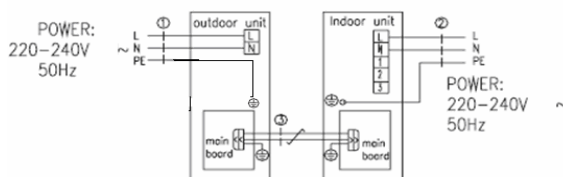

U1RS-09 + V1DI-09

U1RS-12 + V1DI-12

U1RS-18 + V1DI-18

U1RS-24 + V1DI-24


U1RS-30 + V1DI-30

U1RS-36 + V1DI-36

U1RS-45 + V1DI-45

U1RS-48 + V1DI-50

U1RS-09 + V1DI-09 1.Power cord 3×2.5 mm ² (H07RN-F) 3. Communication Cords	U1RS-12 + V1DI-12 2.Power cord 3×1.0 mm ² (H05VV-F)
U1RS-18 + V1DI-18 1.Power cord 3×4 mm ² (H07RN-F) 2.Power cord 3×1.0 mm ² (H05VV-F) 3. Communication Cords	
U1RS-24 + V1DI-24 1.Power cord 3×4 mm ² (H07RN-F) 2.Power cord 3×1.5 mm ² (H05VV-F) 3. Communication Cords	
U1RS-30 + V1DI-30 U1RS-45 + V1DI-45 1.Power cord 3×6 mm ² (H07RN-F) 3. Communication Cords	U1RS-36 + V1DI-36 U1RS-48 + V1DI-50 2.Power cord 3×1.5 mm ² (H05VV-F)

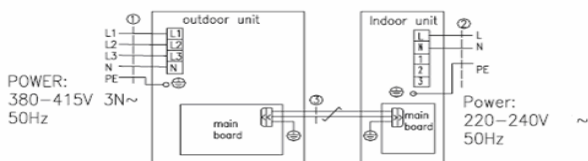

U1RT-36 + V1DI-36
U1RT-45 + V1DI-45
U1RT-50 + V1DI-50
U1RT-60 + V1DI-60

U1RT-36 + V1DI-36 U1RT-50 + V1DI-50 1.Power cord 5×4 mm ² (H07RN-F) 3. Communication Cords	U1RT-45 + V1DI-45 U1RT-60 + V1DI-60 2.Power cord 3×1.5 mm ² (H05VV-F)
--	--

The following table recommended by the model selection manual is about how to select the air switch and power cable.

Warning! :

The section area of cables selected by users must not be smaller than the specifications shown in the table below.

Table 10

Model	Power Supply	Capability of Air Switch(A) (Outdoor/Indoor)	Minimum Sectional Area Of Earth Wire (mm2) (Outdoor/Indoor)
U1RS-09	220-240V~ 50HZ	16/6	2.5/1.0
U1RS-12		16/6	2.5/1.0
U1RS-18		20/6	4.0/1.0
U1RS-24		20/10	4.0/1.5
U1RS-30		32/10	6.0/1.5
U1RS-36		32/10	6.0/1.5
U1RS-45		32/10	6.0/1.5
U1RS-48		32/10	6.0/1.5
U1RT-36	380-415V 3N~ 50Hz	20/10	4.0/1.5
U1RT-45		20/10	4.0/1.5
U1RT-50		20/10	4.0/1.5
U1RT-60		20/10	4.0/1.5

Table 11 Rated Parameters and Outline Dimensions of the Fuse

44

IX Troubleshooting and Maintenance

If your air-conditioning unit suffers from abnormal operation or failure, please first check the flowing points before repair:

Table 12

Failure	Possible Reasons
The unit cannot be started.	①The power supply is not connected. ②Electrical leakage of air-conditioning unit causes tripping of leakage switch. ③The operating keys are locked. ④The control loop has failure.
The unit operates for a while and then stops.	①There is obstacle in front of the condenser. ②The control loop is abnormal. ③Cooling operation is selected when the outdoor ambient temperature is above 43℃.
Poor cooling effect.	①The air filter is dirty or blocked. ②There is heat source or too many people inside the room. ③The door or window is open. ④There is obstacle at the air intake or outlet. ⑤The set temperature is too high thus cooling is hindered. ⑥There is refrigerant leakage. ⑦The performance of room temperature sensor becomes worse
Poor heating effect	①The air filter is dirty or blocked. ② The door or window is not firmly closed. ③The set room temperature is too low thus heating is hindered. ④There is refrigerant leakage. ⑤The outdoor ambient temperature is lower than -5℃. ⑥Control line is abnormal.

Note:

After carrying out the check of the above items and taking relevant measures to solve the problems found but the air-conditioning unit still does not function well, please stop the operation of the unit immediately and contact the local service agency designated by INVENTOR. Only ask professional serviceman to check and repair the unit.

Routine Maintenance

1. Cleaning the Air Filter(Operating by the professional)

Do not disassemble the air filter when cleaning it. Otherwise failure may be caused

If the air-conditioning unit is used in an environment with much dust, you should clean the air filter frequently (once every two weeks).



Cautions: You shall pay attention to the following matters when cleaning the air-conditioning unit.

- ① Cut off all power supply before contacting the line connecting equipment.
- ② Only clean the air-conditioning unit after the unit is shut off and the power supply is

disconnected. Otherwise electrical shock or injury may be caused.

③ Do not use water to clean the air-conditioning unit. Otherwise there may be electrical shock.

④ Take care when cleaning the air-conditioning unit. Use a steady stepping stand.

2. Maintenance at the Beginning of Operating Season

Check the air inlet and outlet of the indoor and outdoor units to confirm there is no blockage.

Check to see if the grounding wire is in good condition;(Operating by the professional)

Check to see if the line connection is in good condition;(Operating by the professional)

Check if there is any word displaying on the LCD of the wire controller after connecting the unit to power supply.

Note: If there is any abnormal condition, ask after sales to offer guidance.

3. Maintenance at the End of the Operational Season

When the weather is clear, operate the unit under fan mode for half a day, so as to dry the inside of the unit.

If not to use the air-conditioning unit for a long time, please cut off the power supply. Now the words on the LCD of the wire controller shall disappear.

Appendix

Air conditioner nominal working condition and working range:

Table 13

Test condition	Indoor side		Outdoor side	
	DB(°C)	WB(°C)	DB(°C)	WB(°C)
Nominal cooling	27	19	35	24
Nominal heating	20	--	7	6
Rated cooling	32	23	43	30
Low temp. cooling	21	15	18	--
Rated heating	27	--	24	18
Low temp. heating	20	--	-7	-8

Note:

1. The design of this unit conforms to the requirements of EN14511 standard.
2. The air volume is measured at the relevant standard external static pressure.
3. Cooling (heating) capacity stated above is measured under nominal working conditions corresponding to standard external static pressure. The parameters are subject to change with the improvement of products, in which case the values on nameplate shall prevail.



This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.



66129907235