



FREEZER

UPRIGHT FREEZER

- **USER'S MANUAL**
- **ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ**



MODEL:
KF2-860MS



CONTENTS

1 Safety warnings

1.1 Warning	1-2
1.2 Meaning of safety warning symbols	3
1.3 Electricity related warnings	3
1.4 Warnings for using	4
1.5 Warnings for placement	4-5
1.6 Warnings for energy	5
1.7 Warnings for disposal	5

2 Proper use of refrigerator

2.1 Placement	6
2.2 Levelling feet	7
2.3 Door Right-Left Change	7-8
2.4 Start to use	9
2.5 Energy saving tips	9

3 Structure and functions

3.1 Key components	10
--------------------	----

4 Maintenance and care of refrigerator

4.1 Overall cleaning	11
4.2 Defrosting	11
4.3 Stop using	11

5 Trouble shooting

5.1 Trouble shooting	12
----------------------	----

1 Safety warnings

1.1 Warning



Warning: risk of fire / flammable materials

This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.)

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.

Warning: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

Warning: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Warning: Do not damage the refrigerant circuit.

Warning: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Warning: Please abandon the refrigerator according to local regulators for it use flammable blowing gas and refrigerant.

Warning: When positioning the appliance, ensure the supply cord is not trapped or damaged.

Warning: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Do not use extension cords or ungrounded (two prong) adapters.

Danger: Risk of child entrapment. Before you throw away your old refrigerator or freezer:

–Take off the doors.

–Leave the shelves in place so that children may not easily climb inside.

The refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory.

Refrigerant and cyclopentane foaming material used for the appliance are flammable. Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.

The necessity that, for doors or lids fitted with locks and keys, the keys be kept out of the reach of children and not in the vicinity of the refrigerating appliance, in order to prevent children from being locked inside .

For EN standard: This appliance can be used by children aged from 8 years and above and persons with reduce physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days. (note 1)
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes. (note 2)
- One-, two- and three-star compartments are not suitable for the freezing of fresh food. (note 3)
- For appliances without a 4-star compartment: this refrigerating appliance is not suitable for freezing foodstuffs. (note 4)
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Note 1,2,3,4: Please confirm whether it is applicable according to your product compartment type.

For a freestanding appliance: this refrigerating appliance is not intended to be used as a built-in appliance.

Warning: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

Warning: Connect to potable water supply only. (Suitable for ice making machine)

To Prevent A Child From Being Entrapped, Keep Out Of Reach Of Children And Not In The Vicinity Of Freezer (Or Refrigerator). (Suitable for products with locks)

1.2 Meaning of safety warning symbols



Prohibition symbol

This is a prohibition symbol.

Any in compliance with instructions marked with this symbol may result in damage to the product or endanger the personal safety of the user.



Warning symbol

This is a warning symbol.

It is required to operate in strict observance of instructions marked with this symbol; or otherwise damage to the product or personal injury may be caused.




Note symbol

This is a cautioning symbol.


Instructions marked with this symbol require special caution. Insufficient caution may result in slight or moderate injury, or damage to the product.

This manual contains lots of important safety information which shall be observed by the users.


1.3 Electricity related warnings

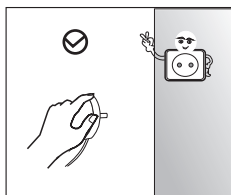


- Do not pull the power cord when pulling the power plug of the refrigerator. Please firmly grasp the plug and pull out it from the socket directly.
- To ensure safe use, do not damage the power cord or use the power cord when it is damaged or worn.

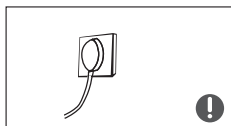

- Please use a dedicated power socket and the power socket shall not be shared with other electrical appliances. The power cord should be firmly contacted with the socket or else fires might be caused.
- Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.

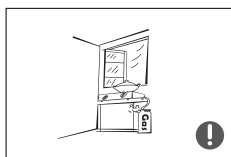


- Please turn off the valve of the leaking gas and then open the doors and windows in case of leakage of gas and other flammable gases. Do not unplug the refrigerator and other electrical appliances considering that spark may cause a fire.

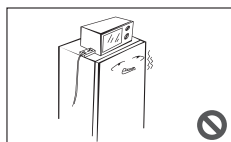


- Do not use electrical appliances on the top of the appliance, unless they are of the type recommended by the manufacturer.

1.4 Warnings for using

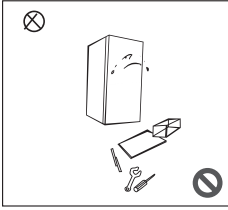


- Do not arbitrarily disassemble or reconstruct the refrigerator, nor damage the refrigerant circuit; maintenance of the appliance must be conducted by a specialist
- Damaged power cord must be replaced by the manufacturer, its maintenance department or related professionals in order to avoid danger.

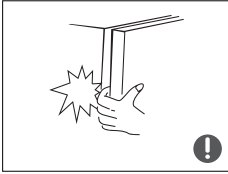

- The gaps between refrigerator door and cabinet is small, be noted not to put your hand in these areas to prevent from squeezing the finger. Please be gentle when close the refrigerator door to avoid falling articles.
- Do not pick foods or containers in the freezing chamber when the refrigerator is running, especially metal containers in order to avoid frostbite.




- Do not allow any child to get into or climb the refrigerator; otherwise suffocation or falling injury of the child may be caused.

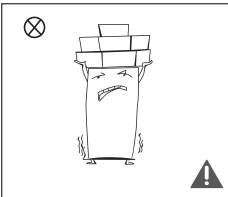


- Do not place heavy objects on the top of the refrigerator considering that objectives may fall when switching the door, and accidental injuries might be caused.
- Please pull out plug in case of power failure or cleaning.
Do not connect the freezer to power supply within five minutes to prevent damages to the compressor due to successive starts.


1.5 Warnings for placement

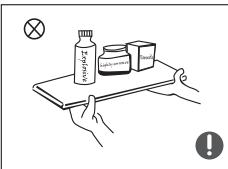

- Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.
- Do not place flammable items near the refrigerator to avoid fires.

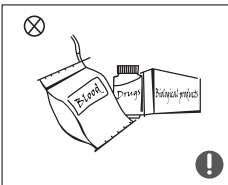

- The refrigerator is intended for household use, such as storage of foods; it shall not be used for other purposes, such as storage of blood, drugs or biological products, etc.

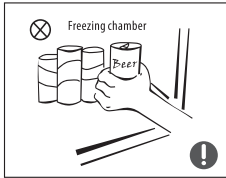

- Do not store beer, beverage or other fluid contained in bottles or enclosed containers in the freezing chamber of the refrigerator; otherwise the bottles or enclosed containers may crack due to freezing to cause damages.

1.6 Warnings for energy

- 1) Refrigerating appliances might not operate consistently (possibility of defrosting of contents or temperature becoming too warm in the frozen food compartment) when sited for an extended period of time below the cold end of the range of temperatures for which the refrigerating appliance is designed.
- 2) The fact that effervescent drinks should not be stored in food freezer compartments, and that some products such as water ices should not be consumed too cold;
- 3) The need to not exceed the storage time(s) recommended by the food manufacturers for any kind of food and particularly for commercially quick-frozen food in freezer;
- 4) The precautions necessary to prevent an undue rise in the temperature of the frozen food while defrosting the refrigerating appliance, such as wrapping the frozen food in several layers of newspaper.
- 5) The fact that a rise in temperature of the frozen food during manual defrosting, maintenance or cleaning could shorten the storage life.

1.7 Warnings for disposal

-  Refrigerant and cyclopentane foaming material used for the refrigerator are flammable. Therefore, when the refrigerator is scraped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.
-  When the refrigerator is scraped, disassemble the doors, and remove the seal of the door and shelves; put the doors and shelves in a proper place, so as to prevent trapping of any child.




Correct Disposal of this product:


This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

2 Proper use of refrigerator


2.1 Placement

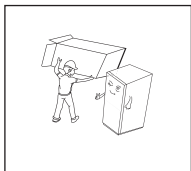


- Before use, remove all packing materials, including bottom cushions, foam pads and tapes inside of the refrigerator; tear off the protective film on the doors and the refrigerator body.

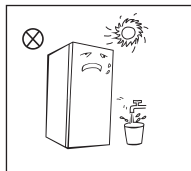

- Keep away from heat and avoid direct sunlight. Do not place the freezer in moist or watery places to prevent rust or reduction of insulating effect.
- Do not spray or wash the refrigerator; do not put the refrigerator in moist places easy to be splashed with water so as not to affect the electrical insulation properties of the refrigerator.

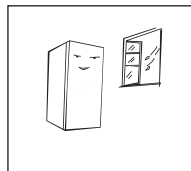

- The refrigerator is placed in a well-ventilated indoor place; the ground shall be flat, and sturdy (rotate left or right to adjust the wheel for leveling if unstable).

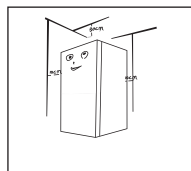

- The top space of the refrigerator shall be greater than 30cm, and The refrigerator should be placed against a wall with a free distance more than 10cm to facilitate heat dissipation.


⚠ Precautions before installation:

Information in the Instruction Manual is only for reference. The physical product may differ. Before installation and adjusting of accessories, it shall be ensured that the refrigerator is disconnected from power.

Precautions shall be taken to prevent fall of the handle from causing any personal injury.

2.2 levelling feet

Schematic diagram of the levelling feet

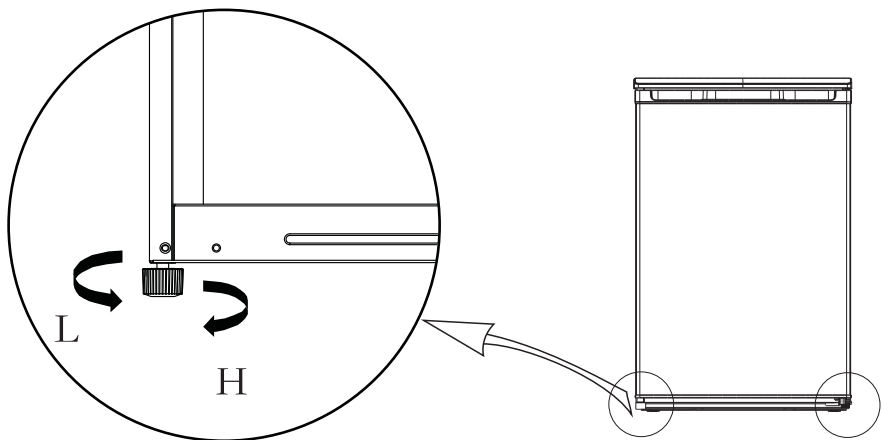

(The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)


Adjusting procedures:

- a. Turn the feet clockwise to raise the refrigerator;
- b. Turn the feet counterclockwise to lower the refrigerator;
- c. Adjust the right and left feet based on the procedures above to a horizontal level.


2.3 Door Right-Left Change

List of tools to be provided by the user			
	Cross screwdriver		Putty knife
	5/16" socket and ratchet		thin-blade screwdriver
			Masking tape

- 1)Power off the refrigerator, and remove all objects from the door trays.
- 2)Fix the door by tape.

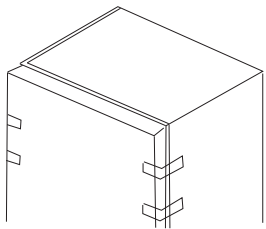


3) Unscrew screws of the top cover, Remove the top cover.




4) Unscrew screws of upper hinge. Remove the upper hinge.

5) Remove the door. Unscrew screws of bottom hinge, Remove bottom hinge and levelling feet.

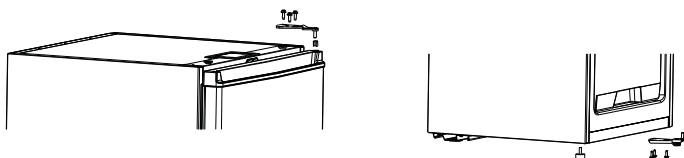


6) Fix the levelling feet, bottom hinge in the opposite side.


7) Assemble the door stopper and axle sleeve in the opposite side.

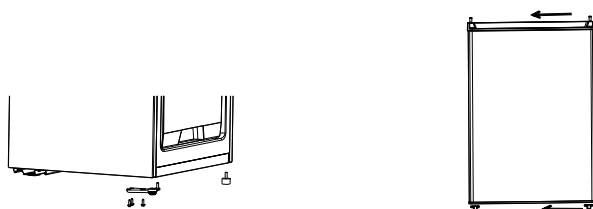


8) Put down the door on bottom hinge vertically.
Fix the upper hinge, fix top cover of refrigerator.

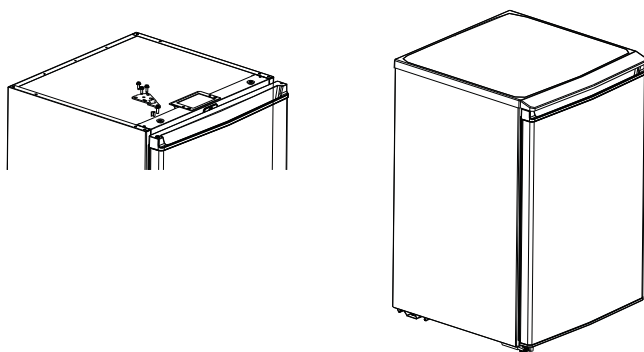

2.4 Start to use

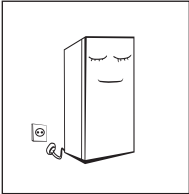

- Before initial start, keep the refrigerator still for half an hour before connecting it to power supply.
- Before putting any fresh or frozen foods, the refrigerator shall have run for 2-3 hours, or for above 4 hours in summer when the ambient temperature is high.

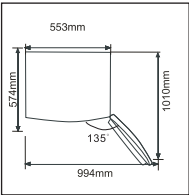


- Spare enough space for convenient opening of the doors and drawers or statement by the distributor.

2.5 Energy saving tips

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

3 Structure and functions

3.1 Key components

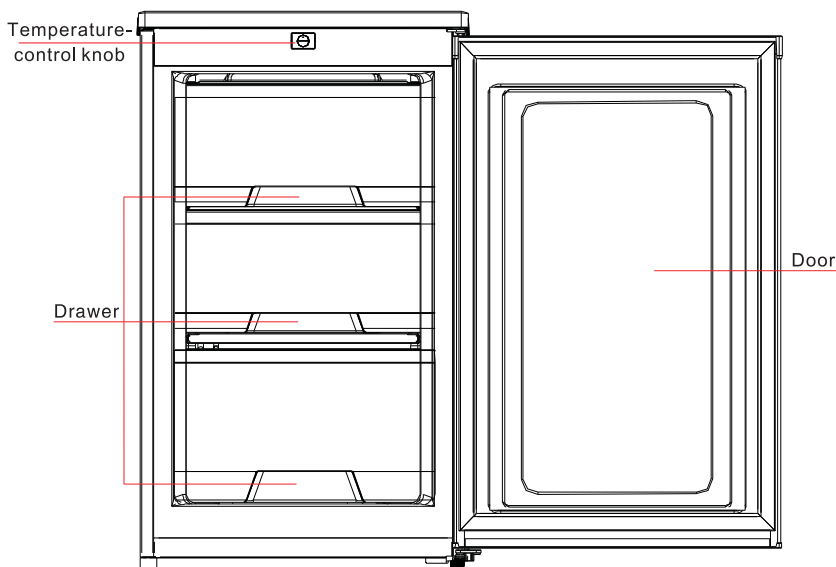


! (The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)

Freezing chamber

- The low temperature freezing chamber may keep food fresh for a long time and it is mainly used to store frozen foods and making ice.
It is the most energy efficient to place food in the position shown in the picture above.
- The freezing chamber is suitable for storage of meat, fish, rice balls and other foods not to be consumed in short term.
- Chunks of meat are preferably to be divided into small pieces for easy access. Please be noted food shall be consumed within the shelf time.

Note: Storage of too much food during operation after the initial connection to power may adversely affect the freezing effect of the refrigerator. Foods stored shall not block the air outlet; or otherwise the freezing effect will also be adversely affected.

Temperature-control knob

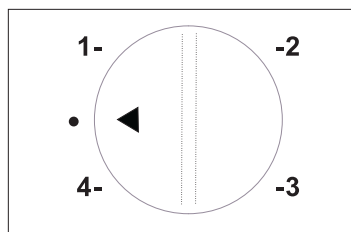

- If the ambient temperature is too high or in summer, according to actual needs, the thermostat adjusted to 4.
- If the ambient temperature is too low or in winter, according to actual needs, the thermostat adjusted to 1.
- **Recommended gear: Mid-range**

4. Maintenance and care of refrigerator

4.1 Overall cleaning

- Dusts behind the refrigerator and on the ground shall be timely cleaned to improve the cooling effect and energy saving.
- Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.
- The interior of the refrigerator should be cleaned regularly to avoid odor.
- Please turn off the power before cleaning interior, remove all foods, drinks, shelves, drawers, etc.
- Use a soft cloth or sponge to clean the inside of the refrigerator, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.
- For areas that are difficult to clean in the refrigerator (such as narrow sandwiches, gaps or corners), it is recommended to wipe them regularly with a soft rag, softbrush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminants or bacteria accumulation in these areas.
- Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odors in the interior of the refrigerator or contaminated food.
- Clean the bottle frame, shelves and drawers with a soft cloth dampened with soapy water or diluted detergent. Dry with a soft cloth or dry naturally.
- Wipe the outer surface of the refrigerator with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives (such as toothpastes), organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items, which may damage the cooler surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.
- Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.



 Please unplug the refrigerator for defrost and cleaning.

4.2 Defrost

- Power off the refrigerator.
- Remove the food from the refrigerator and place it properly to prevent food from melting.
- Clear the drain pipe (to use soft materials to prevent damage to the liner), Prepare the water containers for defrosting.
(pay attention to clean the compressor compartment water draining tray, Avoiding overflow to the ground).
- You can use the natural temperature for the natural defrost, you can also use the ice shovel to eliminate the frost (to use plastic or wooden ice shovel, for avoiding damage to the liner or pipe)
- You can also use the appropriate amount of hot water to speed up the defrost, with a dry towel to dry the water after defrosting.
- After defrosting, put back the foods in cabinet, and power on the refrigerator.

4.3 Stop using

- Power failure: In case of power failure, even if it is in summer, foods inside the appliance can be kept for several hours; during the power failure, the times of door opening shall be reduced, and no more fresh food shall be put into the appliance.
- Long-time nonuse: The appliance shall be unplugged and then cleaned; then the doors are left open to prevent odor.
- Moving: Before the refrigerator is moved, take all objects inside out, fix the glass partitions, vegetable holder, freezing chamber drawers and etc. with tape, and tighten the leveling feet; close the doors and seal them with tape. During moving, the appliance shall not be laid upside down or horizontally, or be vibrated; the inclination during movement shall be no more than 45°. Do not hold the door and hinge when moving this unit.

 The appliance shall run continuously once it is started. Generally, the operation of the appliance shall not be interrupted; or otherwise the service life may be impaired

5.Trouble shooting

5.1 You may try to solve the following simple problems by yourself.
If them cannot be solved, please contact the after-sales department.

Failed operation	Check whether the appliance is connected to power or whether the plug is in well contact Check whether the voltage is too low Check whether there is a power failure or partial circuits have tripped
Odor	Odorous foods shall be tightly wrapped Check whether there is any rotten food Clean the inside of the refrigerator
Long-time operation of the compressor	Long operation of the refrigerator is normal in summer when the ambient temperature is high It is not suggestible having too much food in the appliance at the same time Food shall get cool before being put into the appliance The doors are opened too frequently
Light fails to get lit	Check whether the refrigerator is connected to power supply and whether the illuminating light is damaged Have the light replaced by a specialist
Doors cannot be properly closed	The door is stuck by food packages Too much food is placed The refrigerator is tilted
Loud noise	Check whether the floor is level and whether the refrigerator is placed stably Check whether accessories are placed at proper locations
Door seal fails to be tight	Remove foreign matters on the door seal Heat the door seal and then cool it for restoration (or blow it with an electrical drier or use a hot towel for heating)
Water pan overflows	There is too much food in the chamber or food stored contains too much water,resulting in heavy defrosting The doors are not closed properly, resulting in frosting due to entry of air and increased water due to defrosting
Hot housing	Heat dissipation of the built-in condenser via the housing, which is normal When housing becomes hot due to high ambient temperature, storage of too much food or shutdown of the compressor is shut down, provide sound ventilation to facilitate heat dissipation
Surface condensation	Condensation on the exterior surface and door seals of the refrigerator is normal when the ambient humidity is too high. Just wipe the condensate with a clean towel.
Abnormal noise	Buzz: The compressor may produce buzzes during operation, and the buzzes are loud particularly upon start or stop. This is normal. Creak: Refrigerant flowing inside of the appliance may produce creak, which is normal.

Table 1 Climate classes

Class	Symbol	Ambient temperature range °C
Extended temperate	SN	+ 10 to + 32
Temperate	N	+ 16 to + 32
Subtropical	ST	+ 16 to + 38
Tropical	T	+ 16 to + 43

Extended temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C';

temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C';

Subtropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C';

Tropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C';

Special for new European standard

The ordered parts in the following table can be acquired from channel _:

Ordered Part	Provided by	Minimum Time Required for Provision
thermostats	Professional maintenance personnel	At least 7 years after the last model is launched on the market
temperature sensors	Professional maintenance personnel	At least 7 years after the last model is launched on the market
printed circuit boards	Professional maintenance personnel	At least 7 years after the last model is launched on the market
light sources	Professional maintenance personnel	At least 7 years after the last model is launched on the market
door handles	Professional repairers and final users	At least 7 years after the last model is launched on the market
door hinges	Professional repairers and final users	At least 7 years after the last model is launched on the market
trays	Professional repairers and final users	At least 7 years after the last model is launched on the market
baskets	Professional repairers and final users	At least 7 years after the last model is launched on the market
door gaskets	Professional repairers and final users	At least 10 years after the last model is launched on the market

- The shortest period for providing after-sales spare parts is _____

Dear customer

1. If you want to return or replace the product, please contact the store where you buy.

(Remember to bring the purchase invoice)

2. If your product breaks down which needs to repair, please contact after-sales service provider.

Activate your Warranty

- Visit our web site and activate your warranty via the below link or by scanning the QR code

<https://www.inventorairconditioner.com/warranty-inventor>



- Fill all the fields as shown below

To activate the warranty card, please fill in the following fields

Owner details

Full Name*

Address*

Postal Code*

Phone Number*

E-mail*

Subscribe to Inventor's Newsletter



* Required field

With the current warranty card you accept the terms and conditions.

SEND

Unit details

Unit Type*

Serial Number of the unit*

Date of Purchase*

Invoice Number*

Additional Details

☒ once the warranty submission has been completed a confirmation message will be sent to your email

Αγαπητέ πελάτη:

Σας ευχαριστούμε που επιλέξατε το συγκεκριμένο ψυγείο. Για να εξασφαλίσετε το καλύτερο αποτέλεσμα από το καινούριο σας ψυγείο, διαθέστε λίγο χρόνο για να διαβάσετε τις απλές οδηγίες αυτού του οδηγού χρήσης.

Βεβαιωθείτε ότι τα υλικά συσκευασίας του θα απορριφθούν σύμφωνα με τις ισχύουσες περιβαλλοντικές απαιτήσεις.

Σε περίπτωση απόρριψης του ψυγείου ή εξοπλισμού αυτού, επικοινωνήστε με το τοπικό γραφείο διαχείρισης απορριμμάτων για να λάβετε τις απαραίτητες σχετικές οδηγίες.

Η συσκευή αυτή πρέπει να χρησιμοποιείτε μόνο για τις χρήσεις που αυτή προορίζετε.


ΠΡΟΣΟΧΗ :

Αυτή η συσκευή δεν πρέπει να χρησιμοποιείται από μικρά παιδιά ή άτομα με ειδικές ανάγκες χωρίς επίβλεψη. Τα μικρά παιδιά θα πρέπει να επιβλέπονται ώστε να μην παίζουν με τη συσκευή.

ΓΕΝΙΚΑ

Αυτός ο τύπος καταψύκτη χρησιμοποιείται σε μέρη όπως ξενοδοχεία, γραφεία, φοιτητικές εστίες και σπίτια. Είναι κατάλληλο κυρίως για τη κατάψυξη και συντήρηση τροφίμων όπως φρούτα και λαχανικά. Έχει μικρό μέγεθος, είναι ελαφρύ, με χαμηλή κατανάλωση ενέργειας και εύκολο στη χρήση.

Περιγραφή :

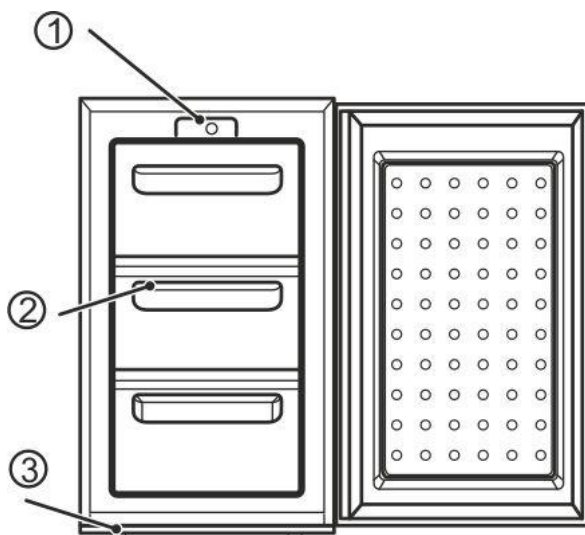

1.Θερμοστάτης

2. Συρτάρια

3. Πόδι ρύθμισης

ΑΠΟΣΥΣΚΕΥΑΣΙΑ ΤΟΥ ΚΑΤΑΨΥΚΤΗ

Προειδοποίηση: Μην μετακινείτε την συσκευή μόνοι σας. Μπορεί να τραυματιστείτε σοβαρά.

- Αφαιρέστε τις ταινίες και τα υπόλοιπα υλικά συσκευασίας.
- Για να αφαιρέσετε κατάλοιπα από ταινία ή κόλλα τρίψτε το σημείο καλά με τον αντίχειρα
- Για μεγαλύτερη ευκολία μπορείτε να τρίψετε το σημείο με μικρή ποσότητα απορρυπαντικού για τα πιάτα. Ξεβγάλτε με ζεστό νερό και στεγνώστε καλά.
- Μην χρησιμοποιείτε κοφτερά εργαλεία, οινόπνευμα ή εύφλεκτα υγρά και γυαλιστικά καθαριστικά για να αφαιρέσετε τα κατάλοιπα από ταινίες ή κόλλες. Αυτά τα προϊόντα μπορεί να καταστρέψουν την επιφάνεια του καταψύκτη σας.
- Μην γέρνετε τον καταψύκτη σε γωνία μεγαλύτερη των 45° κατά την μετακίνηση του.

ΚΑΘΑΡΙΣΜΟΣ ΠΡΙΝ ΤΗΝ ΧΡΗΣΗ:

Αφού αφαιρέσετε όλα τα υλικά συσκευασίας (ειδικά το αφρολέξ μεταξύ του συμπυκνωτήρα και του κυρίως μέρους του ψυγείου) καθαρίστε καλά το εσωτερικό του καταψύκτη πριν να τον χρησιμοποιήσετε.

ΤΟΠΟΘΕΤΗΣΗ ΤΟΥ ΚΑΤΑΨΥΚΤΗ

ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Διατηρήστε τα εύφλεκτα υλικά και αέρια όπως η βενζίνη μακριά από τον καταψύκτη. Υπάρχει κίνδυνος έκρηξης και πρόκλησης εγκαυμάτων ή σοβατού τραυματισμού

- Για τον σωστό εξαερισμό της συσκευής αφήστε τουλάχιστον 20 εκ ελεύθερο χώρο από τις πλαϊνές και την πίσω πλευρά του καταψύκτη και του τοίχου και τουλάχιστον 30εκ. Από το πάνω

μέρος του καταψύκτη.

- Αν τοποθετήσετε τον καταψύκτη κοντά σε τοίχο βεβαιωθείτε ότι υπάρχει αρκετός ελεύθερος χώρος για το σωστό και πλήρες άνοιγμα της πόρτας.
- Μην τοποθετείτε τον καταψύκτη κοντά σε πηγές θερμότητας ή σε σημείο που να εκτίθεται στις ακτίνες του ήλιου.

ΗΛΕΚΤΡΙΚΕΣ ΑΠΑΙΤΗΣΕΙΣ

ΠΡΟΕΙΔΟΠΟΙΗΣΗ: ΜΗΝ ΑΦΑΙΡΕΙΤΕ ΤΟΝ ΠΟΛΟ ΓΕΙΩΣΗΣ

ΜΗΝ ΧΡΗΣΙΜΟΠΟΙΕΙΤΑΙ ΜΕΤΑΤΡΟΠΕΙΣ

ΜΗΝ ΧΡΗΣΙΜΟΠΟΙΕΙΤΕ ΠΡΟΕΚΤΑΣΕΙΣ

Υπάρχει σοβαρός κίνδυνος πρόκλησης φωτιάς, ηλεκτροπληξίας ή και θανάτου.

Βεβαιωθείτε για την σωστή ηλεκτρική σύνδεση πριν τοποθετήσετε τον καταψύκτη στην τελική του θέση.

Κατάλληλη παροχή ρεύματος

Για την ηλεκτρική σύνδεση απαιτείται παροχή 220~240 Volt /50 Hz με ασφάλεια γραμμής 10A η οποία να είναι κατάλληλα γειωμένη. Συνιστάτε η χρήση αποκλειστικής γραμμής ρεύματος ειδικά για αυτήν την συσκευή. Μην χρησιμοποιείτε προεκτάσεις ή πολύμπριζα για την αποφυγή υπερθερμάνσεων.

ΣΗΜΕΙΩΣΗ: Πριν την τοποθέτηση του καταψύκτη, βεβαιωθείτε ότι δεν είναι συνδεδεμένος στο ρεύμα. Αφού ολοκληρώσετε την τοποθέτηση συνδέστε στο ρεύμα και χρησιμοποιώντας τον θερμοστάτη επιλέξτε την επιθυμητή θερμοκρασία.

ΕΥΘΥΓΡΑΜΜΙΣΗ

Σε περίπτωση που ο καταψύκτης δεν είναι σωστά ευθυγραμμισμένος, μπορεί οι πόρτες να μην κλείνουν σωστά προκαλώντας δημιουργία πάγου ή υγρασίας. Είναι πολύ σημαντικό να ευθυγραμμίσετε σωστά τον καταψύκτη σας.

Περιστρέψτε δεξιόστροφα ή αριστερόστροφα τα ρυθμιζόμενα πόδια για να ανασηκώσετε ή να κατεβάσετε την αντί

ΣΗΜΙΩΣΗ: Βάλτε ένα άτομο να σας βοηθήσει σπρώχνοντας τον καταψύκτη από το πάνω μέρος για να μειώσει το βάρος του καταψύκτη και να μπορέσετε να ρυθμίσετε ευκολότερα τα πόδια.

ΧΡΗΣΗ ΤΟΥ ΚΑΤΑΨΥΚΤΗ

Για να έχετε τα καλύτερα δυνατά αποτελέσματα, είναι σημαντικό να γίνεται σωστή χρήση του καταψύκτη.

Ρύθμιση θερμοκρασίας

Η θερμοκρασία στο εσωτερικό του καταψύκτη ρυθμίζεται από τον περιστροφικό επιλογές του θερμοστάτη, ο οποίος βρίσκεται στο μπροστά πάνω μέρος του. Περιστρέψτε τον θερμοστάτη για να επιλέξετε την θερμοκρασία που επιθυμείτε. Υπάρχουν θέσεις από το 1 έως το 4. Η θέση 1 αντιστοιχεί στην πιο υψηλή θερμοκρασία ενώ η θέση 4 στην πιο χαμηλή θερμοκρασία.

Για κανονική χρήση βάλτε τον θερμοστάτη μεταξύ των θέσεων 1 και 4. Η συνηθισμένη θέση για οικιακή χρήση είναι η θέση 2.

Αποθήκευση κατεψυγμένων τροφίμων

Όταν χρησιμοποιείτε τον καταψύκτη για πρώτη φορά ή μετά από απόψυξη, βάλτε τον θερμοστάτη στην θέση 4 για τουλάχιστον 2 ώρες πριν να τοποθετήσετε στο εσωτερικό του τρόφιμα.

Όλα τα κατεψυγμένα τρόφιμα θα πρέπει να τοποθετούνται στον

καταψύκτη το συντομότερο δυνατό για να μην αποψυχθούν.

Τα κατεψυγμένα τρόφιμα θα πρέπει να καταλανώνονται πριν την ημερομηνία λήξης τους που αναγράφεται στην συσκευασία τους.

Προσέξτε κατά το άνοιγμα / κλείσιμο των συρταριών ώστε να μην χτυπήσετε τις σωληνώσεις του ψυκτικού κυκλώματος.

Καταψύχοντας φρέσκα τρόφιμα

Ακολουθήστε προσεκτικά όλες τις απαιτήσεις υγιεινής όταν καταψύχετε φρέσκα τρόφιμα. Είναι σημαντικό να καταψύχετε τα τρόφιμα, συσκευάζοντας τα σε μικρότερες μερίδες και όχι χύμα. Ποτέ μην τοποθετείτε καυτά ή ακόμα και ζεστά τρόφιμα στον καταψύκτη. Πριν την κατάψυξη των τροφίμων τοποθετείστε τα σε πλαστικές σακούλες, τυλίψτε τα σε αλουμινόχαρτο ή τοποθετείστε σε δοχεία κατάλληλα για κατάψυξη. Ελέγξτε την ημερήσια δυνατότητα κατάψυξης σε κιλά η οποία αναγράφεται στην πινακίδα διαβάθμισης του καταψύκτη και μην καταψύχεται περισσότερα από το επιτρεπόμενο όριο τρόφιμα.

Σημείωση: Ποτέ μην τοποθετείτε εμφιαλωμένα τρόφιμα ή ποτά στον καταψύκτη.

Για να έχετε τα καλύτερα δυνατά αποτελέσματα φροντίστε να αφήσετε κενό χώρο μεταξύ των τροφίμων ώστε να μπορεί να κυκλοφορήσει σωστά ο αέρας.

Σημείωση: μπορείτε να χρησιμοποιήσετε τον καταψύκτη και αφού έχετε αφαιρέσει τα συρτάρια του.

Απόψυξη

Αποσυνδέστε τον καταψύκτη από το ρεύμα. Ανοίξτε την πόρτα, αφαιρέστε όλα τα τρόφιμα και αποθηκεύστε τα σε ένα δροσερό μέρος. Αφήστε την θερμοκρασία στο εσωτερικό του καταψύκτη να ανέβει ώστε να λειώσει τον πάγο στο εσωτερικό του ή αφαιρέστε

προσεκτικά τον πάγο χρησιμοποιώντας πλαστική σπάτουλα. Σκουπίστε καλά το εσωτερικό του και συνδέστε ξανά τον καταψύκτη στο ρεύμα.

Σημείωση: Μην χρησιμοποιείτε μυτερά ή μεταλλικά αντικείμενα για Να αφαιρέσετε τον πάγο από το εσωτερικό του καταψύκτη, καθώς υπάρχει κίνδυνος να καταστρέψετε τα τοιχώματα του.

Καθαρισμός του καταψύκτη

Αποσυνδέστε τον καταψύκτη από το ρεύμα. Χρησιμοποιήστε ένα καθαρό πανί ή μαλακό σφουγγάρι με ζεστό νερό και ήπιο (ουδέτερο) καθαριστικό.

Απαγορεύεται η χρήση σκληρών ή λειαντικών απορρυπαντικών.

Καθαρίστε με το χέρι, ξεβγάλτε και στεγνώστε καλά όλες τις επιφάνειες.

Μην χρησιμοποιείτε αλοιφές καθαρισμού, συμπυκνωμένα καθαριστικά, λευκαντικά ή καθαριστικά που περιέχουν πετρέλαιο.

Μην χρησιμοποιείτε χαρτί κουζίνας, καθαριστικά τζαμιών ή εύφλεκτα Υγρά για τον καθαρισμό των πλαστικών μερών καθώς αυτά μπορούν να γρατζουνίσουν ή να καταστρέψουν τις επιφάνειες.

Παρατεταμένη απουσία

Σε περίπτωση που δεν θα χρησιμοποιήσετε τον καταψύκτη σας για μεγάλο χρονικό διάστημα, ακολουθήστε τις παρακάτω οδηγίες:

Αποσυνδέστε τον καταψύκτη από το ρεύμα .

Καθαρίστε και στεγνώστε καλά τον καταψύκτη ακολουθώντας τις οδηγίες στο τμήμα καθαρισμού.

Αφήστε ανοικτή την πόρτα για την αποφυγή δημιουργίας δυσάρεστων οσμών.

ΟΔΗΓΟΣ ΑΝΕΥΡΕΣΗΣ ΒΛΑΒΩΝ

Σε περίπτωση δυσλειτουργίας μπορείτε να ελέγξετε μόνοι σας τα παρακάτω απλά θέματα.

Η συσκευή δεν λειτουργεί ... Ελέγξτε αν.....

- Η συσκευή είναι συνδεδεμένη στην παροχή ρεύματος;
- Η τάση του ρεύματος είναι χαμηλή;
- Υπάρχει διακοπή ρεύματος ή έχει ενεργοποιηθεί η ασφάλεια στον πίνακα ρεύματος;.

Η πόρτα δεν κλείνει σωστά ... Ελέγξτε αν.....

- Τα συρτάρια είναι σωστά τοποθετημένα.
- Έχει συσσωρευτεί βρωμιά στα λάστιχα της πόρτας
- Ο καταψύκτης είναι σωστά ευθυγραμμισμένος

Ακούγονται δυνατοί θόρυβοι ... Ελέγξτε αν.....

- Ο καταψύκτης είναι σωστά ευθυγραμμισμένος και δεν ακουμπάει σε κάποιο έπιπλο ή άλλη συσκευή.

Δεν υπάρχει ικανοποιητική ψύξη ... Ελέγξτε αν.....

- Η πόρτα ανοίγει πολύ συχνά ή αν έχει μείνει ανοικτή για πολύ ώρα..
- Έχει συσσωρευτεί σκόνη ή βρωμιά στο πίσω μέρος με αποτέλεσμα να μην υπάρχει επαρκής κυκλοφορία του αέρα.

Τα παρακάτω συμπτώματα δεν αποτελούν βλάβη.

- Ένας παφλασμός που προέρχεται από την κυκλοφορία του ψυκτικού υγρού στις σωληνώσεις.
- Ο συμπιεστής αναπτύσσει υψηλές θερμοκρασίες

ΠΡΟΕΙΔΟΠΟΙΗΣΗ

Εάν τα προβλήματα παραμείνουν, παρακαλούμε καλέστε το τμήμα τεχνικής υποστήριξης της εταιρίας μας.

ΜΕΤΡΑ ΠΡΟΦΥΛΑΞΗΣ

- 1) **ΠΡΟΣΟΧΗ** — Διατηρήστε ελεύθερα τα ενσωματωμένα ανοίγματα εξαιρισμού επί του περιβλήματος της συσκευής.
- 2) **ΠΡΟΣΟΧΗ** — Αποφύγετε την εφαρμογή μεθόδων απόψυξης πέραν αυτών που συνιστά ο κατασκευαστής και συγκεκριμένα μην κάνετε χρήση ηλεκτρικών συσκευών για τον σκοπό αυτό.
- 3) **ΠΡΟΣΟΧΗ** — Προσέξτε μην προξηνηθεί ζημιά στο κύκλωμα ψύξης.
- 4) **ΠΡΟΣΟΧΗ** — Αποφύγετε την χρήση ηλεκτρικών συσκευών εντός των θαλάμων αποθήκευσης τροφών, εκτός και αν είναι του τύπου που συνιστά ο κατασκευαστής.
- 5) Η συσκευή πρέπει να αποσυνδεθεί από την παροχή ρεύματος μετά από χρήση και πριν ξεκινήσει η διαδικασία εργασιών συντήρησης και καθαρισμού.
- 6) Αυτή η συσκευή μπορεί να χρησιμοποιηθεί από παιδιά ηλικίας από 8 ετών και άνω όπως και από άτομα περιορισμένων αισθητηριακών ή διανοητικών δυνατοτήτων και ελλιπούς εμπειρίας και γνώσεων εφ' όσον την λειτουργούν υπό επιτήρηση ή τους έχουν παραχθεί οδηγίες ασφαλούς χρήσης και έχουν επίγνωση των κινδύνων χρήσης. Ο καθαρισμός της συσκευής και εργασίες συντήρησης δεν θα εκτελούνται από παιδιά μικρής ηλικίας άνευ επιτήρησης ενήλικα.
- 7) Παιδιά μικρής ηλικίας απαγορεύεται να παίζουν με την συσκευή
- 8) Εάν το καλώδιο παροχής ρεύματος έχει ζημιά, ο κατασκευαστής, ή εξουσιοδοτημένος πάροχος υπηρεσιών αυτού οφείλει να το αντικαταστήσει προς αποφυγήν ατυχήματος.
- 9) Κατά την απόσυρση της συσκευής, παρακαλείστε να ακολουθήσετε τους κανονισμούς ασφαλείας της τοπικής αυτοδιοίκησης, καθώς η συσκευή κάνει χρήση εύφλεκτων αερίων και ψυκτικών ουσιών.
- 10) Πριν αποσύρετε την συσκευή παρακαλείστε να αποσυνδέσετε τις

πόρτες ώστε να αποφευχθεί ο κίνδυνος εγκλωβισμού παιδιών μικρής ηλικίας.

11) Παρακαλείστε να μην αποθηκεύετε εκρηκτικές ουσίες όπως σπρέι που περιέχουν εύφλεκτες προωθητικές ουσίες εντός της συσκευής αυτής.



ΟΠΟΙΑΔΗΠΟΤΕ ΑΠΟΠΕΙΡΑ ΕΠΙΣΚΕΥΗΣ ΑΠΟ ΜΗ ΕΞΟΥΣΙΟΔΟΤΗΜΕΝΟ ΠΡΟΣΩΠΙΚΟ ΕΙΝΑΙ ΕΠΙΚΙΝΔΥΝΗ.



ΠΡΟΣ ΑΠΟΦΥΓΗΝ ΗΛΕΚΤΡΟΠΛΗΞΙΑΣ, ΠΑΡΑΚΑΛΕΙΣΤΕ ΝΑ ΜΗΝ ΕΚΤΕΛΕΙΤΕ ΕΡΓΑΣΙΕΣ ΕΠΙΣΚΕΥΗΣ ΜΟΝΟΙ ΣΑΣ ΚΑΙ ΝΑ ΚΑΛΕΣΕΤΕ ΕΞΟΥΣΙΟΔΟΤΗΜΕΝΟ ΠΡΟΣΩΠΙΚΟ.



Σωστή απόρριψη του προϊόντος

Το παραπάνω σήμα υποδηλώνει ότι το συγκεκριμένο προϊόν δεν θα πρέπει να απορρίπτεται μαζί με τα οικιακά απορρίμματα. Για την αποφυγή πιθανής περιβαλλοντικής βλάβης, η ανακύκλωση θα πρέπει να χρησιμοποιείτε για την επαναχρησιμοποίηση των πρώτων υλών. Χρησιμοποιήστε το τοπικό σύστημα ανακύκλωσης ηλεκτρικών ειδών ή επικοινωνήστε με το κατάστημα από το οποίο αγοράσατε την συσκευή.

ΓΙΑ να αποφύγετε τη μόλυνση των τροφίμων, τηρήστε τις παρακάτω οδηγίες:

- Η ανοιγόμενη πόρτα για μεγάλες περιόδους μπορεί να προκαλέσει σημαντική αύξηση της θερμοκρασίας στα διαμερίσματα της συσκευής.
- Να καθαρίζετε τακτικά επιφάνειες που μπορούν να έρθουν σε επαφή με τρόφιμα και προσβάσιμα συστήματα αποστράγγισης.
- Δεξαμενές καθαρού νερού εάν δεν έχουν χρησιμοποιηθεί για 48 ώρες. Ξεπλύνετε το σύστημα ύδρευσης που είναι συνδεδεμένο με παροχή νερού εάν δεν έχει τραβηχτεί νερό για 5 ημέρες.. (σημείωση 1)
- Φυλάξτε το ωμό κρέας και τα ψάρια σε κατάλληλα δοχεία στο ψυγείο, έτσι ώστε να μην έρχονται σε επαφή ή να μην στάζουν σε άλλα τρόφιμα.
- Διαμερίσματα κατεψυγμένου φαγητού δύο αστέρων είναι κατάλληλα για την αποθήκευση των προ-καταψυγμένων τροφίμων, την αποθήκευση ή την παρασκευή παγωτού και την κατασκευή παγοκύβων. (σημείωση 2)
- Διαμερίσματα **(**)** κατεψυγμένου φαγητού δύο αστέρων είναι κατάλληλα για την αποθήκευση των προ-καταψυγμένων τροφίμων, την αποθήκευση ή την παρασκευή παγωτού και την κατασκευή παγοκύβων. (σημείωση 2)
- Του ενός **(*)** -, των δύο **(**)** -και τα τριών **(***)** αστέρων διαμερίσματα δεν **(✱ ***)** είναι κατάλληλα για την κατάψυξη των νωπών τροφίμων. (σημείωση 3)

- Αν η ψυκτική συσκευή παραμένει άδεια για μεγάλες χρονικές περιόδους, απενεργοποιήστε, ξεπαγώστε, **(✱ ***)** καθαρίστε, στεγνώστε και αφήστε την πόρτα ανοικτή για να αποφύγετε την ανάπτυξη μούχλας μέσα στη συσκευή.

- Για συσκευές χωρίς 4 - αστέρων διαμέρισμα: η παρούσα συσκευή κατάψυξης δεν είναι κατάλληλη για την κατάψυξη τροφίμων υλικών. (σημείωση 4)

Σημείωση 1,2,3,4: Παρακαλείστε να επιβεβαιώσετε αν ισχύει ανάλογα με το είδος του διαμερίσματός σας.


ΓΙΑ μία ανεξάρτητη συσκευή: η παρούσα συσκευή κατάψυξης δεν προορίζεται να χρησιμοποιηθεί σαν μία εντοιχισμένη - συσκευή.

Η ανάγκη να παραμείνουν τα κλειδιά για τις πόρτες ή τα καλύμματα που διαθέτουν κλειδαριές και κλειδιά μακριά από τα παιδιά και όχι κοντά στη συσκευή ψύξης, προκειμένου να αποφευχθεί το κλείδωμα των παιδιών στο εσωτερικό τους.


ΟΠΟΙΑΔΗΠΟΤΕ αντικατάσταση ή συντήρηση των λαμπτήρων LED προορίζεται να πραγματοποιηθεί από τον κατασκευαστή, τον αντιπρόσωπο σέρβις ή άλλο παρόμοιο εξειδικευμένο άτομο.

Εγκατάσταση πόρτας και αλλαγή φοράς ανοίγματος

1. Αφαιρέστε τις βίδες στο πίσω μέρος του πάνω καπακιού και αφαιρέστε το καπάκι.

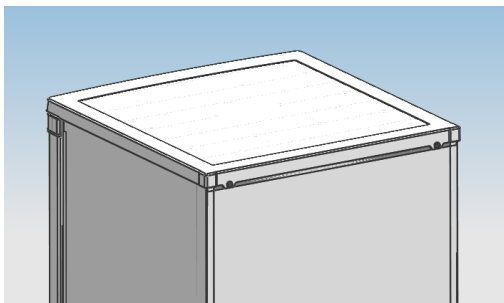


2. Αφαιρέστε τις βίδες του πάνω μεντεσέ.

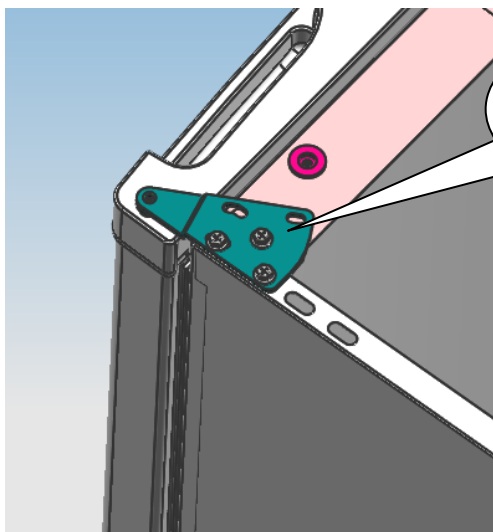


Βίδες του
Πάνω μεντεσέ

3. Μεταφέρετε τον πάνω μεντεσέ, το στοπ της πόρτας και τον άξονα στην αντίθετη πλευρά
- A. Μεταφέρετε τον πάνω μεντεσέ .

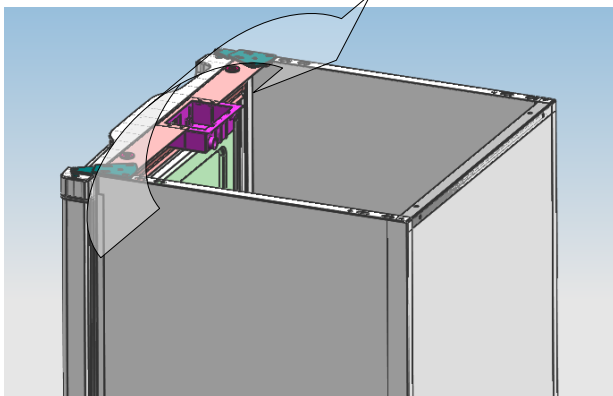


- B. Μεταφέρετε το στοπ της πόρτας και τον άξονα.

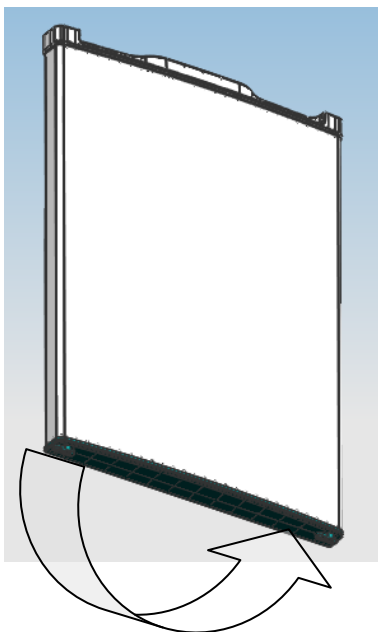


4. Αφαιρέστε τις βίδες του κάτω μεντεσέ, μετεφέρετε τον μεντεσέ στην αντίθετη πλευρά και βιδώστε τις βίδες καλά.


Σημείωση: Μην γέρνετε το ψυγείο σε γωνία μεγαλύτερη των 45°

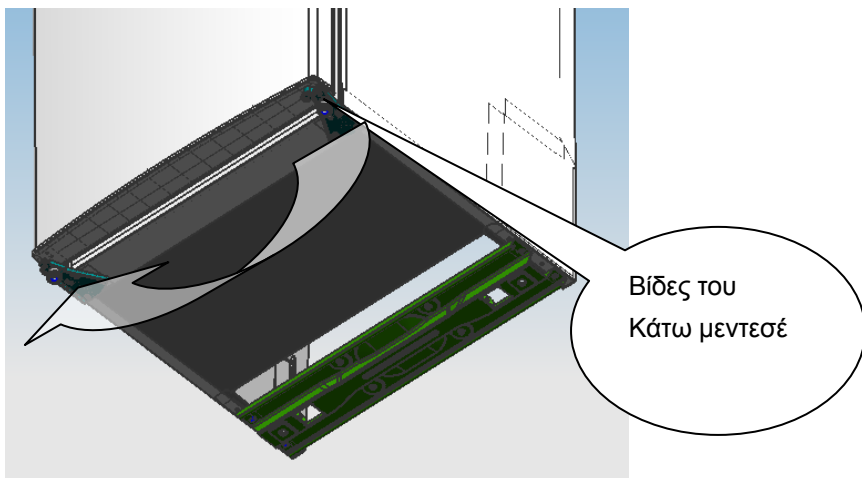

5. Μεταφέρετε τον ρυθμιστή στην αντίθετη πλευρά και ευθυγραμμίστε σωστά την συσκευή .

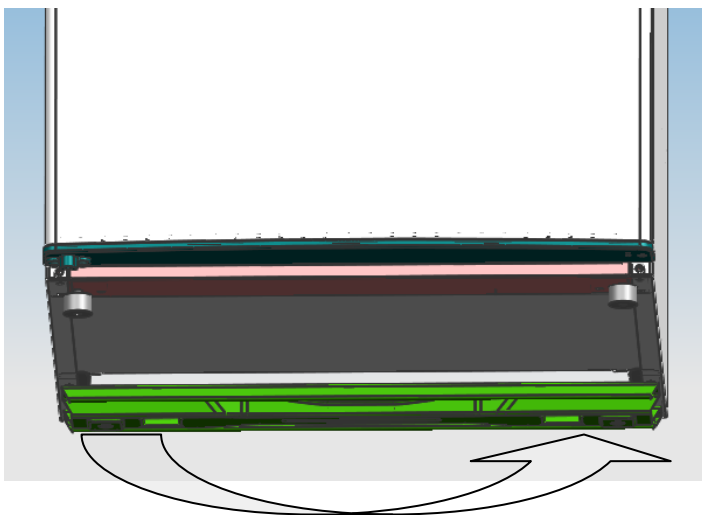

6. Ευθυγραμμίστε την πόρτα δεξιά, βιδώστε τον πάνω μεντεσέ και το καπάκι

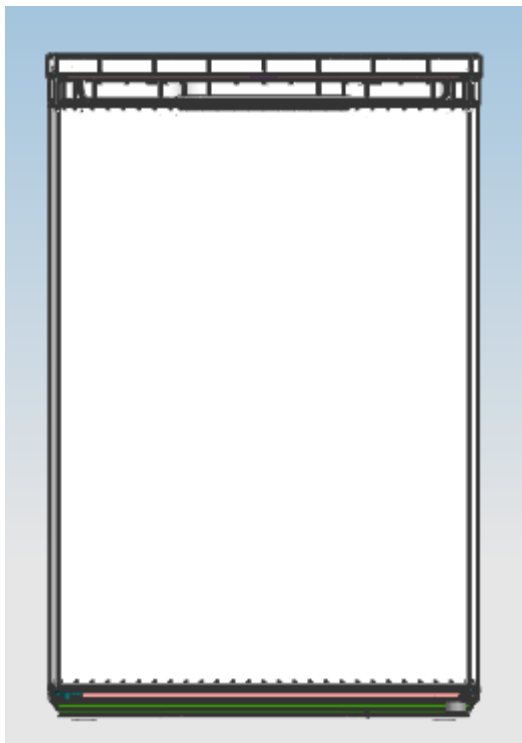

Βεβαιωθείτε ότι η συσκευή είναι άδεια και εκτός ρεύματος.

Ρυθμίστε τα μπροστινά πόδια στο μέγιστο ύψος.

Είναι καλό να εκτελέσετε τις παραπάνω εργασίες με κάποιον βοηθό.

Τα παρακάτω αναφερόμενα στον πίνακα μπορούν να παραληφθούν από την Inventor

Ανταλλακτικό	Προμηθευμένο από	Ελάχιστος χρόνος που απαιτείται για την προμήθεια
θερμοστάτες	Επαγγελματικό προσωπικό συντήρησης	Τουλάχιστον 7 έτη αφού το τελευταίο μοντέλο προβλήθηκε στην αγορά
αισθητήρες θερμοκρασίας	Επαγγελματικό προσωπικό συντήρησης	Τουλάχιστον 7 έτη αφού το τελευταίο μοντέλο προβλήθηκε στην αγορά
πλακέτες τυπωμένων κυκλωμάτων	Επαγγελματικό προσωπικό συντήρησης	Τουλάχιστον 7 έτη αφού το τελευταίο μοντέλο προβλήθηκε στην αγορά
πηγές φωτός	Επαγγελματικό προσωπικό συντήρησης	Τουλάχιστον 7 έτη αφού το τελευταίο μοντέλο προβλήθηκε στην αγορά
χειρολαβές πόρτας	Επαγγελματίες, επισκευαστές και τελικούς χρήστες	Τουλάχιστον 7 έτη αφού το τελευταίο μοντέλο προβλήθηκε στην αγορά
μεντεσέδες πόρτας	Επαγγελματίες, επισκευαστές και τελικούς χρήστες	Τουλάχιστον 7 έτη αφού το τελευταίο μοντέλο προβλήθηκε στην αγορά
δίσκοι	Επαγγελματίες, επισκευαστές και τελικούς χρήστες	Τουλάχιστον 7 έτη αφού το τελευταίο μοντέλο προβλήθηκε στην αγορά
καλάθια	Επαγγελματίες, επισκευαστές και τελικούς χρήστες	Τουλάχιστον 7 έτη αφού το τελευταίο μοντέλο προβλήθηκε στην αγορά
περιβλήματα πόρτας	Επαγγελματίες, επισκευαστές και τελικούς χρήστες	Τουλάχιστον 10 έτη αφού το τελευταίο μοντέλο προβλήθηκε στην αγορά

Παρακαλούμε σκανάρετε τον κωδικό QR code στην ετικέτα ενεργειακής απόδοσης προκειμένου να προμηθευτείτε το εγχειρίδιο επισκευής.

Εκτεταμένη εύκρατη: 'η συγκεκριμένη συσκευή ψύξης προορίζεται να χρησιμοποιείται σε θερμοκρασίες περιβάλλοντος μεγέθους από 10 °C έως 32 °C';

Εύκρατη: 'η συγκεκριμένη συσκευή ψύξης προορίζεται να χρησιμοποιείται σε θερμοκρασίες περιβάλλοντος μεγέθους από 16 °C έως 32 °C';

Υποτροπική: 'η συγκεκριμένη συσκευή ψύξης προορίζεται να χρησιμοποιείται σε θερμοκρασίες περιβάλλοντος μεγέθους από 16 °C έως 38 °C';

Τροπική: 'η συγκεκριμένη συσκευή ψύξης προορίζεται να χρησιμοποιείται σε θερμοκρασίες περιβάλλοντος μεγέθους από 16 °C έως 43 °C';

Υποβολή Εγγύησης

- Επισκεφθείτε τη σελίδα μας και ενεργοποιήστε την εγγύησή σας μέσω του παρακάτω link ή σκανάροντας το QR code

<https://www.inventoraircondition.gr/egiisi-inventor>



- Συμπληρώστε όλα τα πεδία όπως φαίνονται παρακάτω

Για να ενεργοποιήσετε την εγγύηση, παρακαλούμε συμπληρώστε τα παρακάτω πεδία

Στοιχεία ιδιοκτήτη

Όνοματεπώνυμο*

Διεύθυνση*

Τ.Κ.*

Τηλέφωνο*

Διεύθυνση email*

Να εγγραφώ στο newsletter της Inventor

☐

* Απαραίτητο πεδίο

Αποστέλοντας τη φόρμα εγγύησης αποδέχεστε τους όρους και τις προϋποθέσεις.

ΑΠΟΣΤΟΛΗ

Στοιχεία μηχανήματος

Τύπος μηχανήματος*

Σειριακός αριθμός μηχανήματος*

Ημερομηνία αγοράς μηχανήματος*

Αριθμός παραστατικού*

Επιπλέον στοιχεία

- ☒ Μόλις ολοκληρωθεί η υποβολή της εγγύησης θα λάβετε την επιβεβαίωση κατοχύρωσης στο email σας



FREEZER

UPRIGHT FREEZER



Scan here to download the latest version of this manual.
Σαρώστε εδώ για να κατεβάσετε την τελευταία έκδοση του εγχειριδίου.

