inventor

FREEZER
CHEST FREEZER

- **USER'S MANUAL**
- **ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ**
- **MANUAL DE UTILIZARE**

MODEL:
MF1-418MD

ENGLISH | ΕΛΛΗΝΙΚΑ

CONTENTS

1 Safety warnings

1.1 Warning · · ·

1 Safety warnings

1.1 Warning

Warning: risk of fire / flammable materials

This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.)

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.

Warning: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

Warning: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Warning: Do not damage the refrigerant circuit.

Warning: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Warning: Please abandon the refrigerator according to local regulators for it use flammable blowing gas and refrigerant.

Warning: When positioning the appliance, ensure the supply cord is not trapped or damaged.

Warning: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Do not use extension cords or ungrounded（two prong）adapters.

Danger: Risk of child entrapment. Before you throw away your old refrigerator or freezer:
–Take off the doors.
–Leave the shelves in place so that children may not easily climb inside.

The refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory.

Refrigerant and cyclopentane foaming material used for the appliance are flammable. Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.

The necessity that, for doors or lids fitted with locks and keys, the keys be kept out of the reach of children and not in the vicinity of the refrigerating appliance, in order to prevent children from being locked inside.

For EN standard: This appliance can be used by children aged from 8 years and above and persons with reduce physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days. （note 1）
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star ** frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes. （note 2）
- One * -, two ** , three-star *** -and four-star **** compartments are not suitable for the freezing of fresh food. （note 3）
- For appliances without a 4-star compartment: this refrigerating appliance is not suitable for freezing foodstuffs.（note 4）
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Note 1,2,3,4：Please confirm whether it is applicable according to your product compartment type.

For a freestanding appliance: this refrigerating appliance is not intended to be used as a built-in appliance.

Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person. (See chapter 2.4 for lamp replacement)

Warning: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

Warning: Connect to potable water supply only. (Suitable for ice making machine)

To Prevent A Child From Being Entrapped, Keep Out Of Reach Of Children And Not In The Vicinity Of Freezer (Or Refrigerator). (Suitable for products with locks)

1.2 Meaning of safety warning symbols

Prohibition symbols	The symbols indicate prohibited matters, and those behaviors are forbidden. Non-compliance with the instructions may result in product damages or endanger the personal safety of users.
Warning symbols	The symbols indicate matters that must be followed, and those behaviors must be strictly executed in line with the operation requirements. Non-compliance with the instructions may result in product damages or endanger the personal safety of users.
Note symbols	The symbols indicate matters to pay attention to, and these behaviors shall be specially noted. Due precautions are needed or minor or moderate injuries or damages of the product will be caused.

This manual contains lots of important safety information which shall be observed by the users.

1.3 Electricity related warnings

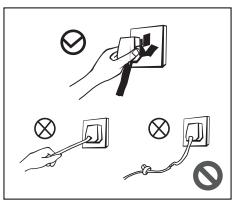

- Do not pull the power cord when pulling the power plug of the freezer. Please firmly grasp the plug and pull out it from the socket directly.
- Do not damage the power cord under any condition so as to ensure safety use, do not use when the power cord is damaged or the plug is worn.
- Worn or damaged power cord shall be replaced in manufacturer-authorized maintenance stations.

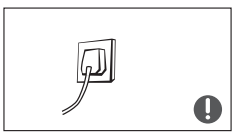

- The power plug should be firmly contacted with the socket or else fires might be caused. Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.

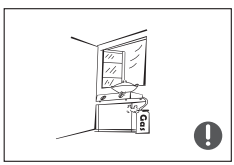

- Please turn off the valve of the leaking gas and then open the doors and windows in case of leakage of gas and other flammable gases. Do not unplug the freezer and other electrical appliances considering that spark may cause a fire.

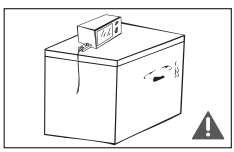

- To ensure safety, it is not recommended that to place regulators, rice cookers, microwave ovens and other appliances on the top of the freezer, those recommended by the manufacturer are not included. Do not use electrical appliances in the food pan.

1.4 Related warnings for use

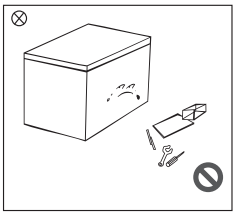

- Do not arbitrarily disassemble or reconstruct the freezer, nor damage the refrigerant circuit; maintenance of the appliance must be conducted by a specialist.
- Damaged power cord must be replaced by the manufacturer, its maintenance department or related professionals in order to avoid danger.

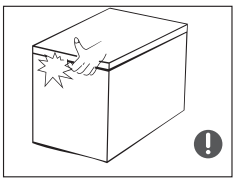

- The gaps between freezer doors and between doors and freezer body are small, be noted not to put your hand in these areas to prevent from squeezing the finger. Please be gentle when open the freezer door to avoid falling articles.
- Do not pick foods or containers with wet hands in the freezing chamber when the freezer is running, especially metal containers in order to avoid frostbite.

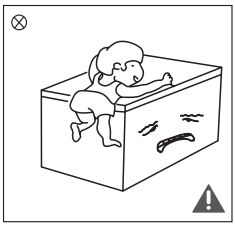

- Do not allow children to enter or climb the freezer to prevent that children are sealed in the freezer or children are injured by the falling freezer.
- Do not spray or wash the freezer; do not put the freezer in moist places easy to be splashed with water so as not to affect the electrical insulation properties of the freezer.

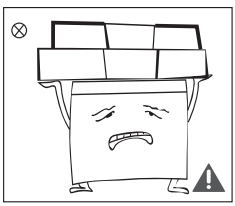

- Do not place heavy objects on the top of the freezer considering that objects may fall when open the door, and accidental injuries might be caused.
- Please pull out the plug in case of power failure or cleaning. Do not connect the freezer to power supply within five minutes to prevent damages to the compressor due to successive starts.

1.5 Warnings related to placing items

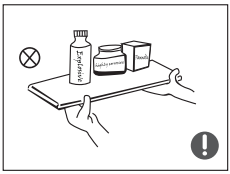

- Do not put flammable, explosive, volatile and highly corrosive items in the freezer to prevent damages to the product or fire accidents.
- Do not place flammable items near the freezer to avoid fires.

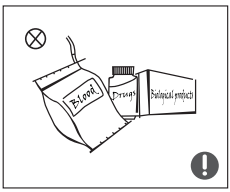

- This product is household freezer and shall be only suitable for the storage of foods. According to national standards, household freezer shall not be used for other purposes, such as storage of blood, drugs or biological products.

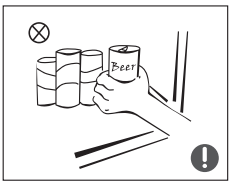

- Do not place items such as bottled or sealed container of fluid such as bottled beers and beverages in the freezer to prevent bursts and other losses.

1.6 Warnings for energy

1)Freezer might not operate consistently when sited for an extended period of time below the cold end of the range of temperatures for which the freezer appliance is designed.
2)The fact that effervescent drinks should not be stored in food freezer compartments or cabinets or in low-temperature compartments or cabinets, and that some products such as water ices should not be consumed too cold;
3)The need to not exceed the storage time recommended by the food manufacturers for any kind of food and particularly for commercially quick-frozen food in food-freezer and frozen-food storage compartments or cabinets;
4)The precautions necessary to prevent an undue rise in the temperature of the frozen food while defrosting the refrigerating appliance, such as wrapping the frozen food in several layers of newspaper.
5)The fact that a rise in temperature of the frozen food during manual defrosting, maintenance or cleaning could shorten the storage life.

1.7 Warnings related to disposal

The freezer's refrigerant and cyclopentane foam materials are combustible materials and discarded freezers should be isolated from fire sources and can not be burned. Please transfer the freezer to qualified professional recycling companies for processing to avoid damages to the environment or other hazards.

Please remove the door of the freezer and shelves which shall be properly placed to avoid accidents of children entering and playing in the freezer.

Correct Disposal of this product：
This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.They can take this product for environmental safe recycling.

2 Proper use of freezer

2.1 Names of components

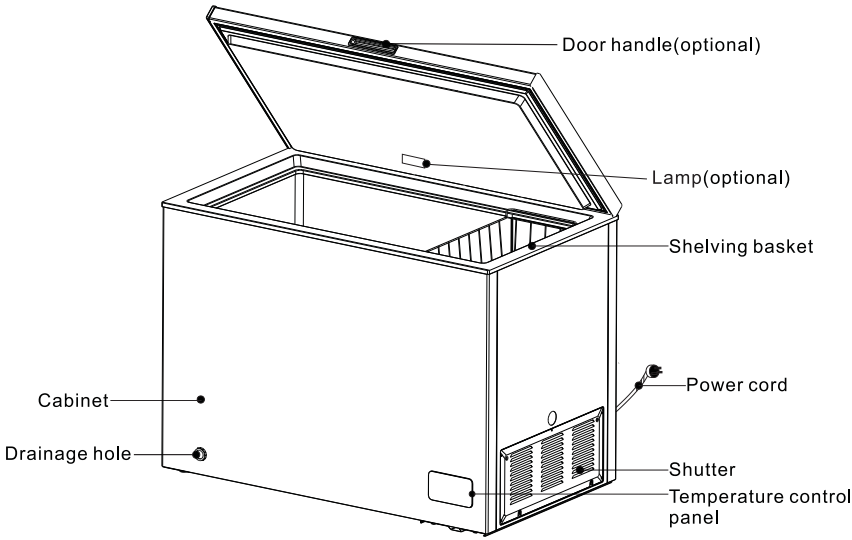

(The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)

- The low temperature of freezer may keep food fresh for a long time and it is mainly used to store frozen foods and making ice.
- The freezer is suitable for storage of meat, fish, shrimp, pastries class and other foods not to be consumed in short term; do not store fluids in bottled or closed containers Items such as bottled beer, beverages, etc.
- Please be noted food shall be consumed within the shelf time.
- The freezing speed of the product is related to the amount of food stored and the ambient temperature. If too much normal temperature food is put in at the same time, the thermostat shall be adjusted to the maximum gear 24 hours in advance or prepare ice ahead for cold storage, and the large food shall be divided into small pieces and put in several times, otherwise the large size or amount food cannot be frozen locally, and the food may deteriorate.

2.2 Temperature Control

(1)Use on new European standard products:

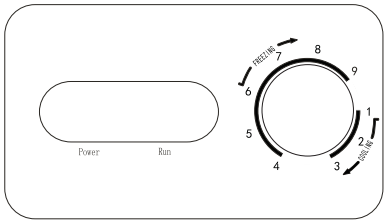

- Connect the freezer to power supply and " Power " indicator (the green light) will shine. " Run " indicator (the red light) will shine when the compressor is running.
- The set temperature is adjusted through the thermostat knob. The number " 1, 2, 3, 4, 5, 6, 7, 8, 9 " do not mean a specific temperatures, the lower the number is, the higher the temperature inside will be and vice versa.
- " 1-2-3 " stands for cooling.
  " 4-5-6-7-8-9 " stands for freezing.
- Recommended gear: Gear 6 for freezing / Gear 2 for refrigeration

(2)Use non-new European standard products:

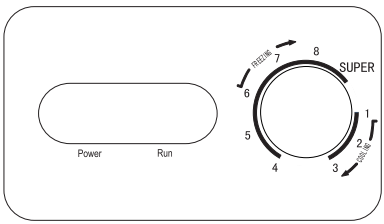

- Connect the freezer to power supply and " Power " indicator (the green light) will shine. " Run " indicator (the red light) will shine when the compressor is running.
- The set temperature is adjusted through the thermostat knob. The number " 1, 2, 3, 4, 5, 6, 7, 8 " do not mean a specific temperatures, the lower the number is, the higher the temperature inside will be and vice versa.
- " 1-2-3 " stands for cooling.
  " 4-5-6-7-8-SUPER " stands for freezing.
- When turn to "SUPER", the freezer enters into fast freeze mode, and the compressor will not stop until you turn the knob to the other position.

(Above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)

2.3 Placement

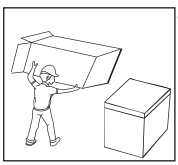

- Before using the freezer, remove all packaging materials including bottom cushions and foam pads and tapes inside the freezer, tear off the protective film on the door and the freezer body.

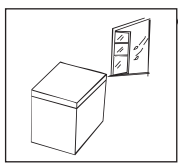

- The freezer should be placed in a well-ventilated indoor place; the ground shall be flat, and sturdy .

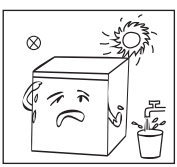

- Keep away from heat and avoid direct sunlight. Do not place the freezer in moist or watery places to prevent rust or reduction of insulating effect.

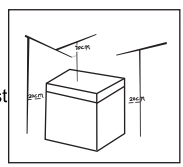

- The top space of the freezer shall be greater than 70cm, and the distances from both sides and backside shall be more than 20cm to facilitate heat dissipation.

2.4 Changing the Light (optional)

Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.

Replacement of incandescent lamps:
Disconnecting the power supply before carrying out the bulb replacement ,
Hold and remove the light bulb cover.
Dismantle the old bulb by unscrewing it counterclockwise.replace by a new bulb (Max. 15W) by screwing it clockwise, and make sure it is fixed in the bulb holder tightly.
Reassemble the light cover and re-connect your Freezer to the power supply.

(Above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)

2.4 Start to use

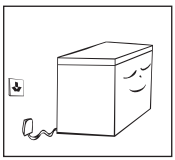

- The freezer shall stay for half an hour before connecting power when it is firstly started.
- The freezer shall run 2 to 3 hours before loading fresh or frozen foods; the freezer shall run for more than 4 hours in summer in advance considering that the ambient temperature is high.

2.5 Energy saving tips

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

3 Maintenance of freezer

3.1 Cleaning

- Dusts behind the freezer and on the ground shall be timely cleaned to improve the cooling effect and energy saving.
- Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.
- The interior of the freezer should be cleaned regularly to avoid odor.
- Please turn off the power before cleaning, remove all food, basket, container,etc.
- Use a soft cloth or sponge to clean the inside of the freezer, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.
- For areas that are difficult to clean in the freezer(such as gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminants or bacterials accumulation in these areas.
- Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odors in the interior of the freezer or contaminated food.
- Clean the baskets with a soft cloth dampened with soapy water or diluted detergent. Dry with a soft cloth or dry naturally.
- Wipe the outer surface of the freezer with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives(such as toothpastes), organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items, which may damage the freezer surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.
- Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.

⚠ Please unplug the freezer for defrost and cleaning.

3.2 Defrost

- Freezer shall be manually defrosted.
  Unplug the freezer and open the freezer door, remove foods and shelving basket before defrosting; Open the outflow hole and drainage hole (and place water container at the outflow hole); indoor frost will naturally melt, wipe the defrost water with a dry, soft cloth. When the frost softens, an ice scraper might be used to the accelerate de-icing process.
- Please remove the food and put in a cool place when defrosting before removing accessories.

⚠ Other mechanical devices or other means shall not be used to accelerate except those recommended by the manufacturer. Do not damage the refrigerant circuit.

3.3 Stop using

- Power failure:Foods can be preserved for a couple of hours even in summer in case of power failure; it is recommended to reduce the frequency of opening door and do not put fresh foods into the freezer.
- Long-time nonuse：Please unplug the freezer left unused for a long time for cleaning. Keep the door open to avoid the bad odor.
- Moving:Do not turn upside or vibrate the freezer, the carrying angle can not be greater than 45° . Do not hold the door and hinge when moving this unit.

⚠ Continuous operation is recommended when the freezer is started. Please do not stop the freezer under normal circumstances so as not to affect the freezer's service life.

4 Trouble shooting

The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not settled.

Inoperation	Whether the freezer is plugged and connected to power; Low voltage; Whether temperature control knob is in the work area Failure power or tripping circuit.
Odor	Odorous foods should closely wrapped; Whether foods are rotten; Whether the interior shall be cleaned.
Long-term operation of compressor	It is normal that freezer operates for longer time in summer when the ambient temperature is higher; Do not put too much food in the freezer at one time; Do not put foods until they are cooled; Frequent opening of freezer door; Thick frost layer (defrost is needed).
Illuminating light does not shine	Whether the freezer is connected to power, whether the light is damaged.
The freezer door can not be properly closed	The freezer door is stuck by food packages; Too much food; Unbalanced freezer.
Loud noises	Whether the floor is flat, whether the placement of freezer is stable; Whether the freezer accessories are properly placed.
Transient difficulty in door opening	After refrigeration, there will be pressure difference between the inside and outside of the freezer to result in transient difficulty in door opening. This is a normal physical phenomenon.
Freezer enclosure heat Condensation	The freezer enclosure may emit heat during operation specially in summer, this is caused by the radiation of the condenser, and it is a normal phenomenon. Condensation: condensation phenomenon will be detected on the exterior surface and door seals of the freezer when the ambient humidity is large, this is a normal phenomenon, and the condensation can be wiped away with a dry towel.
Airflow sound Buzz Clatter	Refrigerants circulating in the refrigerant lines will produce eruption of sound and grunts which is normal does not affect the cooling effect. Buzz will be generated by running compressor specially when starting up or shutting down. The solenoid valve or electric switch valve will clatter which is a normal phenomenon and does not affect the operation.

Table 1 Climate classes

Class	Symbol	Ambient temperature range ℃
SUBNORMAL	SN	+ 10 to + 32
NORMAL	N	+ 16 to + 32
Subtropical	ST	+ 16 to + 38
Tropical	T	+ 16 to + 43

Subnormal: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C';
Normal:'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C';
Subtropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C';
Tropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C';

Special for new European standard

The ordered parts in the below table can be acquired from Inventor

Ordered Part	Provided by	Minimum Time Required for Provision
thermostats	Professional maintenance personnel	At least 7 years after the last model is launched on the market
temperature sensors	Professional maintenance personnel	At least 7 years after the last model is launched on the market
printed circuit boards	Professional maintenance personnel	At least 7 years after the last model is launched on the market
light sources	Professional maintenance personnel	At least 7 years after the last model is launched on the market
door handles	Professional repairers and final users	At least 7 years after the last model is launched on the market
door hinges	Professional repairers and final users	At least 7 years after the last model is launched on the market
trays	Professional repairers and final users	At least 7 years after the last model is launched on the market
baskets	Professional repairers and final users	At least 7 years after the last model is launched on the market
door gaskets	Professional repairers and final users	At least 10 years after the last model is launched on the market

Dear customer

1. If you want to return or replace the product, please contact the store where you buy.

(Remember to bring the purchase invoice)

2. If your product breaks down which needs to repair, please contact after-sales service provider.

Activate your Warranty

- Visit our web site and activate your warranty via the below link or by scanning the QR code

https://www.inventorairconditioner.com/warranty-inventor

- Fill all the fields as shown below

To activate the warranty card, please fill in the following fields

Owner details

Full Name*

Address*

Postal Code*

Phone Number*

E-mail*

Subscribe to Inventor's Newsletter

Unit details

Unit Type*

Serial Number of the unit*

Date of Purchase*

Invoice Number*

Additional Details

* Required field

With the current warranty card you accept **the terms and conditions.**

SEND

☑ once the warranty submission has been completed a confirmation message will be sent to your email

ΠΕΡΙΕΧΟΜΕΝΑ

1 Οδηγίες ασφαλείας

1.1 Σύμβολα Οδηγιών Ασφαλείας....2
1.2 Ερμηνεία Συμβόλων Οδηγιών Ασφαλείας....3
1.3 Οδηγίες ασφαλείας σχετικά με το ρεύμα....3
1.4 Οδηγίες σχετικές με τη χρήση....4
1.5 Οδηγίες ασφαλείας σχετικά με την τοποθέτηση αντικειμένων....5
1.6 Οδηγίες ασφαλείας σχετικά με την συντήρηση των προϊόντων....5
1.7 Οδηγίες ασφάλειας σχετικά με την απόρριψη της συσκευής....5

2 Σωστή χρήση των καταψυκτών

2.1 Περιγραφή εξαρτημάτων....6
2.2 Έλεγχος θερμοκρασίας....7
2.3 Τοποθέτηση....8
2.4 Εκκίνηση....8
2.5 Συμβουλές για χαμηλότερη κατανάλωση....8

3 Συντήρηση των καταψυκτών

3.1 Καθαρισμός....9
3.2 Απόψυξη....9
3.3 Τέλος λειτουργίας....9

4 Συχνές ερωτήσεις....10

ΑΓΑΠΗΤΕ ΧΡΗΣΤΗ:

Σας ευχαριστούμε που επιλέξατε τον καταψύκτη Inventor. Για την διασφάλιση της βέλτιστης λειτουργίας του νέου σας καταψύκτη, παρακαλούμε διαβάστε πρώτα τις οδηγίες που περιέχονται σε αυτό το εγχειρίδιο. Βεβαιωθείτε πως η απόρριψη της συσκευασίας έχει γίνει σύμφωνα με τους κανονισμούς. Κατά την απόρριψη του καταψύκτη, επικοινωνήστε με τις τοπικές αρχές για τη σωστή απόρριψη του προϊόντος. Η συσκευή αυτή δεν πρέπει να χρησιμοποιείται για άλλους σκοπούς.

1 Προειδοποιήσεις ασφαλείας

1.1 Προειδοποίηση

Προειδοποίηση: Κίνδυνος πυρκαγιάς/εύφλεκτα υλικά.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ:

Αυτή η συσκευή προορίζεται για χρήση σε οικιακές και παρόμοιες εφαρμογές, όπως -κουζίνα προσωπικού σε καταστήματα, γραφεία και άλλα περιβάλλοντα- αγροικίες και πελάτες σε ξενοδοχεία, μοτέλ και άλλα περιβάλλοντα τύπου κατοικίας - περιβάλλοντα τύπου πανδοχείου (bed & breakfast), τροφοδοσία και παρόμοιες εφαρμογές μη λιανικής πώλησης.

Εάν το καλώδιο τροφοδοσίας είναι φθαρμένο, πρέπει να αντικατασταθεί από τον κατασκευαστή ή το εξουσιοδοτημένο κατάστημα τεχνικής υποστήριξης ή από άτομα με παρόμοια ειδίκευση, προκειμένου να αποφευχθούν τυχόν κίνδυνοι.

Μην αποθηκεύετε σε αυτή τη συσκευή εκρηκτικές ουσίες όπως αεροζόλ με εύφλεκτο προωθητικό αέριο.

Η συσκευή πρέπει να αποσυνδεθεί μετά τη χρήση και πριν από τη συντήρηση του χρήστη.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Διατηρείτε ελεύθερες τις οπές εξαερισμού, στο περίβλημα της συσκευής ή στην ενσωματωμένη δομή της, απομακρύνοντας τυχόν εμπόδια.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Μη χρησιμοποιείτε μηχανικές συσκευές ή άλλα μέσα για να επιταχύνετε τη διαδικασία απόψυξης, εκτός από εκείνες που συνιστώνται από τον κατασκευαστή.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Μην προκαλείτε φθορές στο κύκλωμα ψυκτικού μέσου.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Μην χρησιμοποιείτε ηλεκτρικές συσκευές μέσα στα διαμερίσματα αποθήκευσης τροφίμων της συσκευής, εκτός αν είναι του τύπου που συνιστάται από τον κατασκευαστή.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Παρακαλείστε να απορρίψετε το ψυγείο σύμφωνα με τους τοπικούς κανονισμούς σχετικά με την διάθεση της συσκευής λόγω του εύφλεκτου αερίου εμφύσησης και του ψυκτικού μέσου.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Κατά την τοποθέτηση της συσκευής, βεβαιωθείτε ότι το καλώδιο τροφοδοσίας δεν έχει παγιδευτεί ή έχει υποστεί φθορά.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Μην τοποθετείτε πολλές φορητές πρίζες ή φορητές παροχές τροφοδοσίας στο πίσω μέρος της συσκευής.

Μην χρησιμοποιείτε καλώδια επέκτασης ή μη γειωμένους αντάπτορες (δύο ακίδων).

ΚΙΝΔΥΝΟΣ: Κίνδυνος παγίδευσης παιδιών. Πριν πετάξετε το παλιό ψυγείο ή τον καταψύκτη σας:

- Αφαιρέστε τις πόρτες.
- Αφήστε τα ράφια στη θέση τους, ώστε τα παιδιά να μην μπορούν να ανέβουν εύκολα μέσα.

Το ψυγείο πρέπει να αποσυνδεθεί από την πηγή ηλεκτρικής τροφοδοσίας πριν από την εγκατάσταση εξαρτήματος.

Το ψυκτικό μέσο και το υλικό αφρισμού κυκλοπεντανίου που χρησιμοποιείται για το ψυγείο είναι εύφλεκτα. Επομένως, όταν το ψυγείο διαλυθεί, πρέπει να απομακρυνθεί από οποιαδήποτε πηγή φωτιάς και να ανακυκλωθεί από μια ειδική εταιρεία ανάκτησης με αντίστοιχη πιστοποίηση διαφορετική από την απόρριψη με καύση, ώστε να αποφευχθεί η πρόκληση βλάβης στο περιβάλλον ή οποιαδήποτε άλλη βλάβη.

Κατά το πρότυπο EN: Αυτή η συσκευή δεν μπορεί να χρησιμοποιηθεί από παιδιά ηλικίας από 8 ετών και άνω και από άτομα με μειωμένες φυσικές αισθητικές ή διανοητικές ικανότητες ή έλλειψη εμπειρίας και γνώσης, εκτός και εάν είναι υπό την επίβλεψη υπεύθυνου για την ασφάλεια τους ενήλικα.Τα παιδιά δεν πρέπει να παίζουν με τη συσκευή. Ο καθαρισμός και η συντήρηση δεν πρέπει να πραγματοποιούνται από παιδιά και από άτομα με μειωμένες φυσικές αισθητικές ή διανοητικές ικανότητες ή έλλειψη εμπειρίας και γνώσης .

Κατά το πρότυπο IEC: Αυτή η συσκευή δεν προορίζεται για χρήση από άτομα (συμπεριλαμβανομένων παιδιών) με μειωμένες σωματικές, αισθητηριακές ή διανοητικές ικανότητες ή έλλειψη εμπειρίας και γνώσης, εκτός εάν έχουν επίβλεψη ή οδηγίες σχετικά με τη χρήση της συσκευής από άτομο υπεύθυνο για την ασφάλειά τους.

Τα παιδιά θα πρέπει να επιβλέπονται για να διασφαλιστεί ότι δεν παίζουν με τη συσκευή.

Οι οδηγίες περιλαμβάνουν την ουσία των ακόλουθων: Για να αποφύγετε τη μόλυνση των τροφίμων, τηρήστε τις ακόλουθες οδηγίες:

–Το άνοιγμα της πόρτας για μεγάλες χρονικές περιόδους μπορεί να προκαλέσει σημαντική αύξηση της θερμοκρασίας στους θαλάμους της συσκευής.

–Καθαρίστε τακτικά τις επιφάνειες που μπορούν να έρθουν σε επαφή με τα τρόφιμα και τα προσβάσιμα συστήματα αποστράγγισης.

–Καθαρίστε τις δεξαμενές νερού εάν δεν έχουν χρησιμοποιηθεί για 48 ώρες. Ξεπλύνετε το σύστημα ύδρευσης που είναι συνδεδεμένο με παροχή νερού εάν δεν έχει τραβηχτεί νερό για 5 ημέρες. （σημείωση 1）

–Αποθηκεύστε το ωμό κρέας και τα ψάρια σε κατάλληλα δοχεία στο ψυγείο, έτσι ώστε να μην έρχονται σε επαφή ή να μην στάζουν σε άλλα τρόφιμα.

–Οι θάλαμοι κατεψυγμένου φαγητού δύο αστέρων ** είναι κατάλληλοι για την αποθήκευση προ-καταψυγμένων τροφίμων, την αποθήκευση ή την παρασκευή παγωτού και τη δημιουργία παγοκύβων. （σημείωση 2）

–Οι θάλαμοι ενός *, δύο ** και τριών αστέρων *** δεν είναι κατάλληλοι για την κατάψυξη των νωπών τροφίμων. （σημείωση 3）

–Αν η ψυκτική συσκευή παραμείνει ανοικτή για μεγάλο χρονικό διάστημα, απενεργοποιήστε, ξεπαγώστε, καθαρίστε, στεγνώστε και αφήστε την πόρτα ανοικτή για να αποφύγετε την ανάπτυξη μούχλας μέσα στη συσκευή.

Σημείωση 1,2,3: Παρακαλείσθε να επιβεβαιώσετε αν ισχύουν ανάλογα με το είδος των θαλάμων του προϊόντος σας.

Η συσκευή δεν πρέπει να τοποθετείται σε εξωτερικούς χώρους. Επίσης δεν πρέπει να τοποθετείται σε χώρους με πολύ χαμηλές ή πολύ υψηλές θερμοκρασίες και επίσης δεν πρέπει να είναι εκτεθειμένη σε απευθείας ηλιακό φώς.

Σημείωση1,2,3,4: Παρακαλείστε να επιβεβαιώσετε αν ισχύει ανάλογα με το είδος του διαμερίσματός σας.

ΓΙΑ μία ανεξάρτητη συσκευή: η παρούσα συσκευή κατάψυξης δεν προορίζεται να χρησιμοποιηθεί σαν μία εντοιχισμένη - συσκευή.

Η ανάγκη να παραμείνουν τα κλειδιά για τις πόρτες ή τα καλύμματα που διαθέτουν κλειδαριές και κλειδιά μακριά από τα παιδιά και όχι κοντά στη συσκευή ψύξης, προκειμένου να αποφευχθεί το κλείδωμα των παιδιών στο εσωτερικό τους.

ΟΠΟΙΑΔΉΠΟΤΕ αντικατάσταση ή συντήρηση των λαμπτήρων LED προορίζεται να πραγματοποιηθεί από τον κατασκευαστή, τον αντιπρόσωπο σέρβις ή άλλο παρόμοιο εξειδικευμένο άτομο.

1.2 Ερμηνεία Συμβόλων Οδηγιών Ασφαλείας

Απαγορευτικά σύμβολα	Αυτά τα σύμβολα υποδεικνύουν απαγορεύσεις. Εάν δεν ακολουθηθούν οι συγκεκριμένες οδηγίες, μπορεί να προκληθεί βλάβη της μονάδας ή τραυματισμός του χρήστη.
Σύμβολα προειδοποίησης	Αυτά τα σύμβολα υποδεικνύουν πως πρέπει να ακολουθηθούν οι συγκεκριμένες οδηγίες παράλληλα με τις οδηγίες λειτουργίας. Εάν δεν ακολουθηθούν οι συγκεκριμένες οδηγίες, μπορεί να προκληθεί βλάβη στη μονάδα ή τραυματισμός του χρήστη.
Σύμβολα προσοχής	Αυτά τα σύμβολα υποδεικνύουν οδηγίες στις οποίες θα πρέπει να δοθεί ιδιαίτερη προσοχή. Σε αντίθετη περίπτωση μπορεί να προκληθούν τραυματισμοί ή βλάβη στη μονάδα.

Αυτό το εγχειρίδιο περιέχει σημαντικές οδηγίες ασφαλείας για τους χρήστες.

1.3 Οδηγίες ασφαλείας σχετικά με το ρεύμα

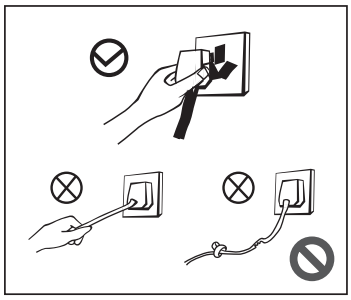

- Όταν θέλετε να αφαιρέσετε το φις από τη πρίζα μην τραβάτε το καλώδιο. Πιάστε σφιχτά το φις και αφαιρέστε το από την πρίζα.
- Για την ασφαλή λειτουργία, βεβαιωθείτε ότι δεν υπάρχει φθορά στο καλώδιο ή την πρίζα. Φ

- Η αντικατάσταση ενός φθαρμένου καλωδίου θα πρέπει να γίνεται από εξειδικευμένο προσωπικό.

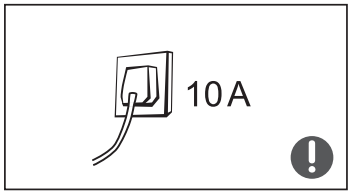

- Χρησιμοποιήστε τριπολική πρίζα τουλάχιστον 10A και βεβαιωθείτε ότι δεν χρησιμοποιείται και για άλλες συσκευές.
- Το φις του καλωδίου πρέπει να είναι σφιχτά τοποθετημένο στην πρίζα, αλλιώς μπορεί να προκληθεί πυρκαγιά. Βεβαιωθείτε ότι η πρίζα είναι σωστά γειωμένη.

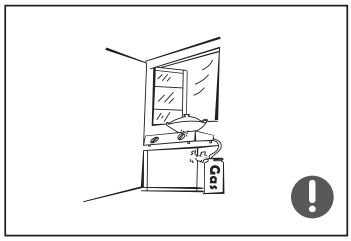

- Ο καταψύκτης λειτουργεί με ρεύμα 220-240V/50Hz. Διακυμάνσεις πάνω από 220-240V +- 10%, θα προκαλέσουν δυσλειτουργία ή βλάβη στον καταψύκτη.

- Κλείστε τη βάνα αερίου και ανοίξτε πόρτες και παράθυρα σε περίπτωση διαρροής αερίου ή άλλων εύφλεκτων αερίων. Μην βγάζετε τον καταψύκτη ή άλλες συσκευές από την πρίζα διότι μια σπίθα μπορεί να προκαλέσει πυρκαγιά.

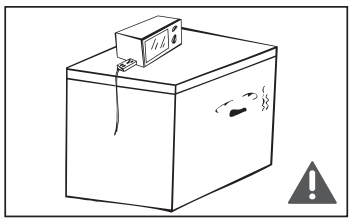

- Μην τοποθετείτε μετασχηματιστές, μαγειρικά σκεύη, φούρνους μικροκυμάτων ή άλλες συσκευές πάνω στον καταψύκτη. Μην τοποθετείτε ηλεκτρικές συσκευές στον χώρο αποθήκευσης τροφίμων.

1.4 Οδηγίες σχετικές με τη χρήση

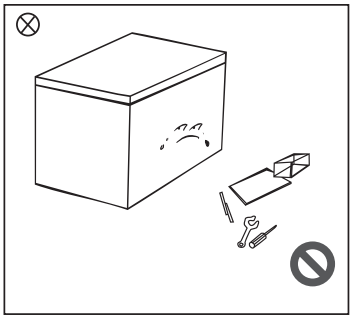

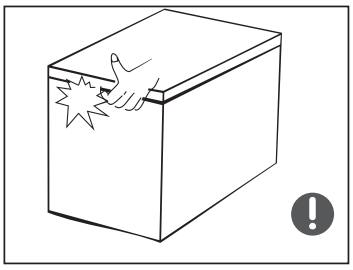

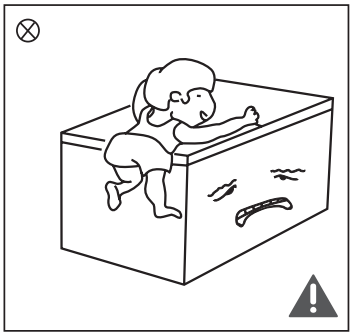

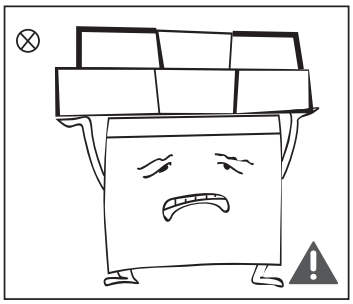

- Οποιαδήποτε επισκευή ή συντήρηση πρέπει να πραγματοποιείται από εξειδικευμένο προσωπικό. Απαγορεύεται η φθορά των ψυκτικών σωληνώσεων.
- Η αντικατάσταση τυχόν φθαρμένου καλωδίου τροφοδοσίας πρέπει να γίνεται από τον κατασκευαστή ή εξειδικευμένο προσωπικό για την αποφυγή του κινδύνου τραυματισμού.
- Τα διάκενα ανάμεσα στην πόρτα και το σώμα του καταψύκτη είναι πολύ μικρά. Επομένως μην τοποθετείτε τα χέρια σας σε αυτές τις περιοχές για να μην παγιδευτούν τα δάχτυλά σας. Μην κλείνετε απότομα την πόρτα του καταψύκτη διότι μπορεί να αποσυναρμολογηθούν εξαρτήματα.
- Μην ανοίγετε τρόφιμα ή συσκευασίες μέσα στον θάλαμο του καταψύκτη όταν αυτός λειτουργεί.
- Μην επιτρέπεται στα παιδιά να ανεβαίνουν ή να μπαίνουν μέσα στον καταψύκτη. Υπάρχει κίνδυνος εγκλωβισμού ή τραυματισμού πέφτοντας από τον καταψύκτη.
- Μην ρίχνετε νερό στον καταψύκτη προκειμένου να τον καθαρίσετε και αποφύγετε την τοποθέτησή του σε μέρη όπου υπάρχει έντονη υγρασία, διότι υπάρχει κίνδυνος φθοράς της ηλεκτρικής μόνωσης του καταψύκτη.
- Μην τοποθετείτε βαριά αντικείμενα πάνω στον καταψύκτη, διότι υπάρχει κίνδυνος τραυματισμού από την τυχόν πτώση τους κατά το κλείσιμο της πόρτας.
- Αποσυνδέστε το καλώδιο από την παροχή ρεύματος σε περίπτωση διακοπής ρεύματος ή κατά τον καθαρισμό του καταψύκτη. Μην επανασυνδέετε τον καταψύκτη στην πρίζα αν δεν παρέλθουν τουλάχιστον 5 λεπτά για την αποφυγή βλάβης του συμπιεστή.

1.5 Ερμηνεία Συμβόλων Οδηγιών Ασφαλείας

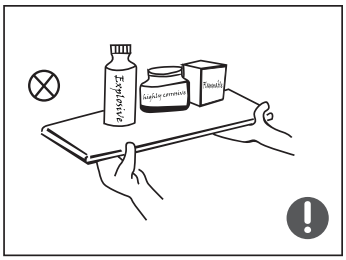

- Μην τοποθετείτε εύφλεκτα, εκρηκτικά, ασταθή και διαβρωτικά αντικείμενα μέσα στον καταψύκτη, για την αποφυγή βλάβης ή πυρκαγιάς.
- Μην τοποθετείτε εύφλεκτα υλικά κοντά στον καταψύκτη για την αποφυγή πυρκαγιάς.

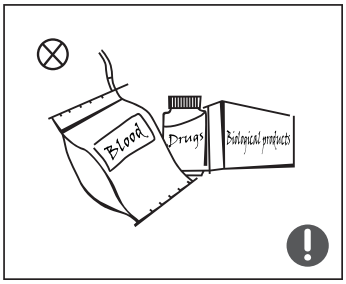

- Αυτό το προϊόν είναι οικιακός καταψύκτης και πρέπει να χρησιμοποιείται μόνο για την αποθήκευση τροφίμων. Σύμφωνα με τους εθνικούς κανονισμούς οι οικιακοί καταψύκτες δεν πρέπει να χρησιμοποιούνται για άλλους σκοπούς όπως αποθήκευση αίματος, φαρμάκων ή βιολογικών προϊόντων.

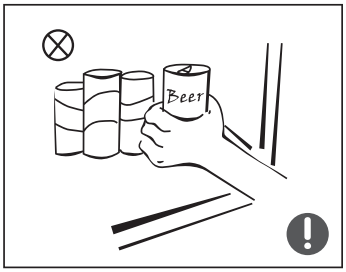

- Μην τοποθετείται στον καταψύκτη υγρά σφραγισμένα ή σε μπουκάλια, όπως μπύρες και αναψυκτικά για την αποφυγή σπασίματος ή άλλων απωλειών.

1.6 Οδηγίες ασφαλείας σχετικά με την συντήρηση των προϊόντων

- Ο καταψύκτης ενδέχεται να μην λειτουργεί σωστά όταν υπόκειται διαρκώς σε χαμηλότερες θερμοκρασίες του εύρους για το οποίο έχει σχεδιαστεί η συσκευή.
- Ανθρακούχα ποτά δεν θα πρέπει να αποθηκεύονται σε τμήματα του καταψύκτη με πολύ χαμηλή θερμοκρασία.
- Η χρονική διάρκεια αποθήκευσης των τροφίμων, ειδικά των συσκευασμένων, να μην υπερβαίνει την συνιστάμενη από τις εταιρείες τροφίμων.
- Προκειμένου να αποφύγετε την απότομη αύξηση της θερμοκρασίας στα τρόφιμά σας κατά την διαδικασία της απόψυξης, προφυλάξτε τα τρόφιμα, χρησιμοποιώντας π.χ. φύλλα εφημερίδων για να τα καλύψετε.
- Η αύξηση της θερμοκρασίας του κατεψυγμένου φαγητού κατά τη διαδικασία της συντήρησης ή της απόψυξης μπορεί να έχει σαν αποτέλεσμα την μείωση του χρόνου αποθήκευσης.
- Τα κλειδιά για τις πόρτες και τα καπάκια θα πρέπει να τοποθετούνται σε μέρη όπου δεν προσεγγίζουν τα παιδιά αποφεύγοντας τον κίνδυνο του να κλειδωθούν μέσα στον καταψύκτη.

1.7 Οδηγίες ασφάλειας σχετικά με την απόρριψη της συσκευής

Ο καταψύκτης περιέχει υγρό R290 ψυκτικό υγρό και υλικά τα οποία είναι εύφλεκτα. Οι καταψύκτες που είναι προς απόρριψη δεν πρέπει να βρίσκονται κοντά σε πηγές θερμότητας. Παρακαλούμε μεταφέρετε τον καταψύκτη σε ειδικούς οργανισμούς ανακύκλωσης για την αποφυγή καταστροφής του περιβάλλοντος.

Αφαιρέστε την πόρτα και τα ράφια του καταψύκτη και τοποθετείστε τον σε κατάλληλο μέρος ώστε να αποφευχθούν πιθανοί τραυματισμοί παιδιών που μπορεί να παίζουν με τον καταψύκτη.

2. Σωστή Χρήση των Καταψυκτών

2.1 Περιγραφή των εξαρτημάτων

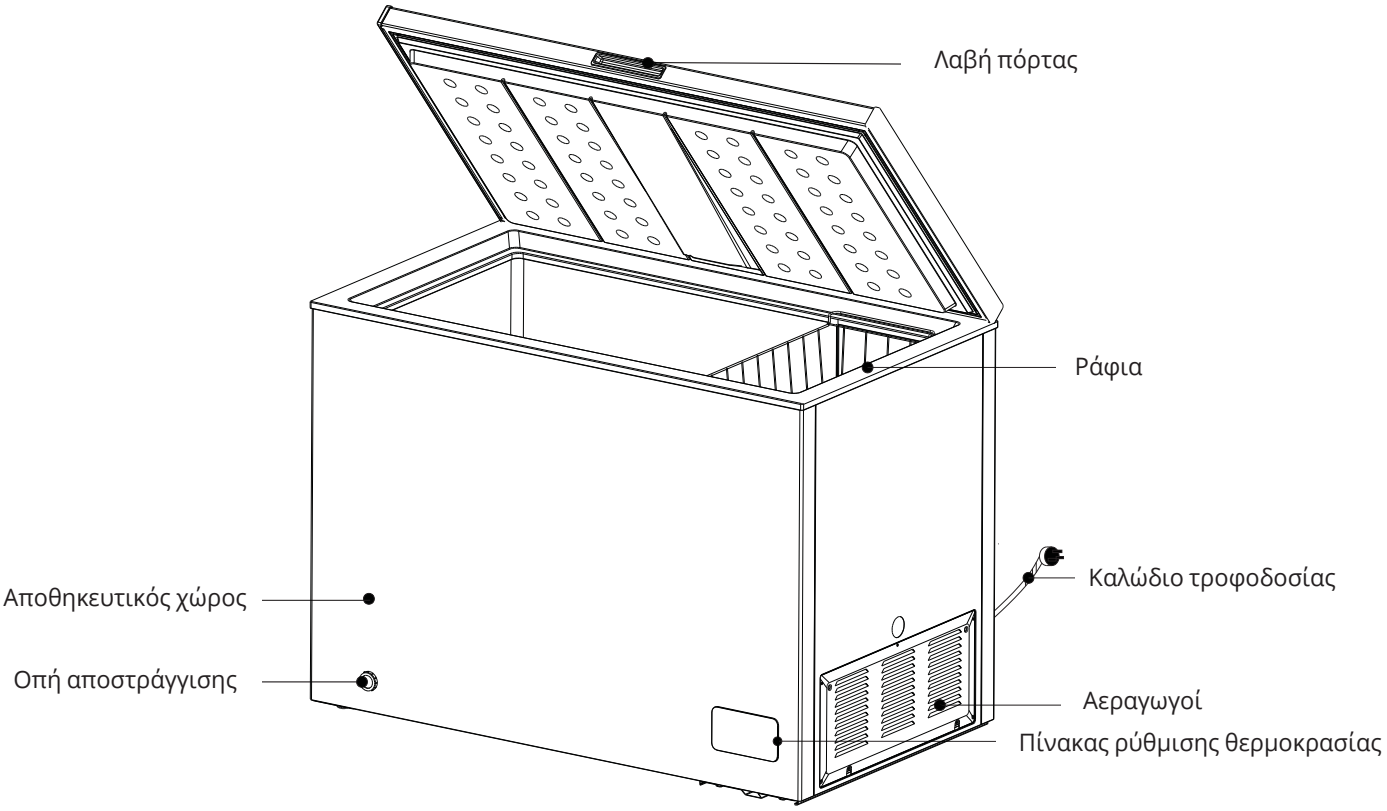

- Η χαμηλή θερμοκρασία του καταψύκτη μπορεί να διατηρήσει τα τρόφιμα φρέσκα για μεγάλο χρονικό διάστημα και χρησιμοποιείται κυρίως για την αποθήκευση κατεψυγμένων τροφίμων και για πάγο.
- Ο καταψύκτης είναι κατάλληλος για την αποθήκευση κρέατος, ψαριών , γαρίδων, ζυμαρικών, ρυζιού και άλλων τροφίμων που δεν θα καταναλωθούν σε σύντομο χρονικό διάστημα.
- Το κρέας καλό είναι να το χωρίζετε σε μικρές μερίδες για ευκολότερη πρόσβαση. Θα πρέπει να σημειωθεί ότι τα τρόφιμα θα πρέπει να καταναλώνονται πριν την αναφερόμενη ημερομηνία λήξης.

⚠ Η εμφάνιση και τα εξαρτήματα του καταψύκτη που προμηθευτήκατε μπορεί να διαφέρουν από το υπόμνημα, ανατρέξτε στην αντίστοιχη λίστα.

2.2 Έλεγχος θερμοκρασίας

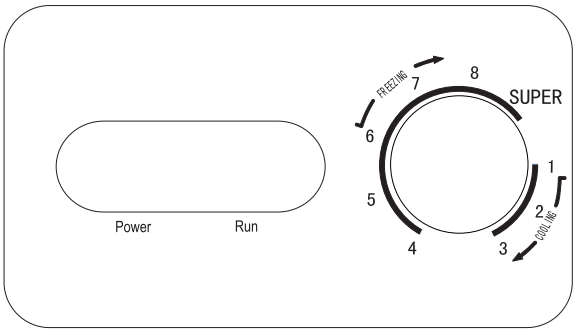

- Συνδέστε τον καταψύκτη στην παροχή ρεύματος και η ένδειξη “Power” θα ανάψει (πράσινο φως). Η ένδειξη “Run” ανάβει κατά την λειτουργία της συσκευής.
- Η θερμοκρασία εντός του καταψύκτη ρυθμίζεται από τον θερμοστάτη. Οι αριθμοί “1,2,3,4,5,6,7,8” δεν υποδεικνύουν συγκεκριμένη θερμοκρασία αλλά όσο μικρότερος ο αριθμός τόσο πιο υψηλή η θερμοκρασία και αντίστροφα.
- Οι αριθμοί “1-2-3” αναφέρονται στην συντήρηση.
- Οι αριθμοί “4-5-6-7-8-SUPER” αναφέρονται στην ψύξη.
- Όταν ο θερμοστάτης είναι γυρισμένος στο “SUPER” , ο καταψύκτης κάνει «ταχεία ψύξη» και ο μηχανισμός δεν θα σταματήσει μέχρις ότου γυρίσετε τον θερμοστάτη σε άλλη θέση.

2.3 Τοποθέτηση

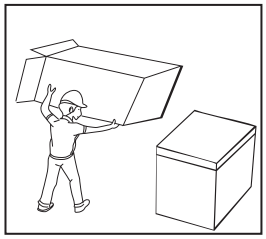

- Πριν χρησιμοποιήσετε τον καταψύκτη, αφαιρέστε όλα τα υλικά συσκευασίας συμπεριλαμβανομένων των βάσεων και ταινιών στο εσωτερικό του καταψύκτη. Αφαιρέστε το προστατευτικό φιλμ από την πόρτα και το σώμα του καταψύκτη.

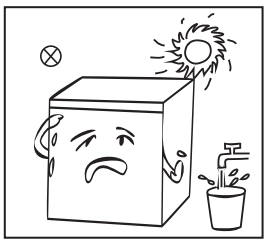

- Βεβαιωθείτε πως η συσκευή δεν βρίσκεται κοντά σε πηγές θερμότητας και αποφύγετε την απευθείας ηλιακή ακτινοβολία. Μην τοποθετείτε τον καταψύκτη σε μέρος με έντονη υγρασία για την αποφυγή εμφάνισης σκουριάς ή φθοράς της μόνωσης.

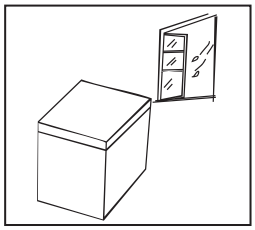

- Ο καταψύκτης θα πρέπει να τοποθετηθεί σε έναν χώρο με καλό εξαερισμό και σε επίπεδο έδαφος.

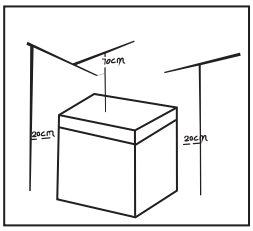

- Η απόσταση από το πάνω μέρος του καταψύκτη πρέπει να είναι μεγαλύτερη από 70cm και οι αποστάσεις στο πλαϊνό και πίσω μέρος πρέπει να είναι μεγαλύτερες από 20cm για να διευκολύνεται η μετάδοση θερμότητας.

2.4 Εκκίνηση

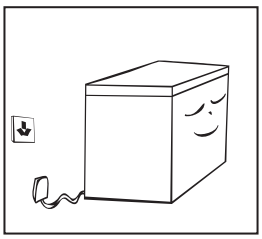

- Πριν την πρώτη εκκίνηση της συσκευής, περιμένετε μισή ώρα πριν να συνδέσετε στην παροχή ρεύματος 220-240V/50Hz.
- Ο καταψύκτης πρέπει να λειτουργεί για 2 με 3 ώρες πριν τοποθετήσετε φρέσκα ή κατεψυγμένα τρόφιμα και για τουλάχιστον 4 ώρες το καλοκαίρι , δεδομένης της υψηλότερης εξωτερικής θερμοκρασίας.

2.5 Συμβουλές για χαμηλότερη κατανάλωση

- Συνίσταται η τοποθέτηση της συσκευής στο πιο δροσερό σημείο του δωματίου, μακριά από συσκευές που παράγουν θερμότητα και την έκθεση απευθείας ηλιακή ακτινοβολία.
- Αφήστε τα τρόφιμα που είναι σε πολύ υψηλή θερμοκρασία να κρυώσουν σε θερμοκρασία δωματίου πριν τα εισάγετε στον καταψύκτη ώστε να αποφύγετε να την αλλοίωση της ποιότητάς τους.
- Βεβαιωθείτε ότι έχετε τυλίξει σωστά τα φαγητά και στεγνώστε εντελώς τα δοχεία αποθήκευσης πριν τα τοποθετήσετε στη συσκευή προκειμένου να καθυστερήσετε τη δημιουργία πάγου στο εσωτερικό.

3. Συντήρηση καταψυκτών

3.1 Καθαρισμός

- Η σκόνη που εμφανίζεται πίσω από τον καταψύκτη και το έδαφος θα πρέπει να καθαρίζεται συχνά για την βελτίωση της ψυκτικής απόδοσης και της εξοικονόμησης ενέργειας. Το εσωτερικό του καταψύκτη θα πρέπει να καθαρίζεται συχνά για την αποφυγή οσμών. Για τον καθαρισμό προτείνεται είτε βρεγμένο χαρτί, σε νερό είτε ουδέτερα απορρυπαντικά. Ο καθαρισμός θα πρέπει να ολοκληρώνεται με καθαρό νερό και στεγνό πανί. Ανοίξτε την πόρτα για να στεγνώσει το εσωτερικό και επανασυνδέστε την συσκευή στην πρίζα.

- Μην χρησιμοποιείτε σκληρά υλικά ή στιλβωτικά, όπως οδοντόπαστα, οργανικά διαλύματα(όπως οινόπνευμα, ασετόν κ.λπ..), καυτό νερό,, οξέα ή αλκαλικά διαλύματα για τον καθαρισμό του καταψύκτη, διότι μπορεί να προκληθεί φθορά στη μόνωση του καταψύκτη.
- Να χρησιμοποιείται ένα στεγνό πανί για τον καθαρισμό του θερμοστάτη και των ηλεκτρικών τμημάτων.

⚠ Για την απόψυξη και το καθαρισμό, αποσυνδέστε τον καταψύκτη από την παροχή ρεύματος.

3.2 Απόψυξη

- Η απόψυξη πραγματοποιείται χειροκίνητα.
- Πριν την απόψυξη, αποσυνδέστε τον καταψύκτη από την παροχή ρεύματος και αφαιρέστε τα τρόφιμα και τα ράφια. Ανοίξτε τις οπές αποστράγγισης και εξόδου(και τοποθετήστε την λεκάνη αποχέτευσης συμπυκνωμάτων στις οπές αποστράγγισης). Σκουπίστε με ένα υγρό μαλακό πανί τον πάγο που θα λιώσει από το εσωτερικό του καταψύκτη. Όταν μαλακώσει ο πάγος, χρησιμοποιείστε ειδικό εργαλείο για να ξύσετε τον πάγο, επιταχύνοντας τη διαδικασία.
- Πριν την απόψυξη, αφαιρέστε πρώτα τα τρόφιμα και τοποθετήστε τα σε δροσερό μέρος πριν την αφαίρεση των υπόλοιπων εξαρτημάτων.

⚠ Δεν πρέπει να χρησιμοποιηθούν μηχανικές συσκευές ή άλλα μέσα για την απόψυξη εκτός από αυτά που ορίζει ο κατασκευαστής. Βεβαιωθείτε ότι δεν προκαλείται φθορά στο ψυκτικό κύκλωμα.

3.3 Τέλος λειτουργίας

Σε περίπτωση διακοπής ρεύματος τα τρόφιμα μπορούν να διατηρηθούν για μερικές ώρες, ακόμα και το καλοκαίρι. Αποφύγετε το συχνό άνοιγμα της πόρτας και την τοποθέτηση φρέσκων τροφίμων στον καταψύκτη.
Εάν ο καταψύκτης δεν χρησιμοποιείται για μεγάλο χρονικό διάστημα, αποσυνδέστε τον από την παροχή ρεύματος, καθαρίστε τον και αφήστε ανοιχτή την πόρτα για την αποφυγή δημιουργίας άσχημων οσμών.
Μην αναποδογυρίζετε, τοποθετείτε οριζόντια ή δημιουργείτε κραδασμούς στον καταψύκτη. Η γωνία μεταφοράς δεν πρέπει να είναι πάνω από 45 μοίρες. Κρατείστε την πόρτα, κατά τη μετακίνηση.

⚠ Κατά την εκκίνηση του καταψύκτη, συστήνεται η συνεχής λειτουργία του.
Υπό κανονικές συνθήκες μην μετακινείτε τον καταψύκτη προκειμένου να μην επηρεαστεί η διάρκεια ζωής του.

4. Συχνές ερωτήσεις

Τα ζητήματα που αναφέρονται παρακάτω μπορούν να επιλυθούν από τον χρήστη.
Σε περίπτωση που το πρόβλημα συνεχίζει να υφίσταται, επικοινωνήστε με τον προμηθευτή σας.

Ο καταψύκτης δεν λειτουργεί	Ελέγξτε εάν ο καταψύκτης είναι συνδεδεμένος με την παροχή ρεύματος. Χαμηλή τάση. Ελέγξτε ότι ο θερμοστάτης βρίσκεται εντός του εύρους λειτουργίας. Διακοπή ρεύματος ή ενεργοποίηση ασφάλειας στο κύκλωμα.
Οσμή	Τα τρόφιμα με έντονη οσμή θα πρέπει να τυλίγονται επαρκώς. Ελέγξτε μήπως υπάρχει χαλασμένο τρόφιμο. Ελέγξτε μήπως το εσωτερικό του καταψύκτη χρειάζεται καθάρισμα.
Ο συμπιεστής λειτουργεί για πολύ ώρα	Κατά τη διάρκεια του καλοκαιριού είναι φυσιολογικό ο συμπιεστής να λειτουργεί περισσότερο λόγω της υψηλότερης εξωτερικής θερμοκρασίας. Μην τοποθετείτε πολλά τρόφιμα στον καταψύκτη. Μην τοποθετείτε ζεστά τρόφιμα στον καταψύκτη. Έχει δημιουργηθεί παχύ στρώμα πάγου (είναι απαραίτητη η απόψυξη)
Η ενδεικτική λυχνία δεν ανάβει	Ελέγξτε αν ο καταψύκτης είναι συνδεδεμένος με την παροχή ρεύματος ή αν η ενδεικτική λυχνία έχει καεί.
Η πόρτα του καταψύκτη δεν κλείνει σωστά	Η πόρτα εμποδίζεται από συσκευασίες τροφίμων. Υπάρχει υπερβολική ποσότητα τροφίμων. Ο καταψύκτης γέρνει.
Δυνατός θόρυβος	Ελέγξτε αν τα τρόφιμα έχουν τοποθετηθεί σωστά. Ελέγξτε αν ο καταψύκτης είναι σε επίπεδο έδαφος. Ελέγξτε αν τα επιμέρους εξαρτήματα
Δυσκολία στο άνοιγμα της πόρτας	Η διαφορά πίεσης μεταξύ του εσωτερικού και εξωτερικού του ψυγείου μπορεί να δημιουργήσει μια παροδική δυσκολία ανοίγματος της πόρτας. Αυτό είναι ένα φυσιολογικό φαινόμενο και οφείλεται στη διαφορά θερμοκρασίας.
Εκπομπή θερμότητας από τον συμπυκνωτή	Κατά τη λειτουργία της συσκευής, ειδικά κατά τους καλοκαιρινούς μήνες, μπορεί να εκλύεται θερμότητα από τον καταψύκτη που οφείλεται στην εκπομπή θερμότητας από τον συμπυκνωτή και είναι φυσιολογικό. Το φαινόμενο των συμπυκνωμάτων εμφανίζεται στις εξωτερικές επιφάνειες και στην πόρτα του καταψύκτη όταν υπάρχει υψηλή σχετική υγρασία. Αυτό είναι ένα φυσιολογικό φαινόμενο και μπορείτε να τα απομακρύνετε με ένα στεγνό πανί.
Ήχος ροής – κρότου	Καθώς ρέει το ψυκτικό υγρό στο ψυκτικό κύκλωμα, παράγει ένα θόρυβο ο οποίος είναι φυσιολογικός και δεν επηρεάζει την ψυκτική απόδοση. Ένας συνεχόμενος ήχος θα ακούγεται κατά την ενεργοποίηση, απενεργοποίηση του συμπιεστή και κατά τη λειτουργία του καταψύκτη. Η ηλεκτρομαγνητική βαλβίδα ή ο ηλεκτρικός διακόπτης παράγουν έναν ήχο σαν κρότο ο οποίος είναι φυσιολογικός και δεν επηρεάζει τη λειτουργία.

Τα παραγγελθέντα μέρη του παρακάτω πίνακα μπορούν να προμηθευτούν απο την Inventor

Ανταλακτικό μέρος	Προμηθευμένο από	Ελάχιστος χρόνος που απαιτείται
θερμοστάτες	Επαγγελματικό προσωπικό συντήρησης	7 έτη απο την εμφάνιση του τελευταίου μοντέλου στην αγορά
αισθητήρες θερμοκρασίας	Επαγγελματικό προσωπικό συντήρησης	7 έτη απο την εμφάνιση του τελευταίου μοντέλου στην αγορά
πλακέτες τυπωμένων κυκλωμάτων	Επαγγελματικό προσωπικό συντήρησης	7 έτη απο την εμφάνιση του τελευταίου μοντέλου στην αγορά
πηγές φωτός	Επαγγελματικό προσωπικό συντήρησης	7 έτη απο την εμφάνιση του τελευταίου μοντέλου στην αγορά
χειρολαβές πόρτας	Επαγγελματίες ί επισκευαστές και τελικοί χρήστες	7 έτη απο την εμφάνιση του τελευταίου μοντέλου στην αγορά
μεντεσέδες πόρτας	Επαγγελματίες, επισκευαστές ή τελικοί χρήστες	7 έτη απο την εμφάνιση του τελευταίου μοντέλου στην αγορά
δίσκοι	Επαγγελματίες, επισκευαστές ή τελικοί χρήστες	7 έτη απο την εμφάνιση του τελευταίου μοντέλου στην αγορά
καλάθια	Επαγγελματίες, επισκευαστές ή τελικοί χρήστες	7 έτη απο την εμφάνιση του τελευταίου μοντέλου στην αγορά
περιβλήματα πόρτας	Επαγγελματίες, επισκευαστές ή τελικοί χρήστες	10 έτη απο την εμφάνιση του τελευταίου μοντέλου στην αγορά

Παρακαλούμε σκανάρετε τον κωδικό QR code στην ετικέτα ενεργειακής απόδοσης προκειμένου να προμηθευτείτε το εγχειρίδιο επισκευής.

Εκτεταμένη εύκρατη: ‘η συγκεκριμένη συσκευή ψύξης προορίζεται να χρησιμοποιείται σε θερμοκρασίες περιβάλλοντος μεγέθους από 10 °C έως 32 °C’;

Εύκρατη: ‘η συγκεκριμένη συσκευή ψύξης προορίζεται να χρησιμοποιείται σε θερμοκρασίες περιβάλλοντος μεγέθους από 16 °C έως 32 °C’;

Υποτροπική: ‘η συγκεκριμένη συσκευή ψύξης προορίζεται να χρησιμοποιείται σε θερμοκρασίες περιβάλλοντος μεγέθους από 16 °C έως 38 °C’;

Τροπική: ‘η συγκεκριμένη συσκευή ψύξης προορίζεται να χρησιμοποιείται σε θερμοκρασίες περιβάλλοντος μεγέθους από 16 °C έως 43 °C’;

Υποβολή Εγγύησης

- **Επισκεφθείτε τη σελίδα μας και ενεργοποιήστε την εγγύησή σας μέσω του παρακάτω link ή σκανάροντας το QR code**

https://www.inventoraircondition.gr/egiisi-inventor

- **Συμπληρώστε όλα τα πεδία όπως φαίνονται παρακάτω**

Για να ενεργοποιήσετε την εγγύηση, παρακαλούμε συμπληρώστε τα παρακάτω πεδία

Στοιχεία ιδιοκτήτη

Ονοματεπώνυμο*

Διεύθυνση*

Τ.Κ.*

Τηλέφωνο*

Διεύθυνση email*

Να εγγραφώ στο newsletter της Inventor

Στοιχεία μηχανήματος

Τύπος μηχανήματος*

Σειριακός αριθμός μηχανήματος*

Ημερομηνία αγοράς μηχανήματος*

Αριθμός παραστατικού*

Επιπλέον στοιχεία

* Απαραίτητο πεδίο

Αποστέλλοντας τη φόρμα εγγύησης αποδέχεστε τους **όρους και τις προϋποθέσεις.**

ΑΠΟΣΤΟΛΗ

☑ Μόλις ολοκληρωθεί η υποβολή της εγγύησης θα λάβετε την επιβεβαίωση κατοχύρωσης στο email σας

FREEZER
CHEST FREEZER

Scan here to download the latest version of this manual.
Σαρώστε εδώ για να κατεβάσετε την τελευταία έκδοση του εγχειριδίου.