

A I R C O N D I T I O N I N G S Y S T E M S

Models: IKI-09  
IKI-12  
IKI-18  
IKI-24  
IKI-36  
IKI-45  
IKI-50



## Floorceiling Unit Owner's Manual



66129903851

Thank you for choosing  
INVENTOR air conditioning  
system. For correct use of  
this unit, please read this  
manual carefully and keep it  
for future reference.



Operating Instructions	Safety Considerations		1
	Component Description	Wire controller(standard fitting)	2
		Turning On/Off Unit	3
		Fan Control	3
		Temperature Setting	3
		Swing Function Setting	4
		Sleep Function Setting	4
	Operating Instructions for Line Controller	Operating Mode Setting	5
		Timer Setting	6
		Energy Saving Setting	6
		Display of Outdoor Ambient Temperature	7
		Power-fail Memory Function Setting	7
		Debug Function	7
		Failure Display	8
	Operation of Remote Controller		9
	Unit Function		18
	Wire controller (with week timer functions)		20
	Part Names and their Functions		28
Installation Instructions for Air Duct	Maintenance		29
	Operating Guide		30
	Precautions		31
	Checking Before Contact The Service Man		32
	Indoor Unit Installation		33
	Outdoor Unit Installation		36
	Profile Dimensions of Outdoor Unit		38
	Schematic Diagram of Unit Line Connection		39
	Position and Method of Installing Wire Controller		41
	Connecting Pipe Preparation		44
	Drain Piping Work		48
	Routine Check after Installation		49
	Test Running		50



## Safety Considerations

---

Please read this manual carefully before use and operate correctly as instructed in the manual.

1. You are specially warned to note the two symbols below.:



**WARNING!:** A symbol indicating that improper operation might cause human death or severe injuries.

A symbol indicating that improper operation might cause human injury or property damage.



### **WARNING!**


- This unit shall be used in the houses, offices, restaurants, residences or similar places.
- Please seek an authorized repair station for installation work. Improper installation might cause water leakage, electric shock or fire.
- Please install at a place strong enough to support the weight of air conditioner unit. If not, the air conditioner unit might fall down and cause human injury or death.
- To ensure proper drainage, the drainage pipe shall be correctly installed according to installation instructions. Take proper measures for heat preservation to prevent condensing. Improper installation of pipes might cause leakage and wet the articles in the room.
- Do not use or store flammable, explosive, poisonous or other dangerous substances beside the air conditioner.
- In case of trouble (e.g. burnt smell), please immediately cut off the main power of air conditioner unit.
- Keep air flow to avoid shortage of oxygen in the room.
- Never insert your finger or any objects into air outlet and inlet grill.
- Never plug or unplug the power cable directly to start or stop the air-conditioning unit.
- Please take constant care to check if the mounting rack is damaged after long use.
- Never modify the air conditioner. Please contact the dealer or professional installation workers for repair or relocation of the air conditioner.
- The appliance shall not be installed in the laundry.



### **WARNING!:**

- The installation, cleaning and maintenance work must be done by a qualified person. Do not do such work by yourself.
- Before installation, please check the power supply for compliance with the ratings on nameplate. Check the power safety as well.
- Before use, please check and confirm if the cables, drainage pipes and pipelines are correctly connected, hence to eliminate the risk of water leakage, refrigerant leakage, electric shock or fire.
- Main power must be securely earthed to ensure effective grounding of air conditioner unit and avoid the risk of electric shock. Please do not connect the earthing cable to coal gas pipe, water pipe, lightning rod or telephone line.
- Once started, the air conditioner shall not be stopped at least after 5 minutes or longer; otherwise the oil return to compressor may be affected.
- Do not let the child to operate the air conditioner unit.
- Do not operate the air conditioner unit with wet hands.
- Please disconnect the main power before cleaning the air conditioner or replacing the air filter.(Operating by professional)
- Please disconnect the main power if to put the air conditioner unit out of use for a long period.
- Please do not expose the air conditioner unit directly under corrosive environment with water or moisture.
- Please do not foot on or place any goods on air conditioner unit.
- After electrical installation, the air conditioner unit shall be energized for electrical leakage test.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard .
- An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.
- The appliance shall be installed in accordance with national wiring regulations.
- The temperature of refrigerant circuit will be high, please keep the interconnection cable away from the copper tube.

## Wire controller (standard fitting)

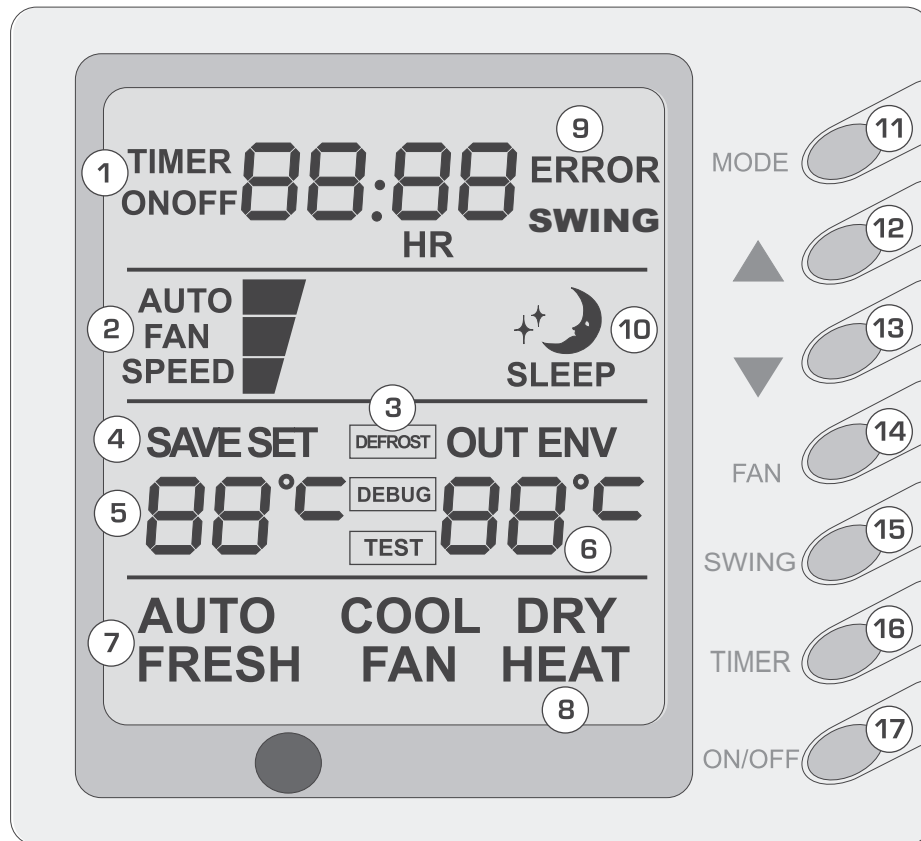

### Composition of wire controller

1	Timing display
2	Fan speed display (Auto, High speed, Medium speed, Low speed)
3	Defrosting status display
4	Energy saving status display
5	Set temperature display
6	Ambient temperature display
7	Fresh air status display (not supplied)
8	Mode (cooling, dehumidifying, fan, heating, auto)


9	Failure status display
10	Sleep status display
11	Mode key
12	Set temperature increase key
13	Set temperature decrease key
14	Fan speed key (fresh air setting)
15	Swing key (outdoor environment temperature check)
16	Timing key
17	ON/OFF key



- Never install the wire controller in a place where is water leakage.
- Avoid bumping, throwing, tossing or frequently opening the wire controller.


# Operating instructions of wire controller

## Turning ON/OFF unit

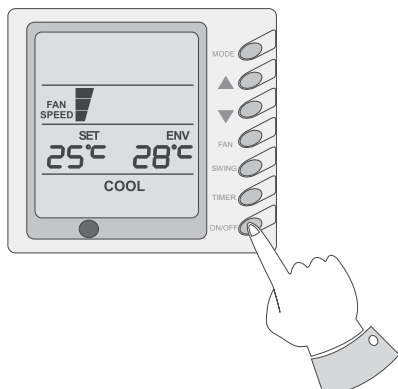

Press the ON/OFF key, then the unit shall start up. Press the ON/OFF key again, then the unit shall shut off.

## Fan control (the figures show the relevant display areas)

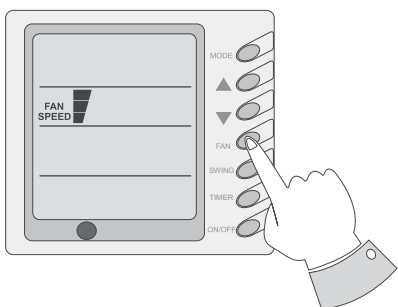


If the fan control key is pressed consecutively, the fan speed shall change as per the following sequence:

→ Low speed → Medium speed → High speed → Auto

In the dehumidifying mode: The fan speed shall be automatically set as low.

## Temperature setting

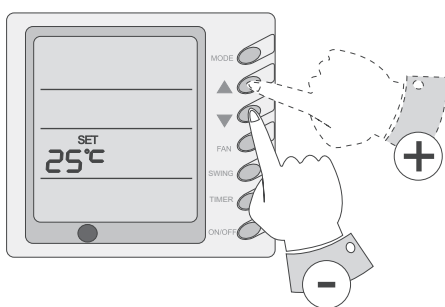


Press the temperature setting key (▲) to increase the set temperature; press the temperature setting key (▼) to decrease the set temperature (when pressing the keys once, the temperature shall increase or decrease by 1 °C). NOTE: key lock function: when the (▲) and (▼) key are pressed simultaneously for 5 seconds, the set temperature indicating area shall display "EE" and all keys response shall be shut off; press the two keys simultaneously for 5 seconds again, the key lock function shall be released. When the wire controller is locked by remote monitor or centralized controller, the keys of the wire controller and the signal of the remote controller are all locked and invalidated, and then the set temperature indicating area shall display "CC". Range of temperature setting under various modes:

Heating: 16 °C ~ 30 °C Cooling: 16 °C ~ 30 °C

Dehumidifying: 16 °C ~ 30 °C

Fan: No temperature setting function

### Swing function setting

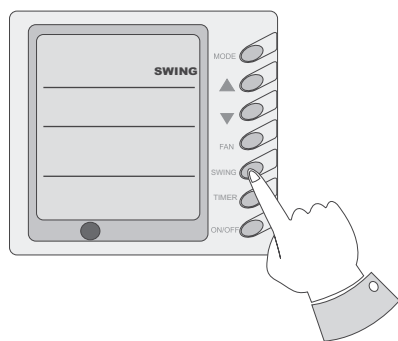


Press Swing button then the swing mode will be operated by the air conditioner.

Repress Swing button once to stop swing mode.

Note: There is no swing mode for duct type indoor unit

### Sleep function setting

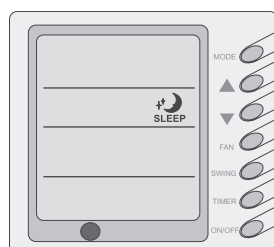

When under the cooling or dehumidifying mode, after receiving the SLEEP order for 1 hour, the previous set temp.  $T_{set}$  will be risen for  $1^{\circ}\text{C}$ , and another  $1^{\circ}\text{C}$  will be risen after 2 hours that means that the temperature been risen  $2^{\circ}\text{C}$  within 2 hours. Then the unit will run according to this set temp.


When under the heating mode, after receiving the SLEEP order for 1 hour, the previous set temp.  $T_{set}$  will be lower for  $1^{\circ}\text{C}$ , and another  $1^{\circ}\text{C}$  will be lower after 2 hours that means that the temperature been lowered  $2^{\circ}\text{C}$  within 2 hours. Then the unit will run according to this set temp.

There is no SLEEP mode under fan mode.

Note: The wired remote controller has no SLEEP mode button; if SLEEP mode is needed to be set, complete the procedure by wireless remote controller.



## Operating Mode Setting

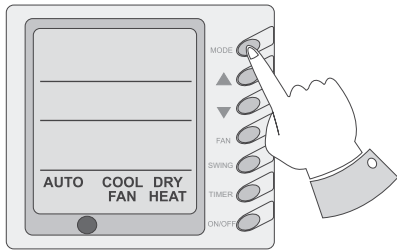

this key is pressed consecutively, the operating mode shall change as per the following sequence:

→Cooling →Dehumidifying →Fan →Heating →Auto

When the unit operates under "Cooling" mode, "COOL" shall be displayed. Now the set temperature must be lower than the ambient temperature. Now if the set temperature is higher than the ambient temperature, the unit shall not produce cooling effect but shall only operate under Fan mode.

When the unit operates under "Dehumidifying" mode, "DRY" shall be displayed. Now the interior fan shall operate in the manner of low speed air supply within a certain range of temperatures. The dehumidifying effect of this mode is better than that of the Cooling mode and saves more energy.


When the unit operates under "Heating" mode, "HEAT" shall be displayed. Now the set temperature must be higher than the ambient temperature; Now if the set temperature is lower than the ambient temperature, the heating function shall not be started.

When the unit operates under "Fan" mode, "FAN" shall be displayed. When the unit operates under "Auto" mode, "AUTO" shall be displayed and the unit shall adjust its operating mode automatically according to the ambient temperature.

When the unit operates under Heating mode and the outdoor temperature is low and the humidity is high, frost shall produce at the outdoor unit. Now the heating efficiency shall be decreased. When frosting happens, the controller shall automatically start to defrost, and "DEFROST" shall be displayed.


Note: Cooling only type unit does not have heating mode and when energy saving is set the Auto mode shall be invalidated.

## Timer Setting

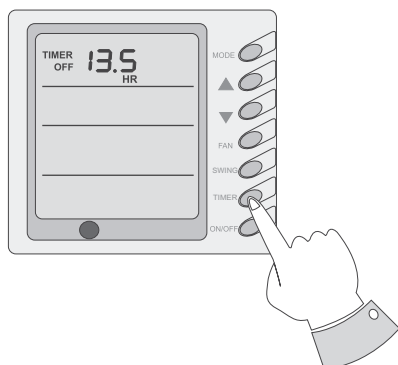


When the unit is shut off, timing start can be set; After the unit is started up, timing shutoff can be set. After the "TIMER" key is pressed, the unit enters the timing set status and the word "TIMER" flashes on the display. Now user can press (▲) or (▼) key to increase or decrease the set time. Press the "TIMER" key again and then the timing shall go into effect. Now the unit starts to count the time passed. When the unit is under timing status, you can cancel timing by pressing the "TIMER" key. The range of set time is between 0.5 to 24 hours.

## Energy Saving Setting

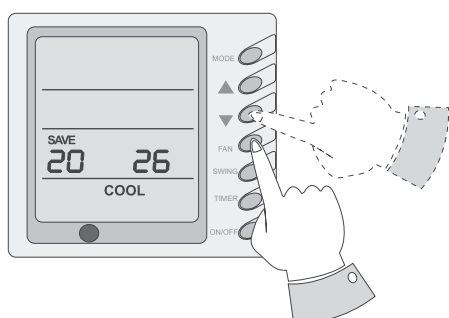


When the unit is shut off, press the "FAN" key and the (▼) simultaneously for 5 consecutive seconds to activate the energy saving setting menu. Now "SAVE" and "COOL" are displayed (In case it is the first time to set energy saving, the initial value shall be displayed: 26). The lower limit of temperature shall be displayed on the set temperature and the temperature value under setting shall flash. Set the lower limit of cooling temperature using the (▲) key or the (▼) key (the lower limit temperature can be selected from the range between 16-30). Press the "ON/OFF" key to confirm the setting; Also use the (▲) key or the (▼) key to set the upper limit of temperature and the temperature value shall flash on the ambient temperature area (OUT ENV area) (the upper limit temperature can be selected from the range between 16-30). Press the "ON/OFF" key to confirm the setting. Please pay attention that the upper limit temperature must be higher than the set lower limit temperature; Otherwise the system shall regard the higher temperature as the upper limit temperature and the lower one as the lower limit temperature. Press the "MODE" key to complete the energy saving setting for the modes of cooling and dehumidifying and turn to the energy saving setting for the heating mode (Cooling only unit does not have this function). Now the LCD displays "SAVE" and "HEAT". After setting is completed, press the "FAN" key and the (▼) key simultaneously for 5 consecutive seconds to exit the setting of energy saving. After the energy saving setting interface is activated, the system shall exit the interface if there is no any operation within 20 seconds after the last key input, and the normal shutoff status interface shall be displayed. After the above settings are completed, the system shall display "SAVE". Now the set temperature shall not exceed the temperature range of the energy saving setting before. For example, the lower cooling limit is set as 23 °C and the upper cooling limit is set as 27°C for the energy saving temperature setting in left. so the cooling temperature can only be selected from the range of 23 °C to 27°C by using the remote controller or the wire controller later. If the upper limit temperature is the same as the lower limit temperature, the system can only operate at such temperature under relevant modes. Remove of energy saving setting: To remove the energy saving setting after it takes into effect, you can press the "FAN" and the (▼) key simultaneously for 5 consecutive seconds when the unit is shut off. But the value set before will not be cleared but as the initial set temperature for the next energy saving setting. After the unit is disconnected to power supply, the energy saving setting shall be stored. The setting still functions when the unit is connected to power supply again. If the energy saving mode is set, the sleep mode and the auto mode shall be invalidated

## Display of Outdoor Ambient Temperature

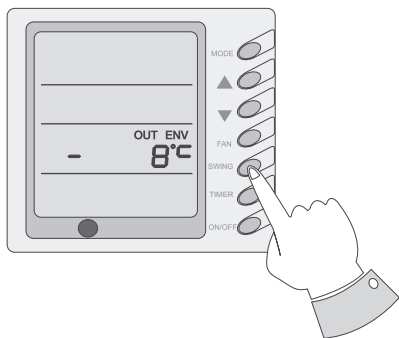


Under normal conditions, the “OUT ENV” column shall only display the indoor temperature. Press the “SLEEP” key for 5 consecutive seconds when the unit is shut off or start up, the LCD shall display “OUT ENV”. After the outdoor temperature is displayed for 10 seconds, the system shall return to the display interface of indoor temperature. Note: If not equipped with an outdoor ambient sensor, the unit shall not have this function.

## Power-fail Memory Function Setting

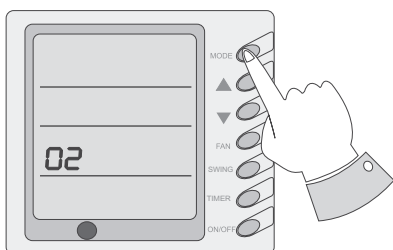

Press and hold the “MODE” key for 10 seconds when the unit is shut off to switch set values so as to decide if the unit operating status or shutoff status shall be memorized after a power fail. If the set temperature area displays 01, it means the unit operating status or shutoff status shall be memorized after a power fail; 02 means the operating status or shutoff status shall not be memorized. Press the “ON/OFF” key to store the set value and exit the setting.

## Debug Function Setting

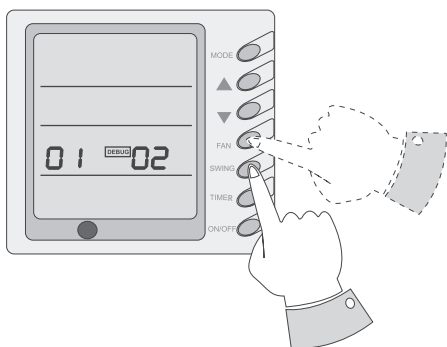

When the unit is shut off, press the “FAN” key and the “SWING” key Simultaneously to activate the debug menu. Now the LCD displays “DEBUG”. Press the “MODE” key to select setting item and use the ( ▲ ) key or the ( ▼ ) key to set actual value.


### Setting of Ambient Temp. Sensor

Under the debug mode , press the “MODE” key so as to display “01” On the set temperature area (at the left of “DEBUG”). The OUT ENV area (at the right of “DEBUG”) displays setting status. Now use the ( ▲ ) key or the ( ▼ ) key to select from the following two settings:

The indoor room temperature is measured at the air intake(Now the OUT ENV area displays 01).

The indoor room temperature is measured at the wire controller (Now the OUT ENV area displays 02).

The indoor room temperature is measured at the wire controller when the mode is 'heating' or 'auto'. At other modes, it is measured at the air intake (Now the OUT ENV area displays 03) ,The default is 03.

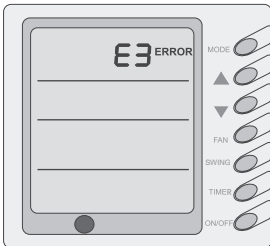Failure Display			
		<p>When there is failure in the unit operation, “ERROR” will flash on the LCD of the wire controller and the code of failure will also be displayed. When there are multiple failures at the same time, the codes of failures will be displayed one after one on the wire controller. The first digit of the code denotes the system number. When there is only one system, it will display the system number 1. The last two digits denote the detailed failure code. For example, the code in left means low pressure protection of compressor.</p>	
The Codes of Failure Definitions are as Follows:			
Fault code	Fault	Fault code	Fault
E0	Pump Failure	F0	Failure of Indoor Room Sensor at Air Intake
E1	Compressor High Pressure Protection	F1	Failure of Evaporator Temp. Sensor
E2	Indoor Frost-Proof Protection	F2	Failure of Condenser Temp. Sensor
E3	Compressor Low Pressure Protection	F3	Failure of Outdoor Ambient Sensor
E4	Compressor Exhaust High Temperature Protection	F4	Failure of Exhaust Temp. Sensor
E5	Compressor Overheat	F5	Failure of Indoor Room Sensor at Wire Controller
E6	Communications Failure		
E8	Indoor Fan Protection		
E9	Full Water Protection		


E5 Material Malfunction Will Be Showed By The Indicator Light On The Mother Board Of Outside Unit

# Operation of Remote Controller

## ● Name and Function-Remote Control

Note:


- Be sure that there are no obstructions.
- Don't drop or throw the remote controller.
- Don't place the remote controller in a location exposed to direct sunlight.

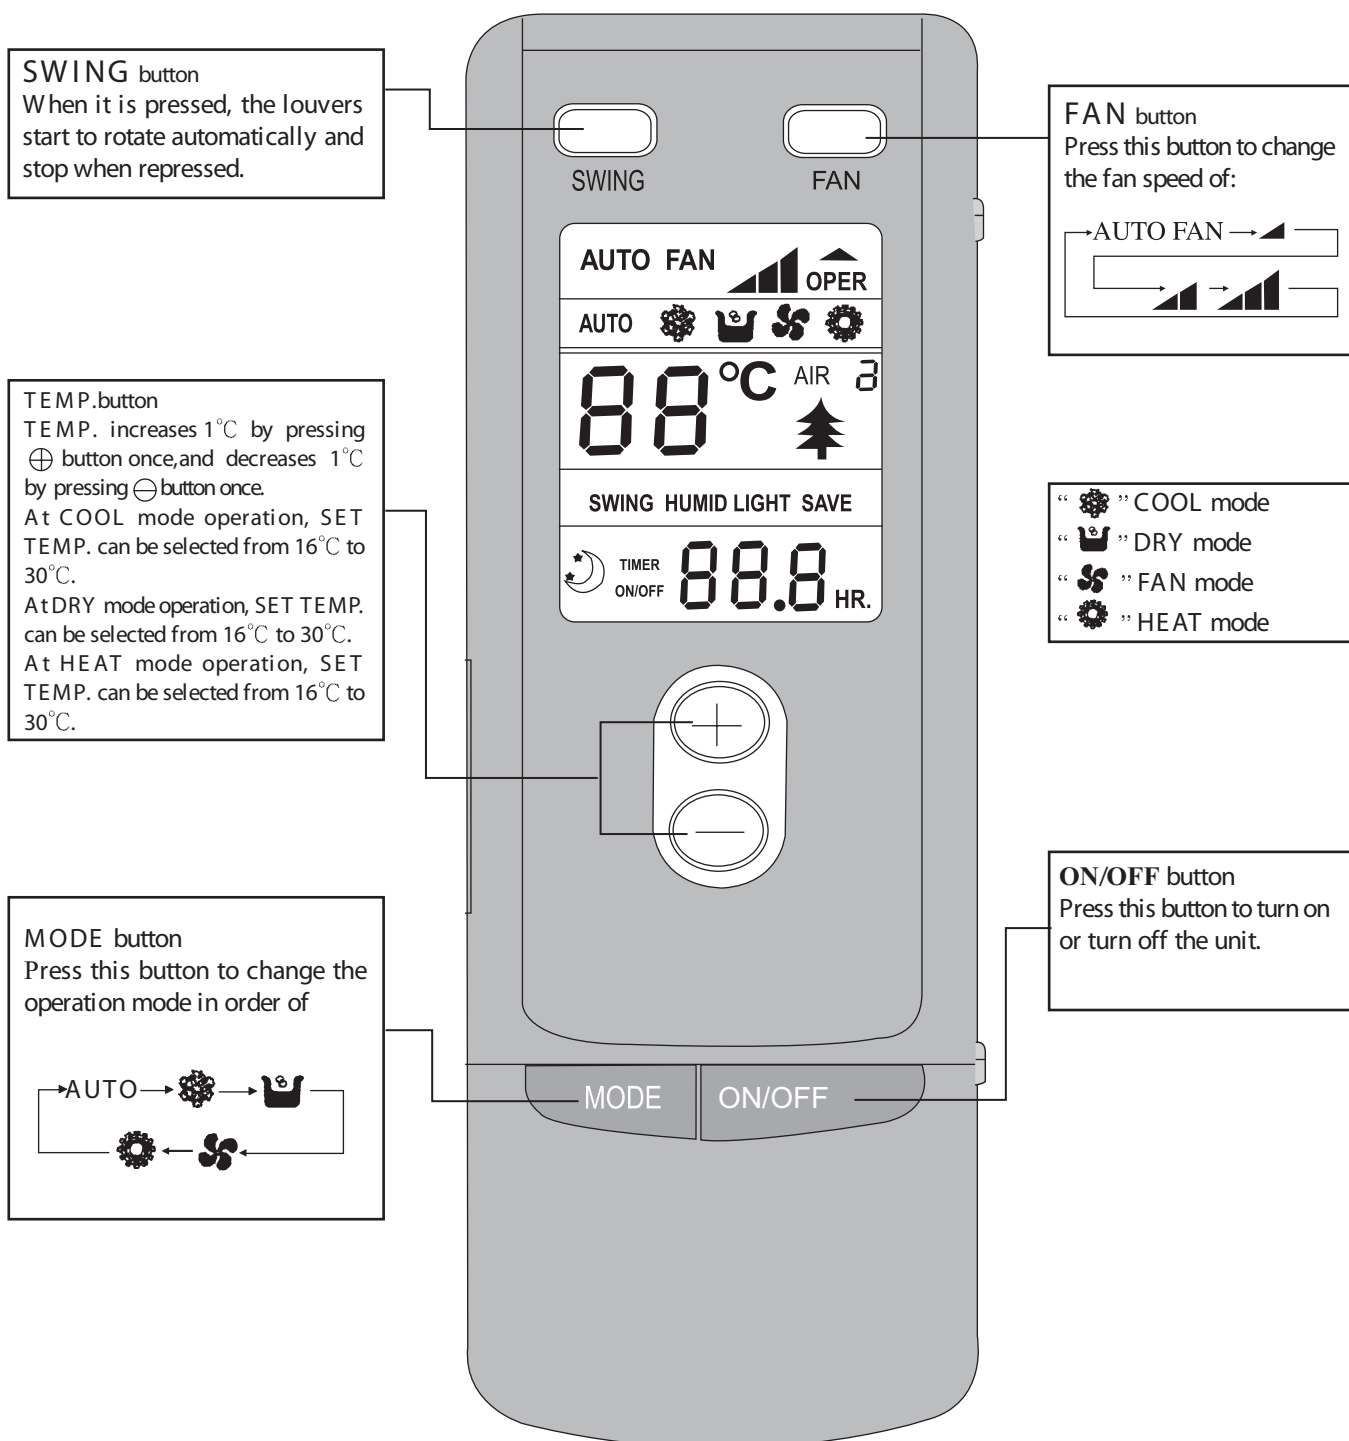

## Remote control operation procedure

### ● Name and Function-Remote Control. (Remove the cover)


Note: This type of remote controller is a kind of new current controller. Some buttons of the controller which are not available to this air conditioner will not be described below.

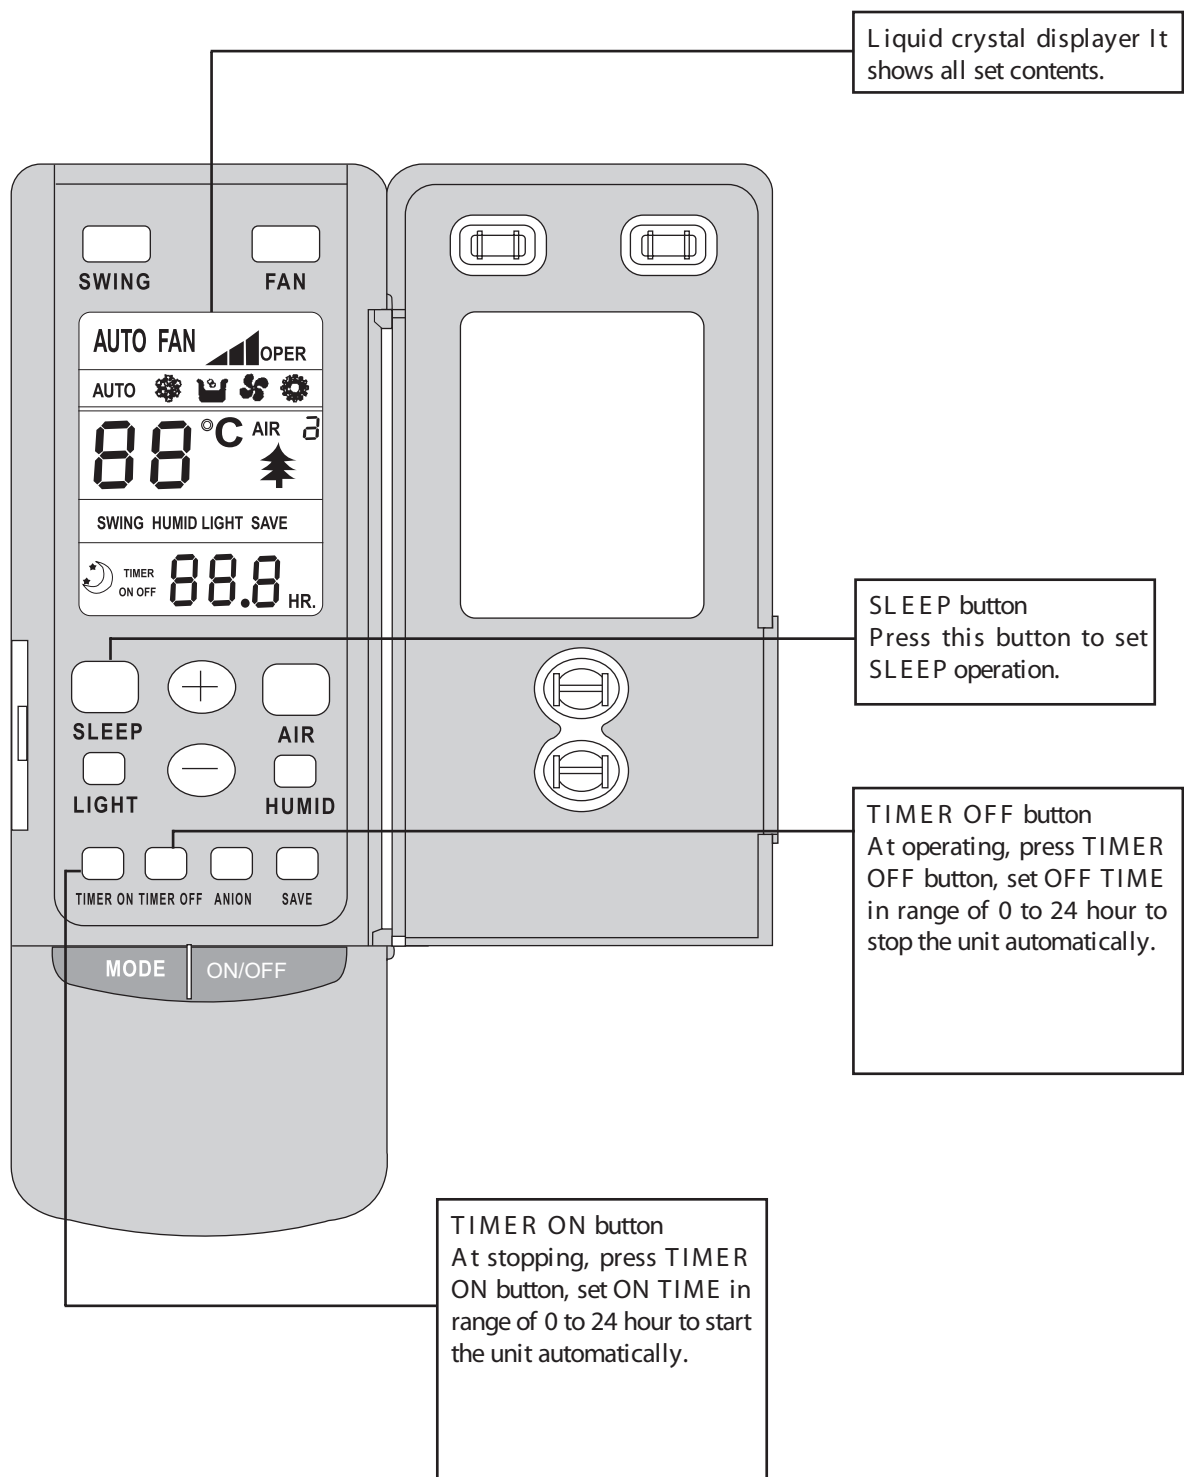

## Remote control operation procedure

### ● COOL mode operation procedure


- According to difference between room temp. and set temp., microcomputer can control cooling on or not.
- If room temp. is higher than set temp., compressor runs at COOL mode.
- If room temp. is lower than set temp., compressor stops and only indoor fan motor runs.
- Set TEMP. should be in range of 16°C to 30°C.

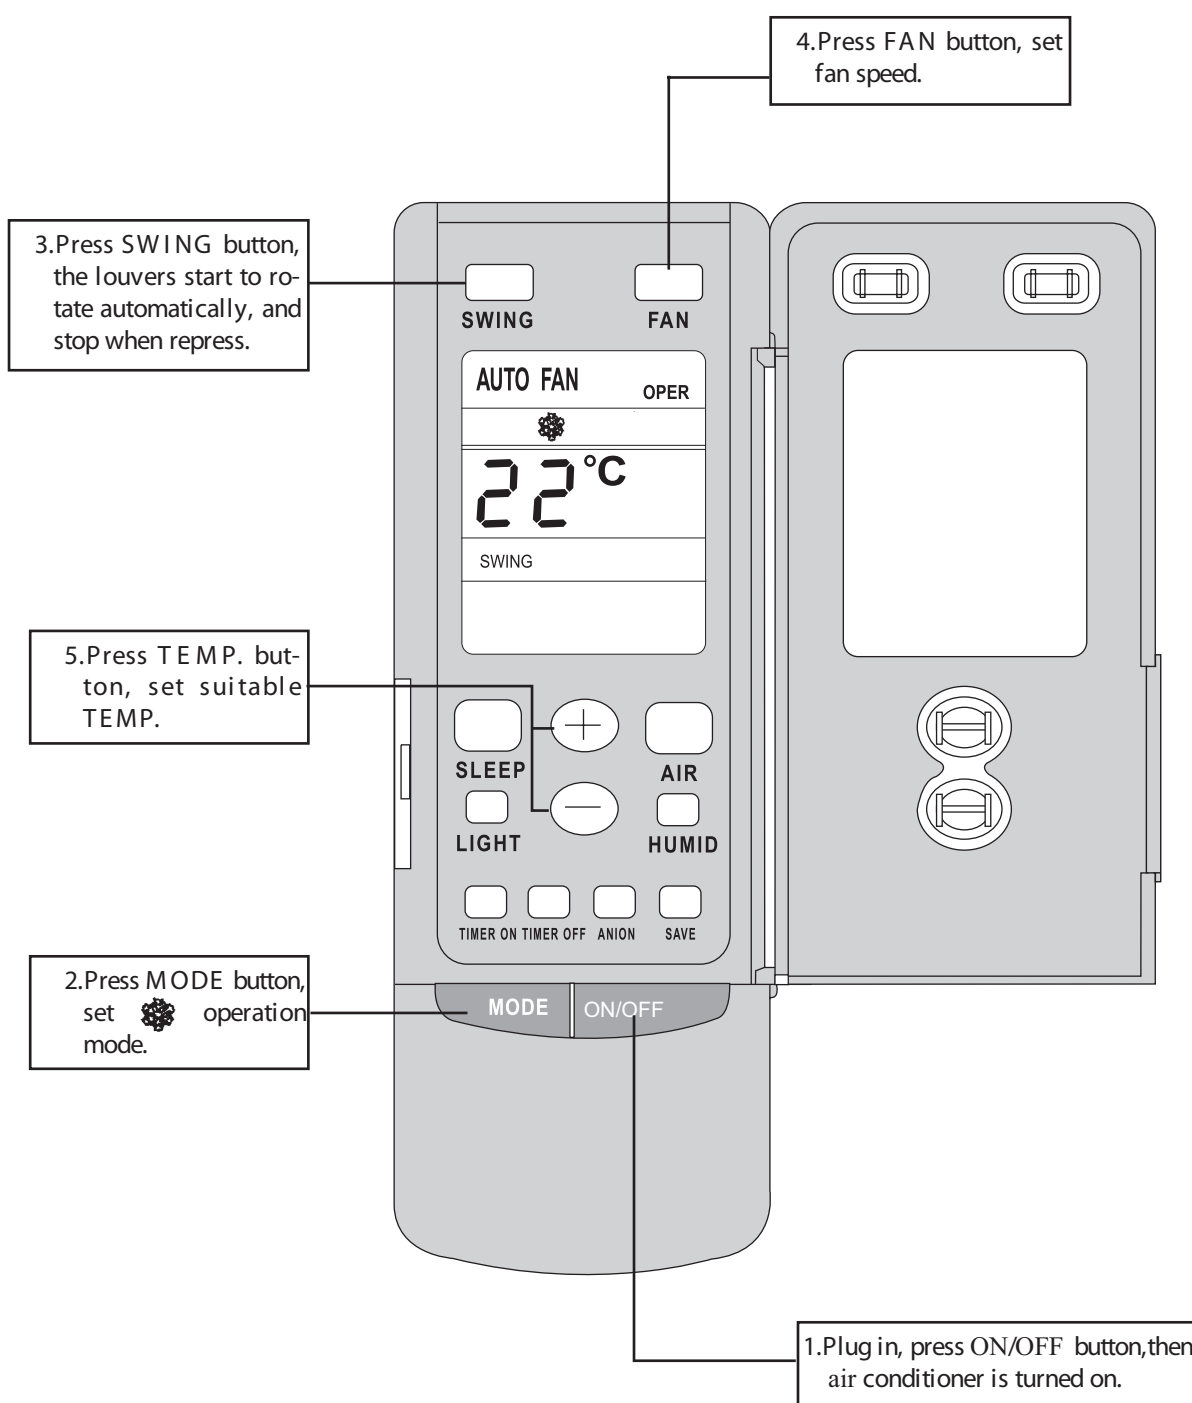

## Remote control operation procedure

### ● HEAT mode operation procedure

- If room temp. is lower than set temp., compressor runs at HEAT mode;
- If room temp. is higher than set temp., compressor and outdoor fan motor stop, only indoor fan motor runs.
- Set TEMP. should be in range of 16°C to 30°C.

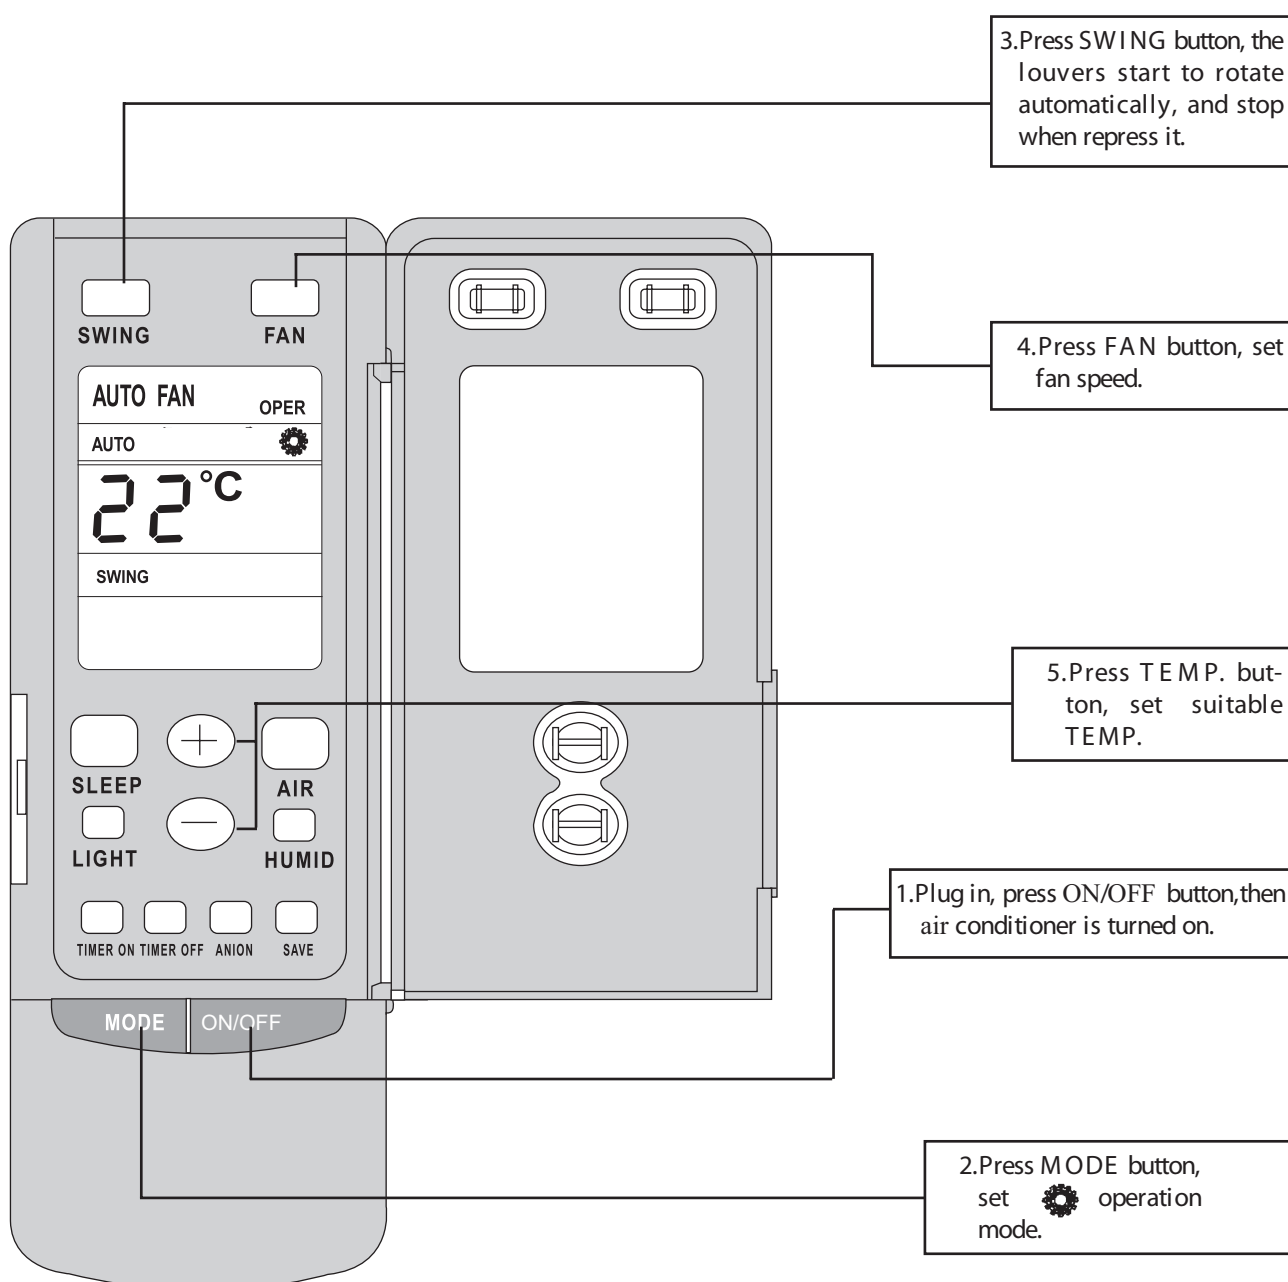




## Remote control operation procedure

### ● DRY mode operation procedure


- If room Temp. is more than 2°C below Set TEMP., compressor and outdoor unit fan motor stop, indoor unit fan motor runs as low speed.
- If room Temp. is between  $\pm 2^{\circ}\text{C}$  of Set TEMP., the compressor and outdoor unit fan motor will run for 6 minutes and stop for 4 minutes, and always in such a cycle, the indoor unit fan motor will run at low speed.
- If room Temp. is more than 2°C above Set TEMP., compressor and outdoor unit fan motor run as COOL mode, indoor unit fan motor runs at low speed.
- Set TEMP. should be in range of 16°C to 30°C.

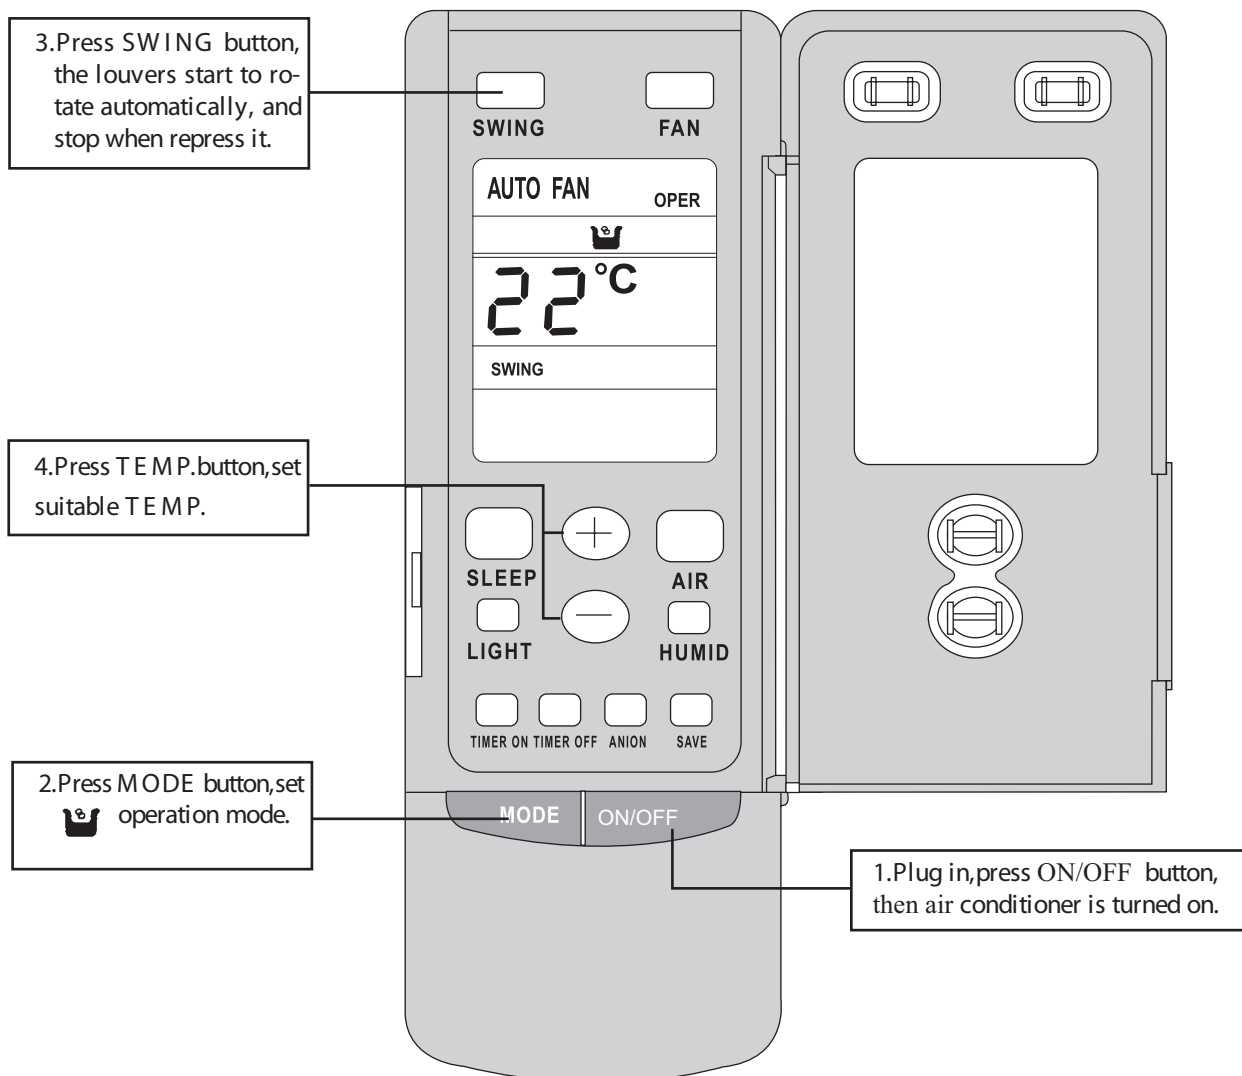

## Remote control operation procedure


### ● AUTO mode operation procedure

- At AUTO mode operation, standard TEMP. is 25 °C for COOL mode and 20°C for HEAT mode.

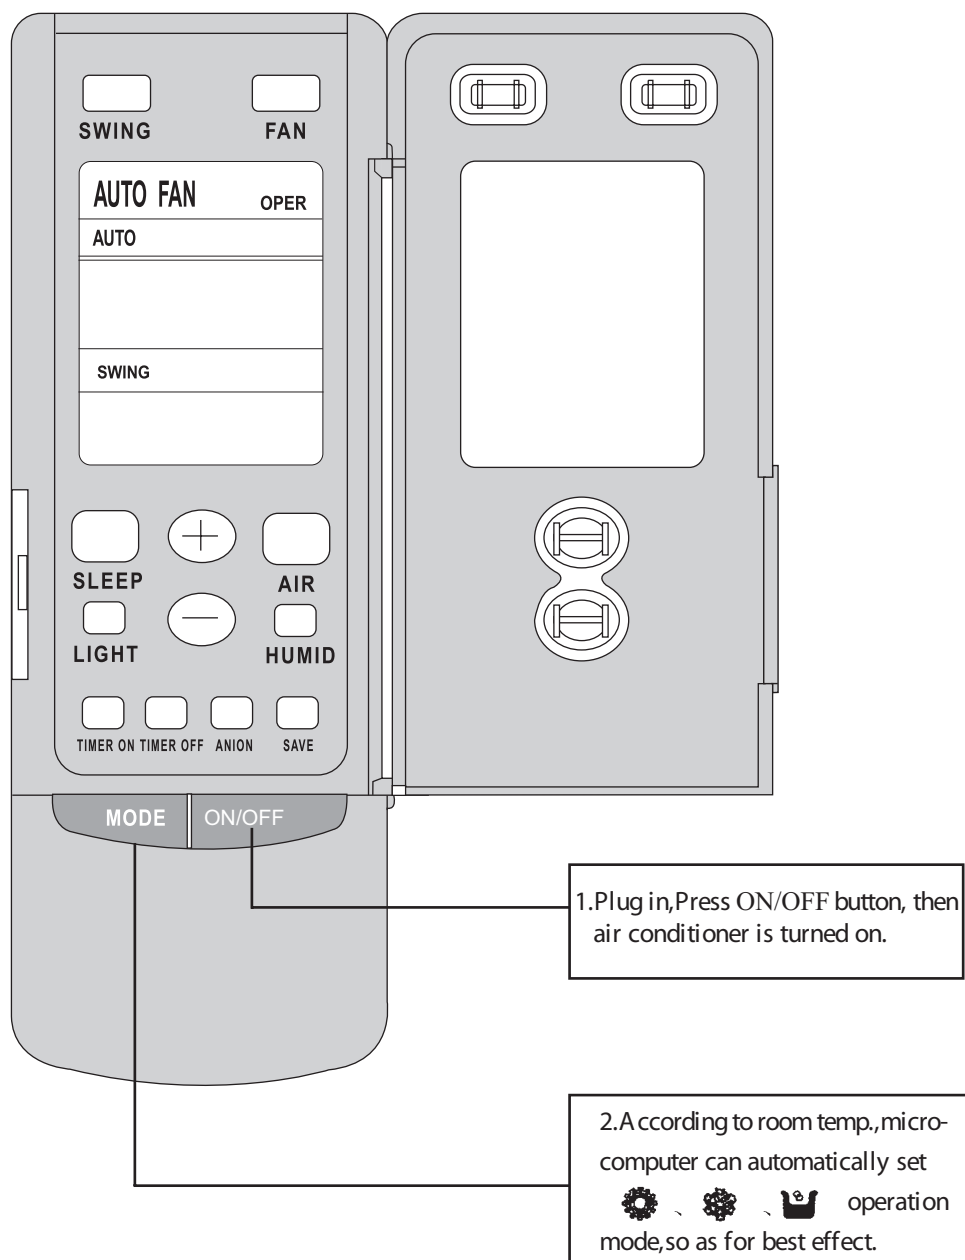

# Remote control operation procedure


## ● TIMER operation procedure

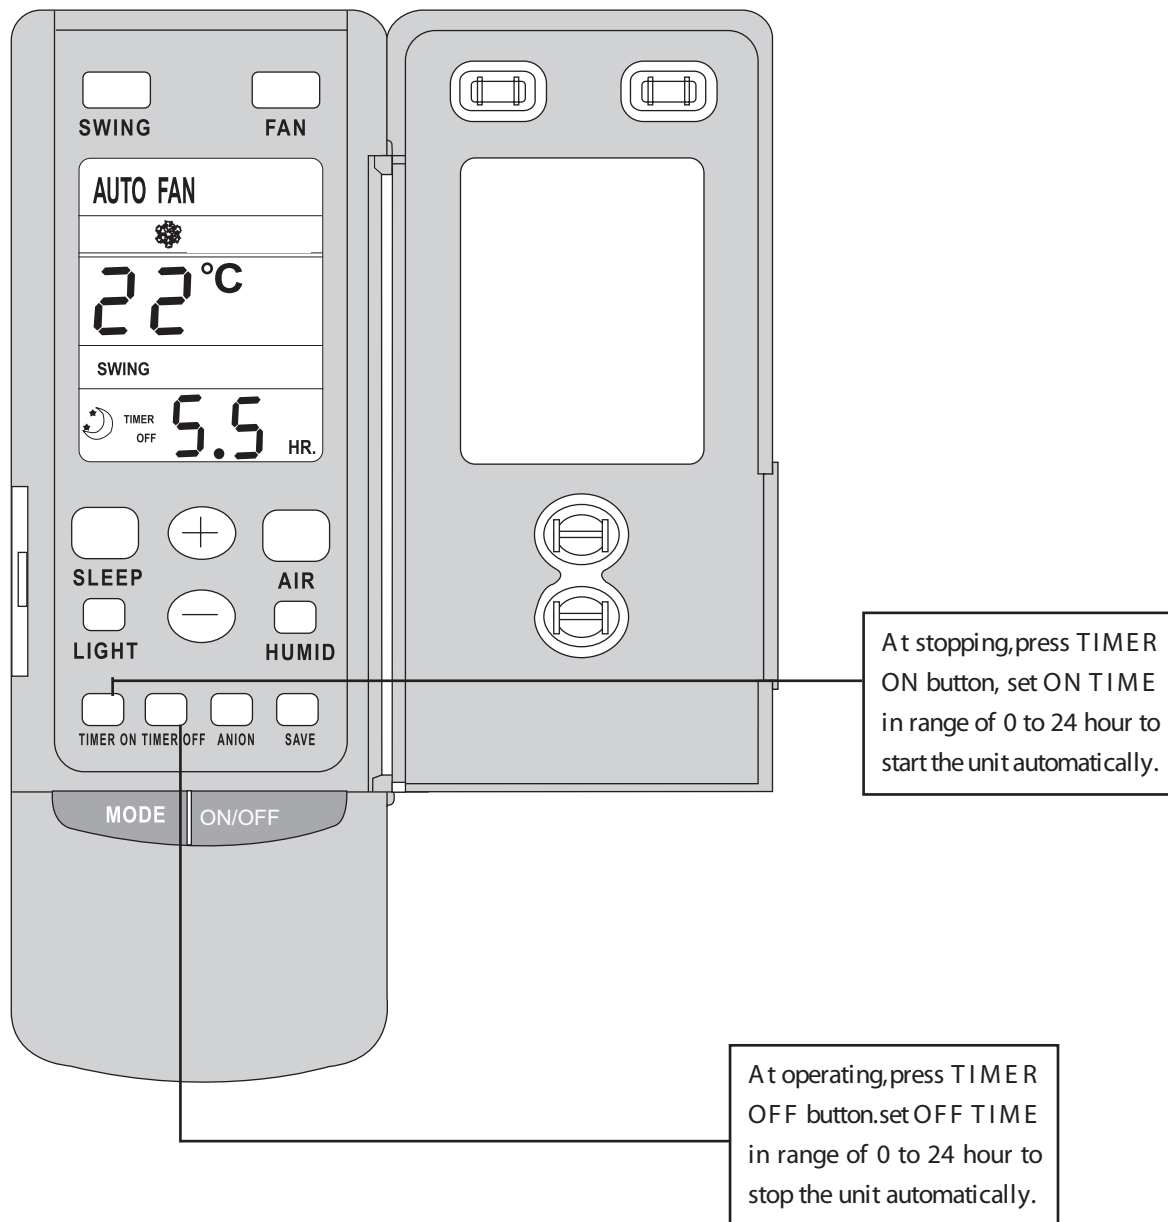

## Remote control operation procedure

### ● SLEEP mode operation procedure

- When the unit is cooling or drying, if SLEEP operation is set, TEMP. would increase 1°C in 1 hour and 2°C in 2 hours. Indoor fan motor runs at low speed.
- When the unit is heating, if SLEEP operation is set, TEMP. would decrease 1°C in 1 hour and 2°C in 2 hours. Indoor fan motor runs at low speed.

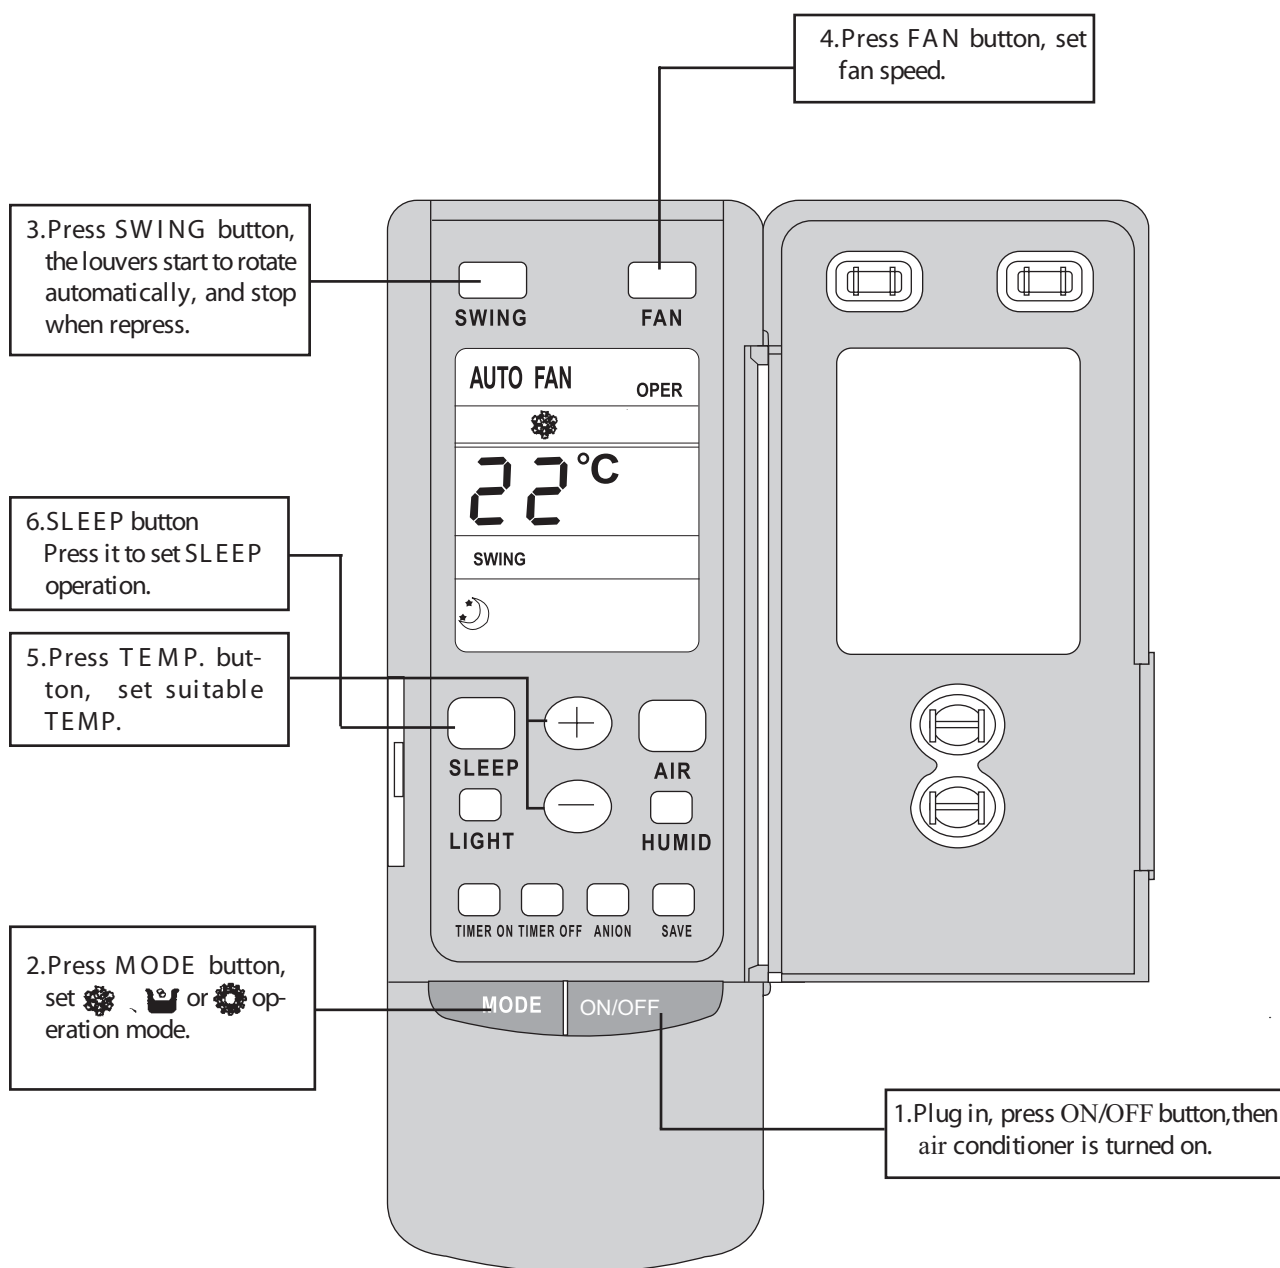


# Remote control operation procedure

## ● How to insert batteries

1. Remove the cover from the back of the remote controller.
2. Insert the two batteries ( Two AAA dry - cell batteries ) and press button “ACL”.
3. Re - attach the cover.

### Note:

- Don't confuse the new and worn or different batteries.
- Remove batteries when not in use for a long time.
- The remote control signal can be received at a distance of up to about 10m.

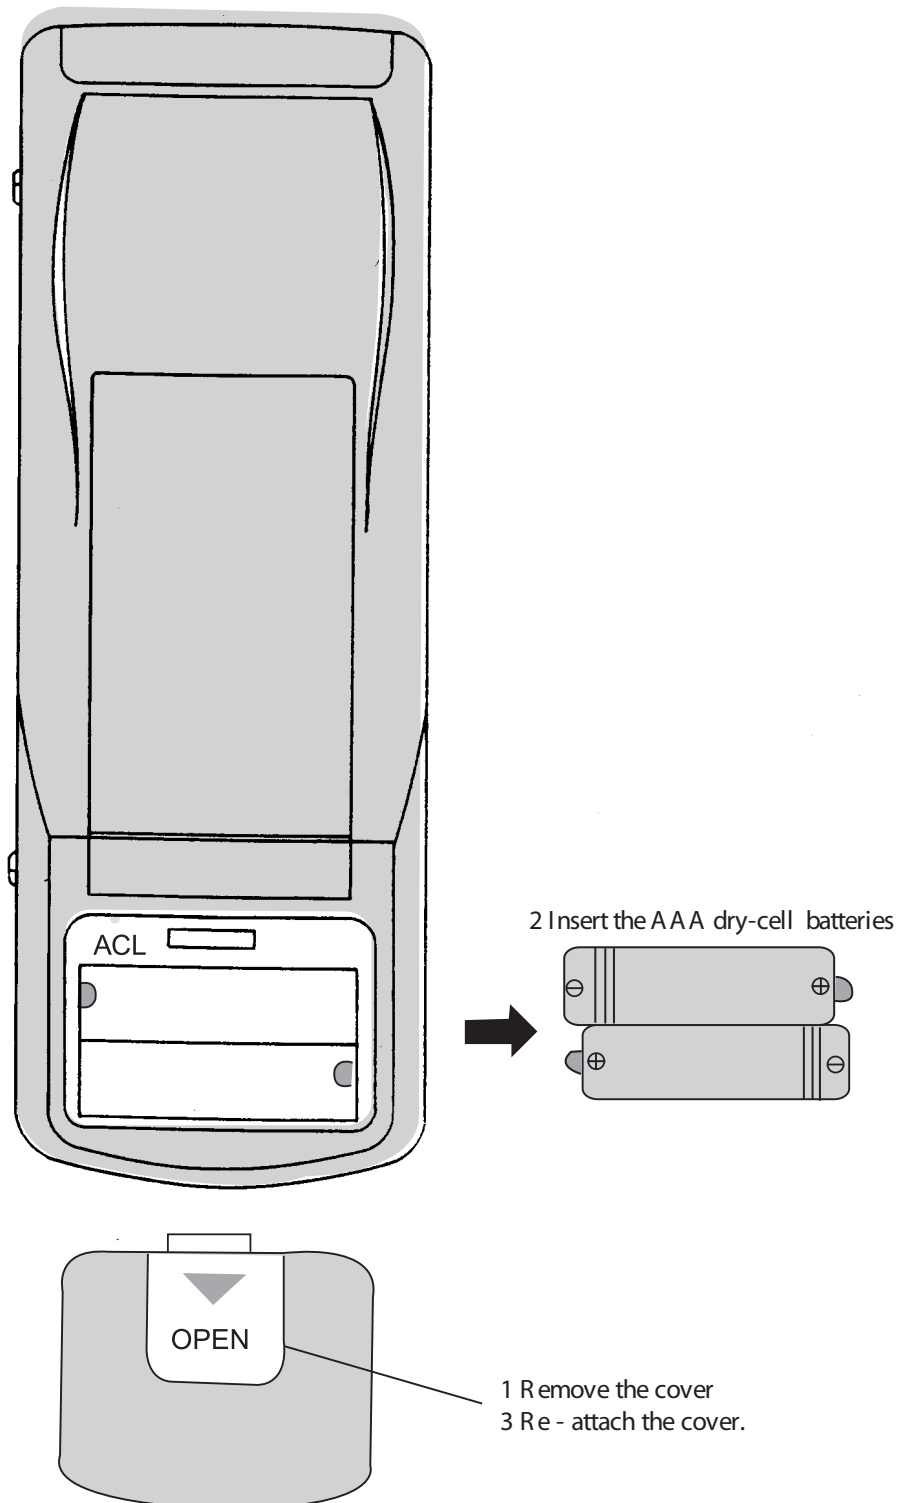

# Unit Function


## • 7DP - Seven days programmer (Accessory not supplied)

Centralized Control and Week Timer Functions: The centralized controller and the weekly timer are integrated in the same wire controller. The system has both the centralized con-

trol and the week timing functions. Up to 16 sets of units can be controlled simultaneously by the centralized controller (weekly timer). The weekly timer has the function of invalidating

the lower unit. The weekly timing function is able to realized four timing ON/OFF periods for any unit every day, so as to achieve fully automatic operation.

This WEEKLY TIMER adopts 485 mode to communicate with manual control of every duct type unit, and it can control up to 16 units. Adopting 2-core twisted-pair wire, the longest communication distance of this TIMER is 1200m. After connected to power, the WEEKLY TIMER can display all connected units (sequence of unit is determined by code switch of manual control of every duct type unit). On and off of every duct type unit can be done through the Timer On / Off of this WEEKLY TIMER, and the button shield operation of manual control can be done through shield setting on WEEKLY TIMER. Mode selection and temperature adjustment and other operations are done through the manual control at every unit.

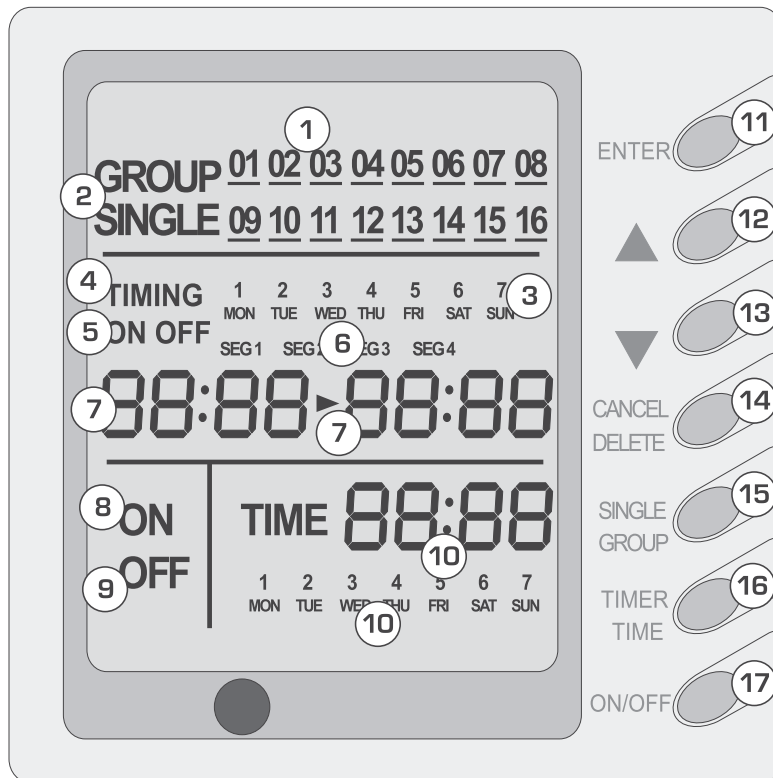


## Composition of programmer wall week

1	Unit display
2	Single/group display
3	Timer week display
4	Timer display
5	Timer state display
6	Timer time period display
7	Timer ON/OFF time display
8	Unit on display

9	Unit off display
10	Clock display
11	Confirm button
12	Increase button
13	Decrease button
14	Cancel/delete button
15	Single/group button
16	Timer/time button
17	ON/OFF button

Note:

1. For upper unit checks 16 lower units consecutively, there will be no more than 16 seconds delay when setting works till unit responds.
  2. Please let us know your requirement before your placing the order, for this WEEKLY TIMER will only be prepared when customer orders (communication joint with WEEKLY TIMER on manual control had been prepared).
1. Press ▲ or ▼ to select the unit that needed to be control. It is available to control several units by Group Control (1~16), or control single unit by Single Control.
  2. When selected a certain or several units by Single Control or Group Control, Timer setting and On/off setting can be set. Timer setting can set 4 on/off times in a day in one week; and on/off setting can be done by pressing on/off button.
  3. Connection between WEEKLY TIMER and manual control is shown as following:

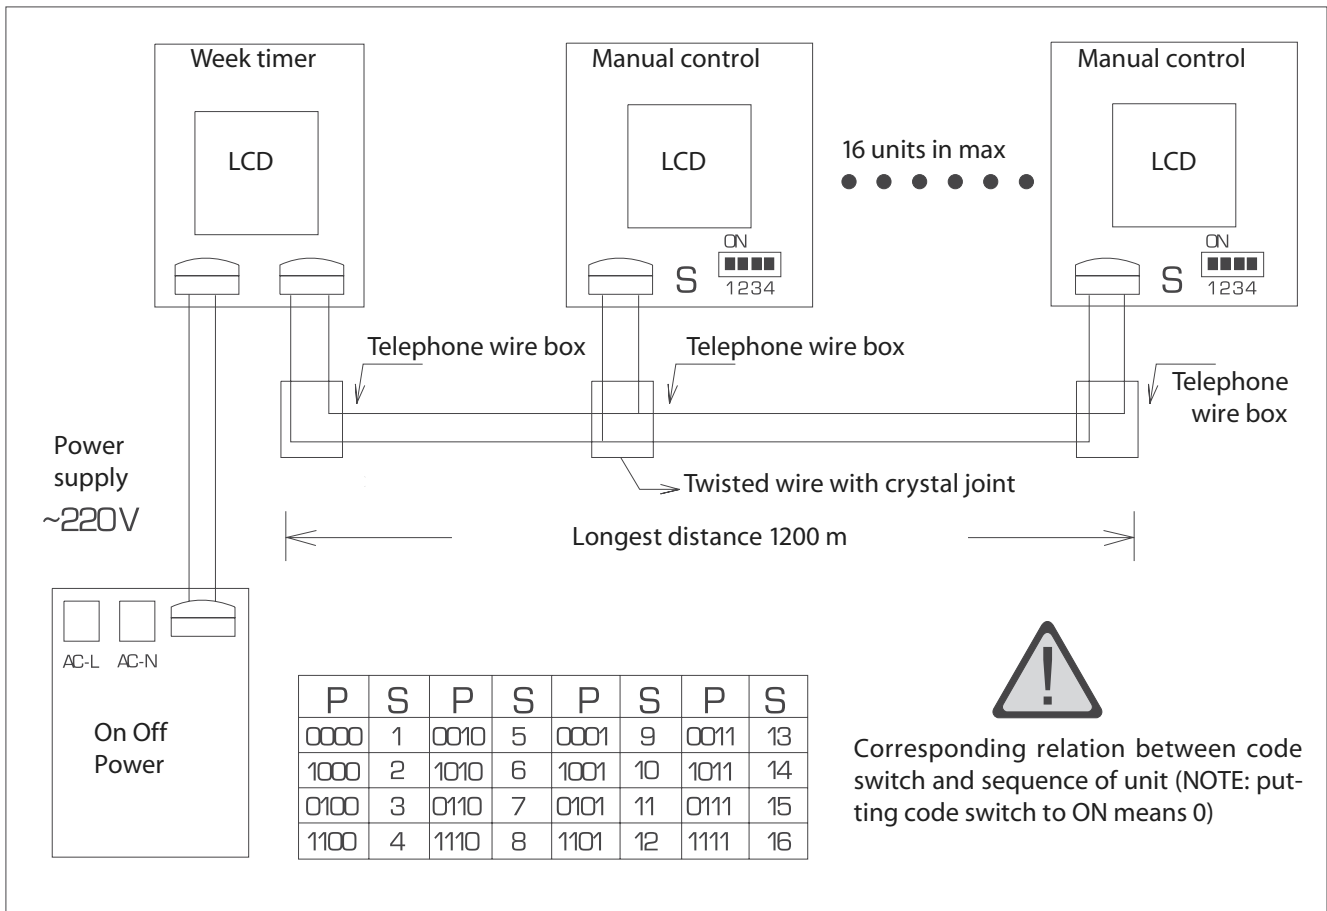

## Wire controller (with week timer functions)



### WARNING!

- Never install the wired controller where there is water leakage.
- Never knock, throw or frequently open the wired controller.

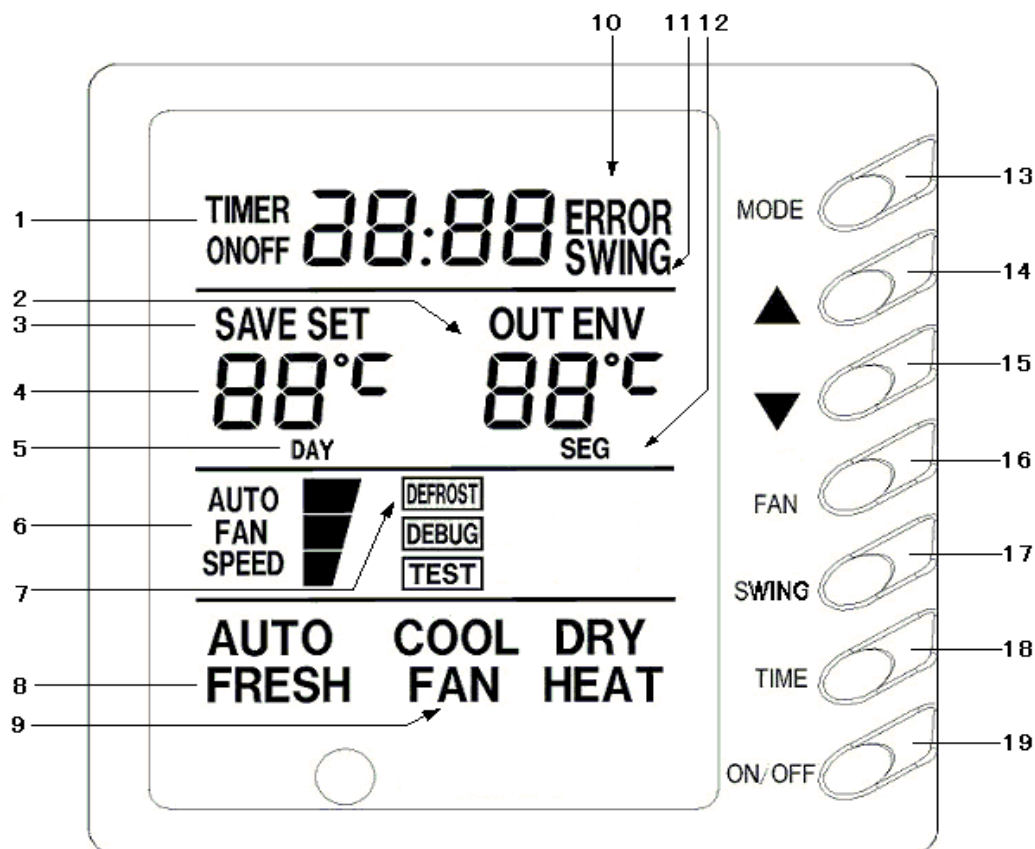


Fig.1

Each part of wired controller			
1	Timing Display	11	Swing Status Display
2	Ambient Temperature Display	12	Timer interval Display
3	Energy Saving Status Display	13	Mode Button
4	Set Temperature Display	14	Set Temperature Increase Button
5	Week Display	15	Set Temperature Decrease Button
6	Fan Speed Display (Auto, High Speed, Medium Speed, Low Speed)	16	Fan Speed Button
7	Defrosting Status Display	17	Swing Button
8	Fresh Air Status Display	18	Timing Button
9	Mode (Cooling, Dehumidifying, Fan, Heating, Auto)	19	ON/OFF Button
10	Malfunction Display		



### 1) ON/OFF (Fig.2)

- ❖ Press the “ON/OFF” button, the unit will start running.
- ❖ Press the “ON/OFF” button again, the unit will stop running.


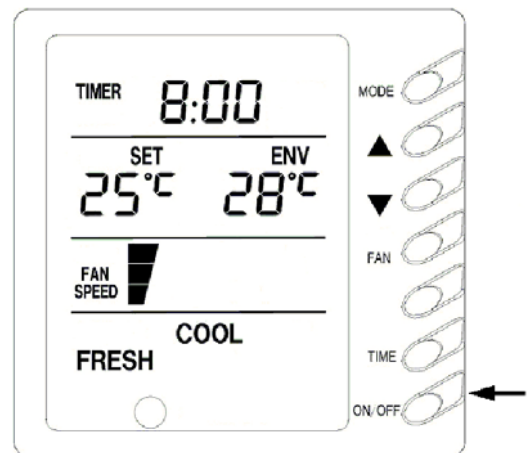


Fig.2

### 2) Fan Control (Fig.3 is about display region and the

same as following figures.)

When press FAN button once, the fan speed will be changed as follow:



- ❖ In DRY mode: the fan speed will be set at low automatically.

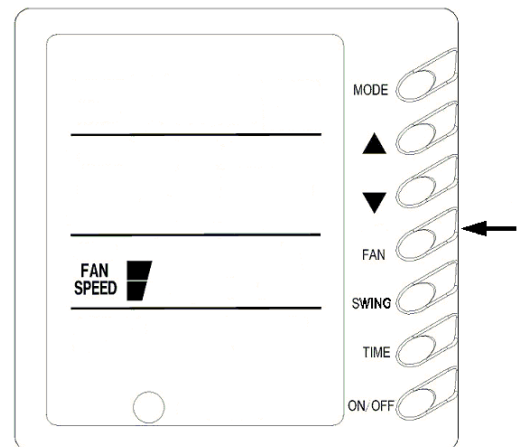


Fig.3

### 3) Temperature Setting (Fig.4)

- ❖ Press the setting temperature button:

▲: For temperature increase

▼: For temperature decrease

(Press this button once, the temperature will be increased or decreased by 1°C.)

**Note:** Press ▲+ ▼button for 5 seconds, “EE” will appear where SET TEMP is displayed and all buttons are shielded. Press ▲+▼button again for 5 seconds to cancel locked function.

If long-distance monitoring controller or central controller shield displayer, all buttons and signals from remote controller will be shielded too, and CC will be displayed where SET TEMP is displayed.

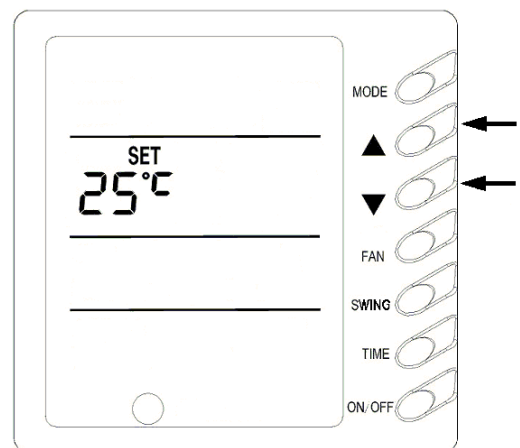


Fig.4

Setting temperature range under each mode:

HEAT ----- 16°C~30°C

COOL ----- 16°C~30°C

DRY ----- 16°C~30°C

FAN ----- can not be set

Auto mode is divides into new auto mode and old auto mode.

NEW AUTO MODE -----16°C~30°C

OLD AUTO MODE ----- can not be set

#### 4) Swing Setting (Fig.5)

- ❖ Press SWING button, SWING will be displayed on the LCD, in which case, the unit is under swing status.
- ❖ Press this button again, the words will disappear and the unit stops swinging.

Note: Sleep function can be set by remote controller.

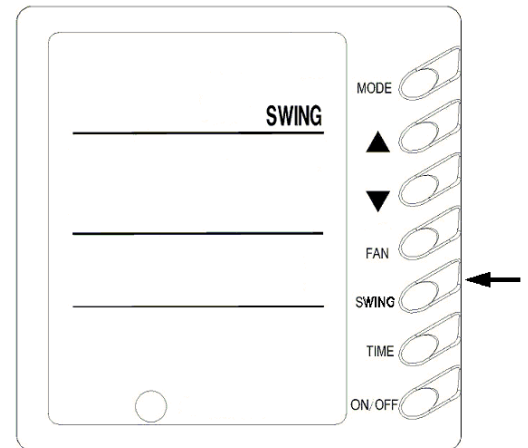


Fig.5

#### 5) Running Mode Setting (Fig.6)

- ❖ Every press of mode button, the operation mode will change as follow:

→COOL→DRY→FAN→ HEAT → AUTO→

- ❖ In cool mode, COOL will light, in which case, setting temperature should be set to be lower than present ambient temperature; If not, the unit will not operate in cool mode and only the fan is active.
- ❖ In dry mode, DRY will light .Indoor fan will run at low speed in certain temp. range. Dry efficiency as well as energy saving efficiency in this mode is much better than that in cool mode
- ❖ In heat mode, HEAT will light. The setting temperature should be set to be higher than present ambient temperature; if not, the unit can not operate in heat mode.
- ❖ In fan mode, FAN will light.
- ❖ In auto mode, AUTO will light and the unit will run at the mode automatically adjusted according to ambient temp.
- ❖ In heating mode, if outdoor temp is low with high humidity,

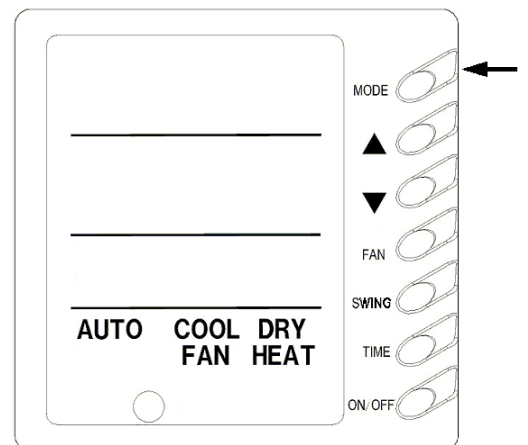


Fig. 6

the outdoor unit will be frosted resulting in low efficiency of heating, in which case, the controller will automatically start to defrost with DEFROST displayed.

Note: No heating for cooling-only unit and auto mode will be shielded after setting energy saving.

#### 6) Timer Setting (Fig.7, 8, 9)



Timer function in this wired controller conneted with weekly timer is invalid and wired controller will be controlled by weekly timer.

Either in ON status or OFF status of the unit press TIMER button into timing setting, and then press ▲ or ▼ button to set timing(Fig.7),set time(Fig.8) and delete timing (Fig.9). At last, press TIMER to set it.

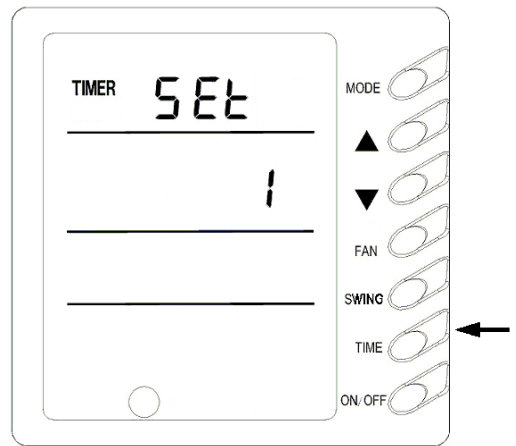


Fig.7

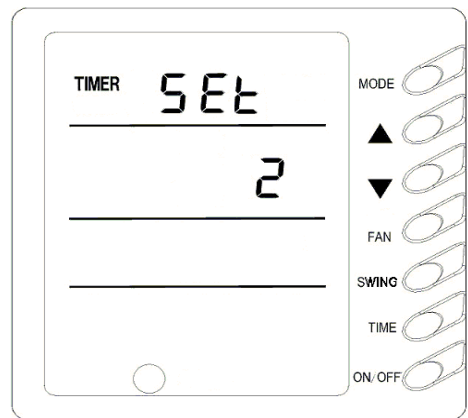


Fig.8

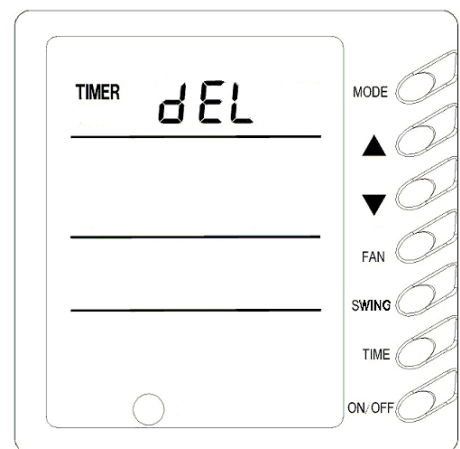


Fig.9

- ❖ In timing setting mode, press MODE button to select any desired setting object: Week (1-7), timer interval (1-4), timing (Timer on or Timer off time), min. part or hour part of time, and then press ▲ or ▼ button to adjust this object, which is fixed by pressing TIMER button or can be canceled by pressing Timer again. During fixing setting there must be blinking characters. During canceling setting, if there are also blinking characters, setting can be continuous till quit It by pressing ON/OFF button; meanwhile, timing data are memorized. (Fig.10, 11)

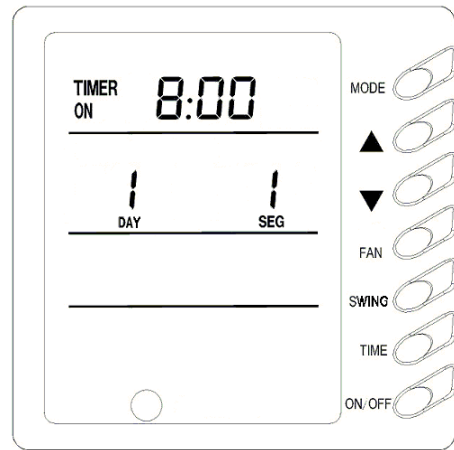


Fig.10

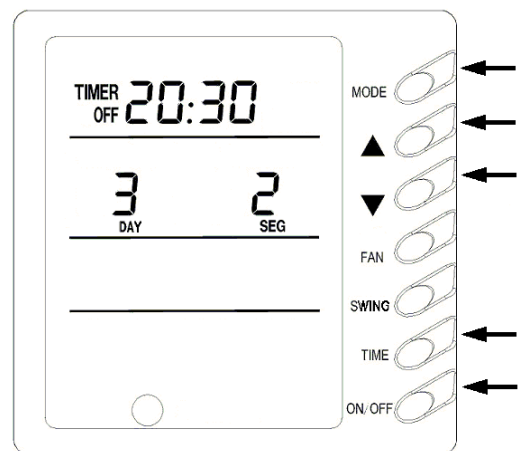


Fig.11

- ❖ In time setting mode press MODE button to select any desired setting object: Week (1-7), min. part (0-59) or hour part (0-23), and then press ▲ or ▼ button to adjust this object, which is fixed by pressing TIMER button or can be canceled by pressing Timer again. During fixing setting there must be blinking characters. During canceling setting, if there are also blinking characters, setting can be continuous till quit It by pressing ON/OFF button.(Fig.12)

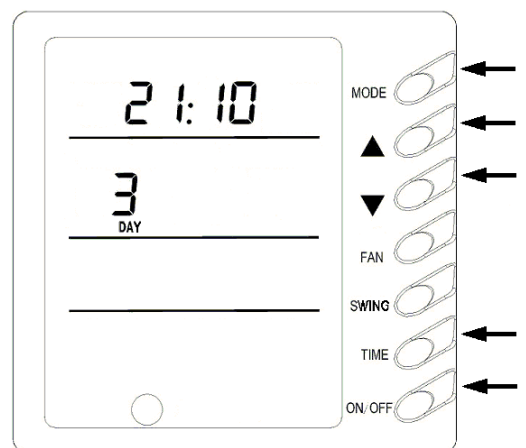


Fig.12

- ❖ In deleting timing status, press ▲ or ▼ button to select one day of a week, and then press TIMER button to confirm ,in which case, "dd" is displayed .The day also can be canceled by pressing TIMER button without "dd" displayed. At last, press ON/OFF button to quit the setting after finish.(Fig.13)

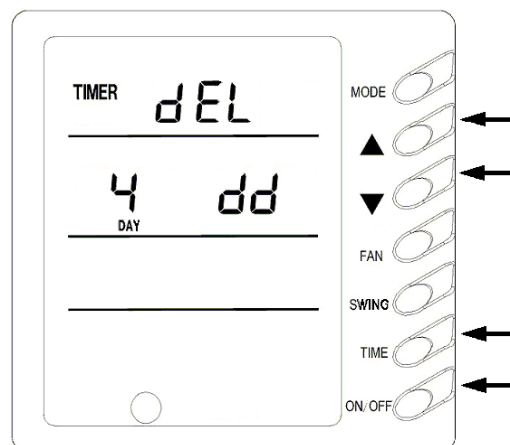


Fig.13

## 7) Outdoor Ambient Temp Display ( Fig.14)

In normal condition, only indoor ambient temp is displayed where "ENVIROMENT" is displayed. At on or off status of the unit, if press SWING button for 5 seconds, outdoor ambient temp (OUT ENV) will be displayed.

- ① If outdoor temp is tested to be above zero, there will be no display where setting temp is displayed and outdoor ambient temp tested by inner system will be displayed where ambient temp is displayed.
- ② If outdoor temp is tested to be below zero, "—" will be displayed where set temp is displayed and absolute value of outdoor ambient temp tested by inner system will be displayed where ambient temp is displayed.

After 10- second display, the system will return to display interface of indoor ambient temp.

**Note:** This unit function is invalid without connecting with outdoor ambient temp sensor.

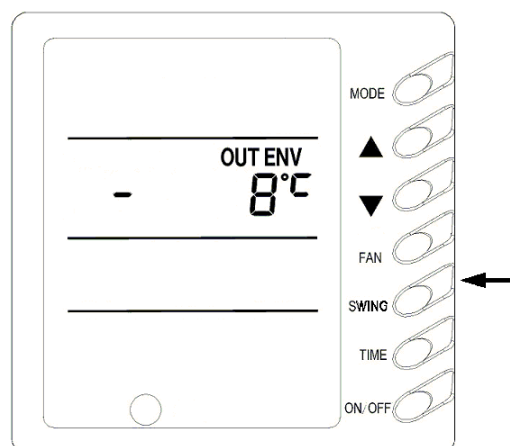


Fig.14

## 8) Energy Saving Setting (Fig.15)

Press FAN+▼ for 5 seconds into energy saving menu, in which case, SAVE and COOL is displayed ( If it's the first time for setting, initial value 26°C will be displayed.) ,lower- limit temp is displayed where set temp is displayed and set temp during setting is displayed and

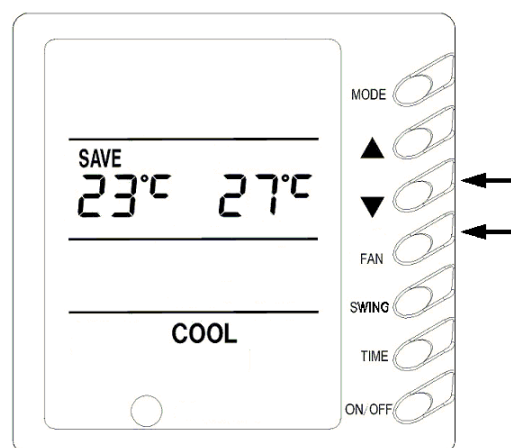


Fig.15

blinking. Press ▲ and ▼ to set lower-limit cooling temp ( setting range is 16—30) and then press ON/OFF to fix .Press ▲ and ▼ to set upper-limit cooling temp, which will be displayed where ambient temp is displayed (setting range is 16-30), and then press ON/OFF to fix.

**Note:** Upper- limit temp can not be set to be lower than lower-limit temp, or else the higher temp will be defaulted to be upper limit and the lower one to be lower- limit. Press MODE button to set energy saving in cooling or dry mode and then switch to energy saving setting in heating mode, in which case, SAVE and HEAT will be displayed, which is quitted by pressing FAN and ▼ for 5 seconds. If there is no operation after the energy saving interface appears in 20s when the system responds last press of one button, the system will trip off the menu and display normal interface of unit off.

SAVE will be displayed in LCD at next startup of the unit if above setting has been finished. Either by pressing buttons of the displayer or remote controller, the setting temp can never be set to be higher than temp range set under energy saving mode before. For example, lower-limit cooling temp under energy saving mode is 23℃ and upper limit is 28℃,so the user can only set cooling temperature in the range of 23-28℃.

If the same limit temperature is set, the unit will only run under corresponding mode at this setting temp.

Press Fan+ ▼ simultaneously for 5s to quit this function if it has been effective, but former setting value can not be cleared, which will be as the original value of next setting.

If the power is off, energy saving setting will be memorized, which continues effectively after the power is on next time.

If energy-saving mode and sleeping mode is setting, auto mode will be shielded.

## 9) Power-off Memory Setting (Fig.16)

Press mode button continuously for 10s and select if memorize startup and stop status of the unit or not at unit.01 displayed in the region of displaying setting temp indicates memorizing start and stop status of the unit after power off .02, quit by pressing ON/OFF button ,indicates not memorizing. If after the interface of memorizing startup and stop status of the unit appears, there is no operation in 20s when the system responds the last press of one button, the system will trip off the menu and display normal stop interface, but it also memorizes present information.

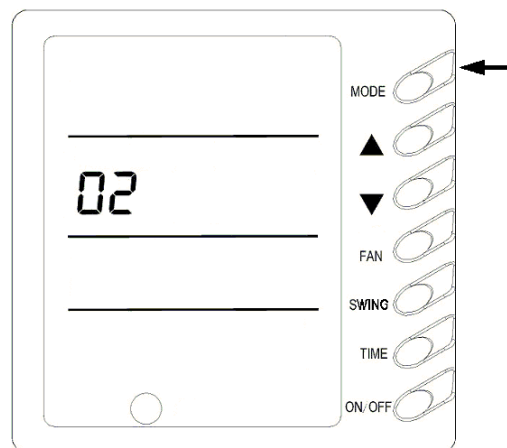


Fig.16

## 10) Malfunction Display (Fig.17)

If malfunction happens during operating of the unit, ERROR will blink with error code displayed. For example, the right figure indicates compressor low-pressure protection.

Codes	Malfunction
E0	Water pump malfunction
E1	Compressor high-pressure protection
E2	Indoor anti-freezing protection
E3	Compressor low-pressure protection
E4	Compressor high-temp. exhaust protection
E5	Compressor overload protection
E6	Communication malfunction
E8	Indoor fan protection
E9	Water-full protection
F0	Air inlet indoor ambient temp. sensor malfunction
F1	Evaporator temp. sensor malfunction
F2	Condenser temp. sensor malfunction
F3	Outdoor ambient temp. sensor malfunction
F4	Exhaust ambient temp. sensor malfunction
F5	Ambient temp. sensor malfunction in displayer
EH	Auxiliary electric heat malfunction

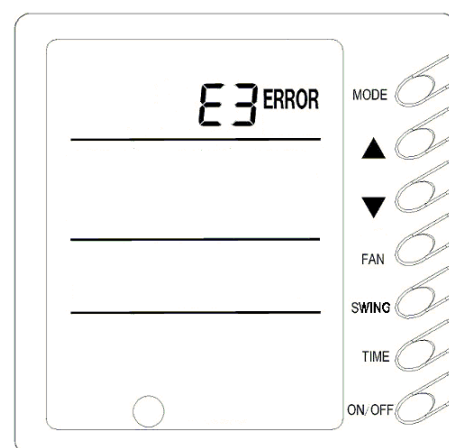


Fig.17




### Note!

If EH malfunction happens, please power the unit off immediately and ask professionals for help.

# PART NAMES AND THEIR FUNCTIONS

OPERATION INSTRUCTIONS

## INDOOR UNIT

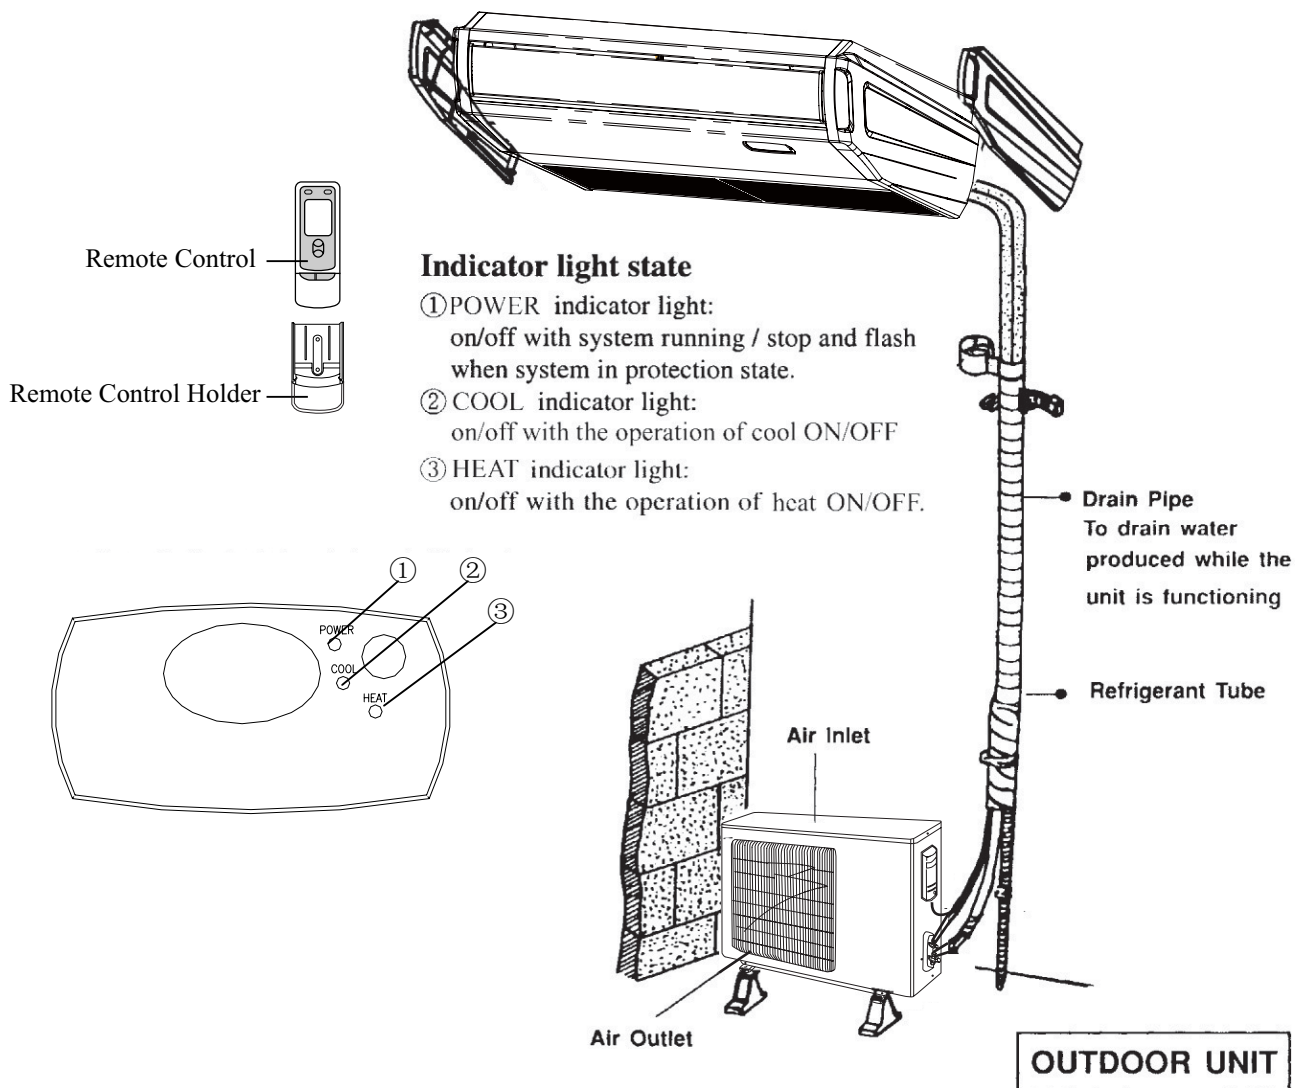


## CAUTION:

Wrong wiring connection will cause electrical malfunction.

Do not pull the wire when fixing it with wire clamp.

Do not let the wire too loose in the outdoor unit.

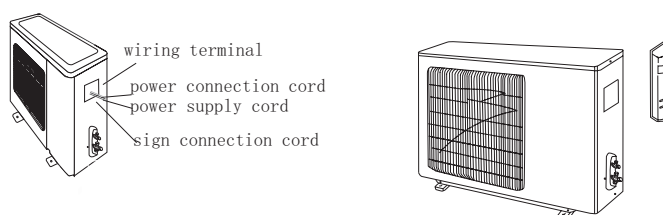

## NOTE:

- ① If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ② The appliance shall be installed in accordance with national wiring regulations.
- ③ An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.



Before inspection and maintenance of the unit, Please turn off the unit and set the power switch to “OFF” to cut off the power supply.

## SUGGESTION :

● *If the air filter is dirty, it will cause the reduction of airflow, The unit is overloaded and consumes 6% more of electricity. So regular cleaning is necessary.*

## CLEANING THE UNIT


Clean the air conditioner and the remote control with dry cloth or a vacuum cleaner. If damp cloth is used, remove moisture by using dry cloth afterward.

## CAUTION

- Do not use benzine gasoline, thinners or polishing products for cleaning.
- Do not wash with hot water (above 40° c). Some parts of the unit may be deformed.

## AT THE START OF THE SEASON

- Check that nothing blocks the air inlet and outlet of the indoor and outdoor units.
- Running the unit without air filters can cause mal-functions due to dirt or dust. Always install air filters at all times.
- Check that drainage hose is not bent or clogged
- Check that the units are properly installed.

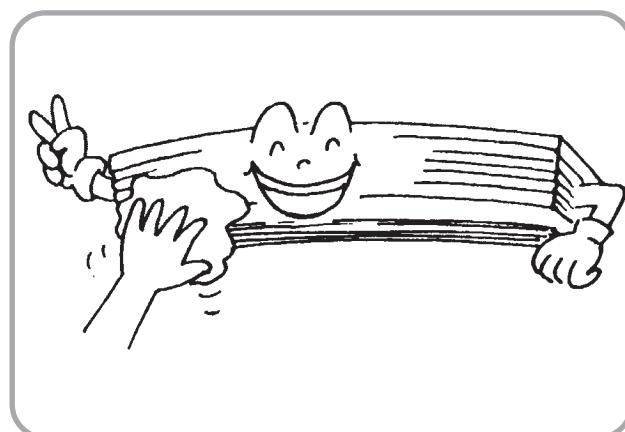


## DURING THE OFF SEASON

- Cut off the power supply main switch
- Clean the air filters and other parts.
- Leave the fan running for 2-3 hours to dry out the inside of the unit.


Just professional people could clean or replace the filter.

Before open grill to clean filter, the power must be cut off and wait for the fan motor stop


- The temperature should not be set lower than what you need. This would result to increase energy cost.

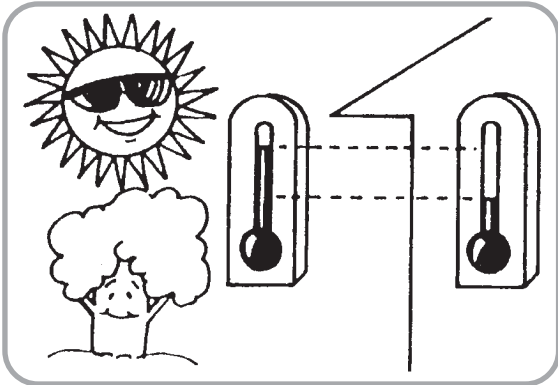


- To distribute cool air through out the room, adjust air flow direction as shown by the arrows (see picture) to diffuse cool air.

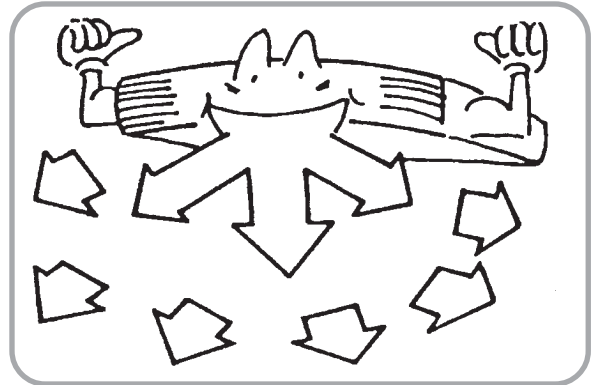

- Clean the air filter every week for higher efficiency.

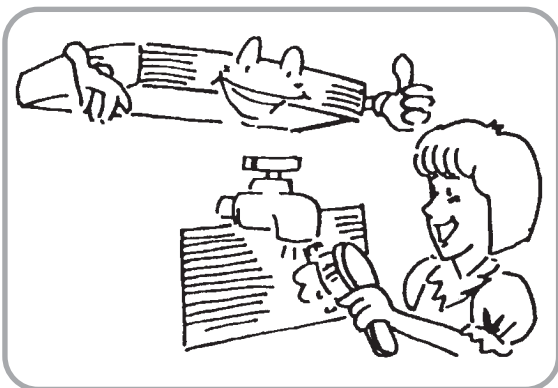


- Close window and door while operating the unit to prevent leakage of cooled air to save energy.

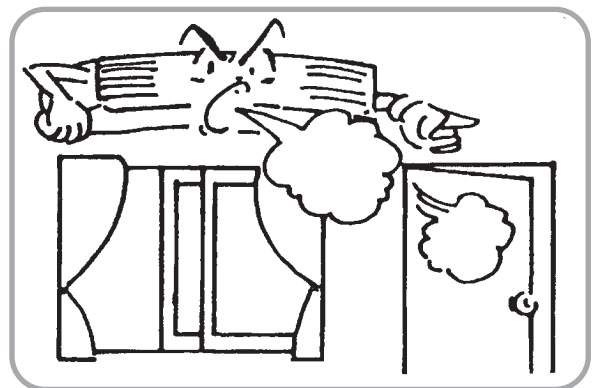

- Draw close curtains or close glass windows when cooling to prevent heat load from sun light which may cause more electricity cost.



- In case of ineffective ventilation, open the window to ventilate the room air once in a while but not too long since cooled air will be uselessly drained out.

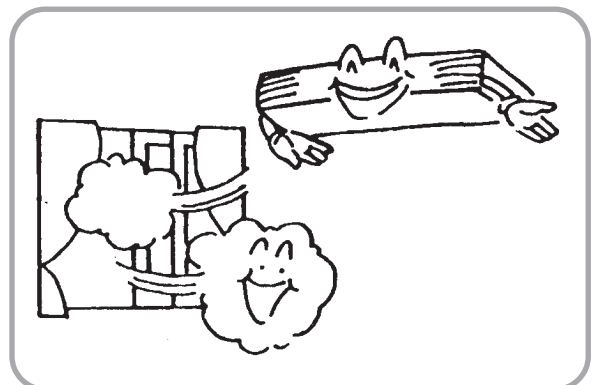


## PRECAUTIONS

OPERATION INSTRUCTIONS22


- Turn off the airconditioner if, while running, electricity interference occurs. If the unit is not to be used for a long time, cut off the power supply main switch.



- Do not insert objects into the air inlet or outlet when the airconditioner is running as it may cause damage or personal injury. Also pay special attention when children are around.

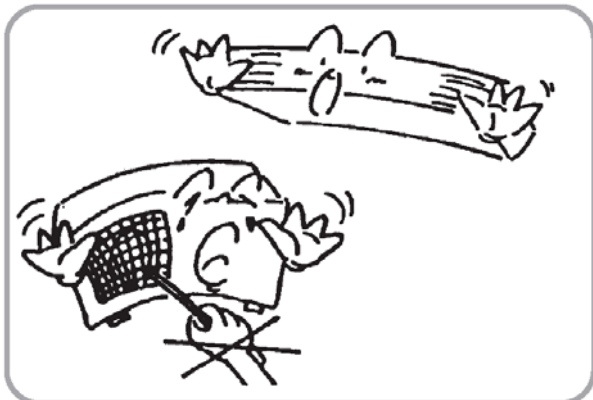

- Do not locate any obstacle against the air flow direction of indoor and outdoor unit. Inefficient performance or malfunction may result.

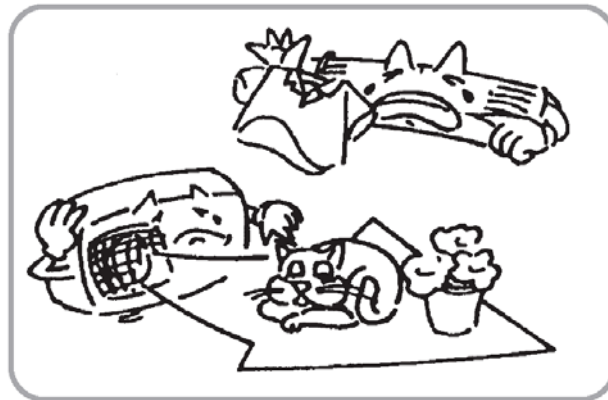

- Do not channel the air flow directly at people, especially infants, aged persons, or patients.




Check the following before contact the service man. You may find the solution to your problems.

After checking, if it still does not operate, please contact your local dealer.

PROBLEM	CAUSES
No operation	<ul style="list-style-type: none"><li>● Check if breaker switch is still on</li><li>● Check if the timer switch is on or not.</li></ul>
The air conditioner runs but does not cool enough.	<ul style="list-style-type: none"><li>● Check if the preset temperature is too high.</li><li>● Check if the sunlight shines directly into the room.</li><li>● Check if the door and window are opened.</li><li>● Check if there is anything obstructing the air discharge.</li><li>● Check if the exhaust fan still operates.</li><li>● Check if the air filter is dirty or clogged.</li></ul>
Vapor or mist fume coming out of the unit while running.	<ul style="list-style-type: none"><li>● Hot air in the room mixes with cool air. This causes smoke fume.</li></ul>
Inoperative remote control.	<ul style="list-style-type: none"><li>● Check if the batteries are inserted in correct directions</li><li>● Check if the batteries are exhausted or not.</li></ul>

## INSTALLATION DIMENSIONS OF THE INDOOR UNIT

When installing the indoor unit, you can refer the paper pattern for installation, and make sure that the drainage side must be 10mm lower than the other side in order to drain the condensation water fluently.

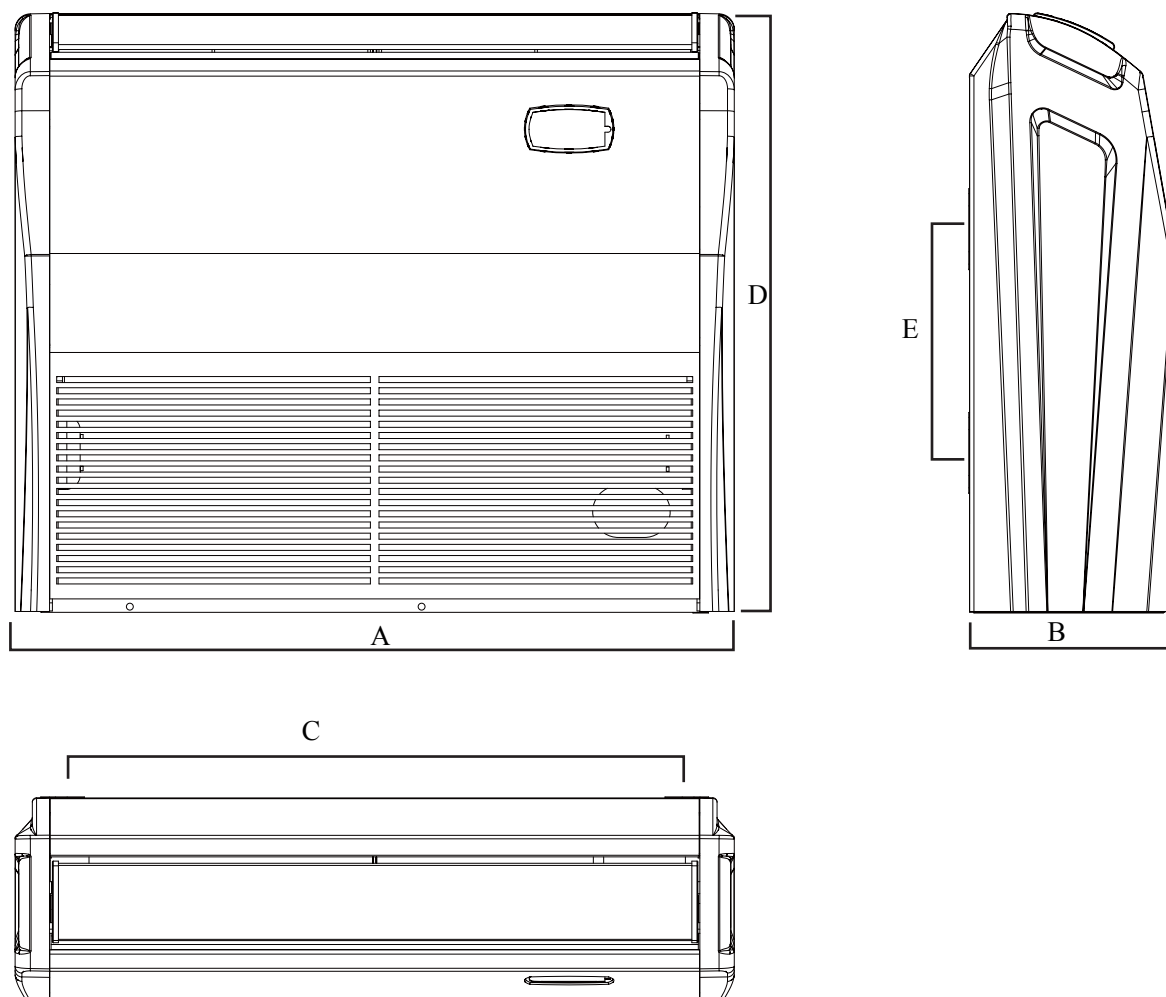

Unit: mm

Model	A	B	C	D	E
IKI 09 IKI 12 IKI 18	836	238	745	695	260
IKI 24	1300	188	1202	600	260
IKI 36 IKI 45 IKI 50	1590	238	1491	695	260

## SELECTION OF INSTALLATION LOCATION.

- Such a place where cool air can be distributed throughout the room.
- Such a place where condensation water is easily drained out.
- Such a place that can handle the weight of indoor unit.
- Such a place which has easy access for maintenance.
- Such a place where is permitting easy connection with the outdoor unit.
- Such a place where is 1m or more away from other electric appliances such as television, audio device, etc.
- Avoid a location where there is heat source, high humidity or inflammable gas.
- Do not use the unit in the immediate surroundings of a laundry, a bath, a shower or a swimming pool.
- Be sure that the installation conforms to the installation dimension diagram.
- The space around the unit is adequate for ventilation (Refer to Fig.23)

## CAUTION FOR INSTALLATION WHERE AIR CONDITIONER TROUBLE IS LIKELY TO OCCUR.

- Where there is too much of oil.
- Where it is acid base area.
- Where there is irregular electrical supply.

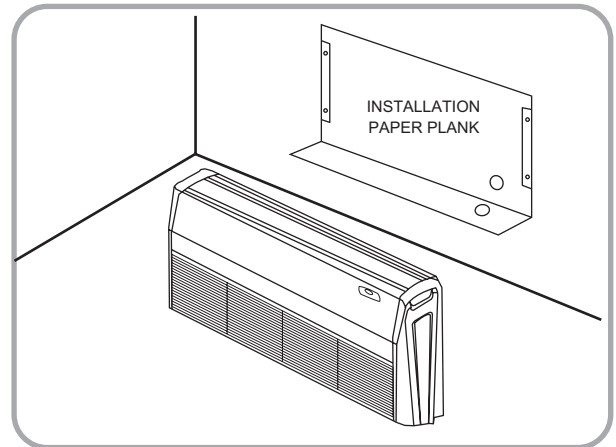


Fig. 22

## THERE ARE 2 STYLES OF INSTALLATION.

- **CEILING TYPE**
- **FLOOR TYPE**

Each type is similar to the other as follows;

Determine the mounting position on ceiling or wall by using paper pattern to indicate indoor frame.

Mark the pattern and pull out the paper pattern.

Remove the return grill, the side panel and the hanger bracket from the indoor unit as per procedure below.

- Press the fixing knob of the return grilles, the grilles will be opened wider and then pull it out from the indoor.
- Remove the side panel fixing screw and pull to the front direction (arrow direction) to remove. (Refer to Fig.24)
- Loosen two hanger bracket setting bolts (M8) on each side for less than 10mm. Remove two hanger bracket fixing bolts (M6) on the rear side. Detach the hanger bracket by pulling it backward (Refer to Fig.26)

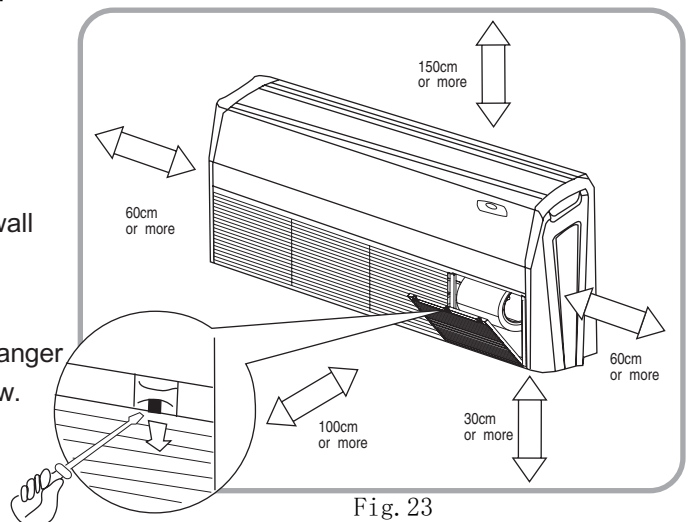


Fig. 23

Side panel fixing screw (M4)

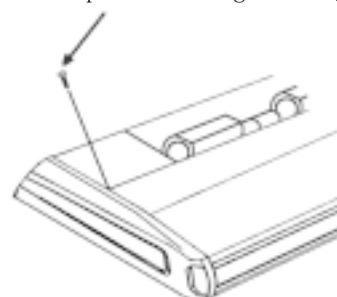


Fig. 24

Set the suspension bolt.(Use W3/8 or M10 size suspension bolts)

- Adjust the distance from the unit to the ceiling slab beforehand (Refer to Fig.25)

Fix the hanger bracket to the suspension bolt. **⚠ WARNING**

- Make sure that extended suspension bolt from the ceiling stays inside the arrowed position. Readjust the hanger bracket when it is outside the arrowed position.(Refer to Fig.27)
- Suspension bolt stays inside the cap of indoor unit. Never remove the cap.

Lift the unit and slide forward unit the dent.(Refer to Fig.28)

Screw tightly both hanger bracket setting bolts(M8).(Refer to Fig.26)

Screw tightly both hanger bracket fixing bolts(M6) to prevent the movement of the indoor unit.  
(Refer to Fig.26)

Adjust the unit height so that rear side of the drain pipe slightly inclines to improve drainage. **⚠ CAUTION**







- Adjust the height by turning the nut with a spanner.

Insert the spanner from the hanger bracket opening.(Refer to Fig.29)

## In case of hanging

It is possible to install using inward facing hanger brackets by not removing the brackets from the indoor unit.(Refer to Fig.30)

Be sure to use only the specified accessories and parts for installation work.

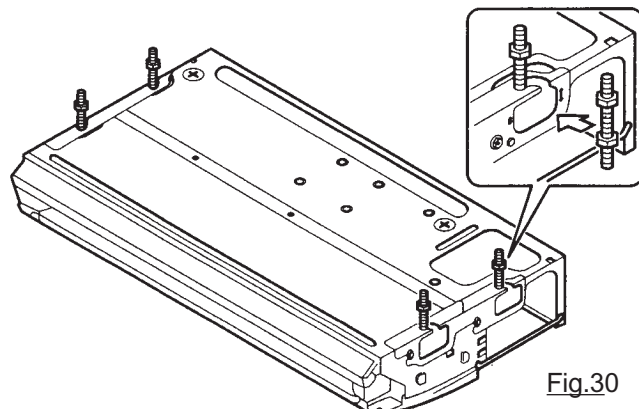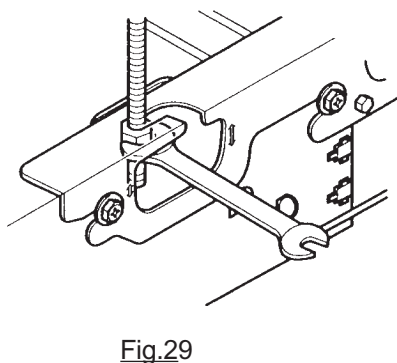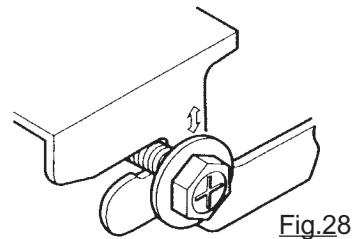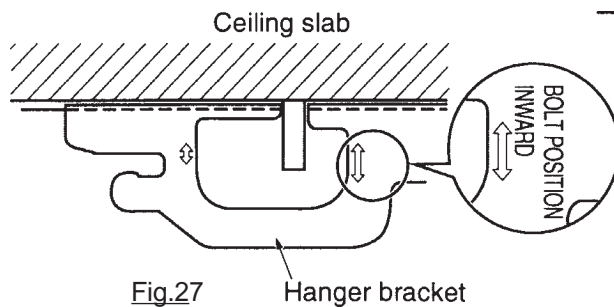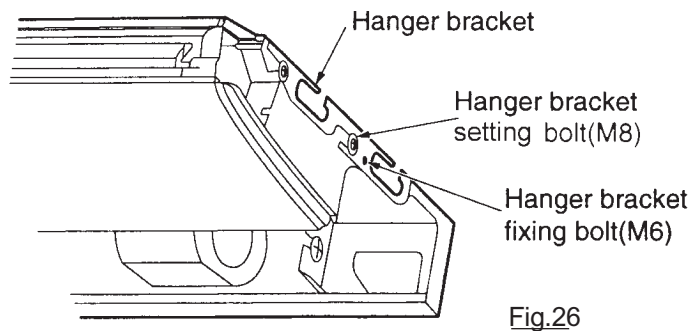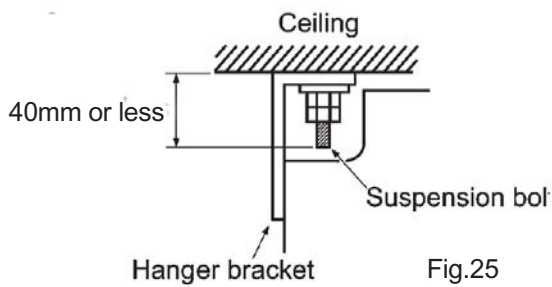



## WHERE TO INSTALL OUTDOOR UNIT :

- The foundation must be solid enough to bear the weight and vibration of the unit.
- The space around the unit is adequate for ventilation.
- The location is not close to any inflammable gases.
- The location is sufficiently isolated so that the running noise and the hot exhaust air do not disturb the users or their neighbors.
- Easy access to check and maintain.
- Ensure the spaces indicated by arrows from the wall, ceiling, fence, or other obstacles.

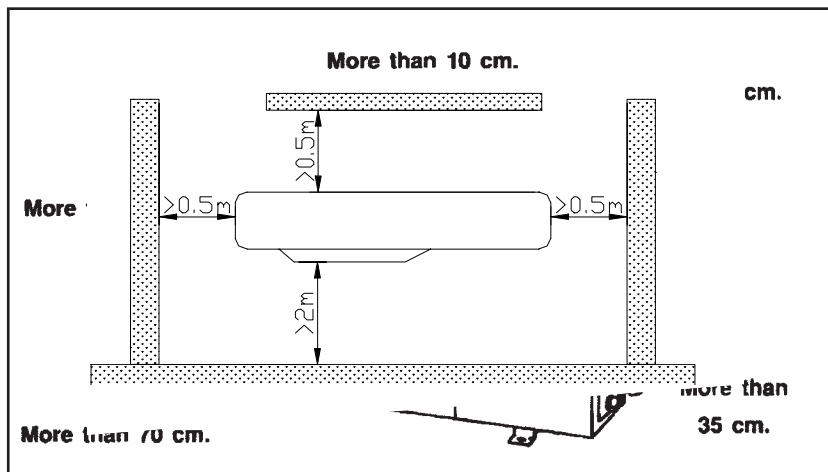


Fig.31

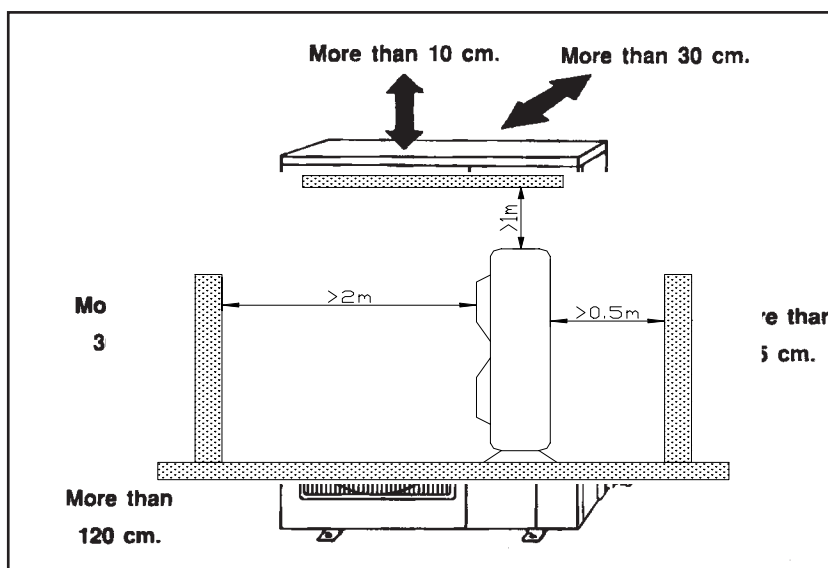


Fig.32

### ⚠ CAUTION

Installation in the following places may cause problems.



If it is unavoidable to use such places, consult with your distributor or dealer.

- A place with machine oil.
- A saline place such as a place very close to a seashore.
- A place with sulphur gas.
- A place where high-frequency waves are generated by radio equipment, welder and medical equipment.



## Electric wiring connection


- (1) Remove the front side plate (Fig.33)
- (2) Break through the hole for wires and put on rubber bush.
- (3) Pull all wires through the rubber bush.
- (4) Connect the outdoor unit according to the “WIRING DIAGAM” of outdoor unit. Make sure to wire firmly.
- (5) Tighten the wires with clamp and clasp.

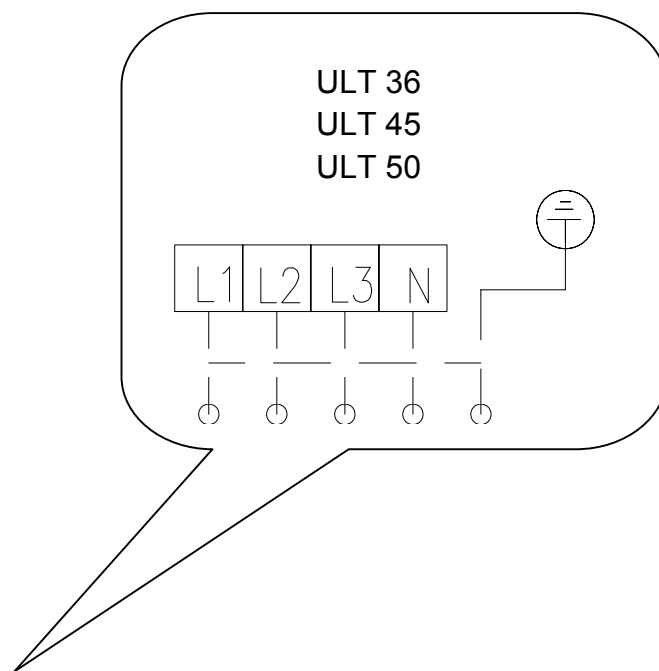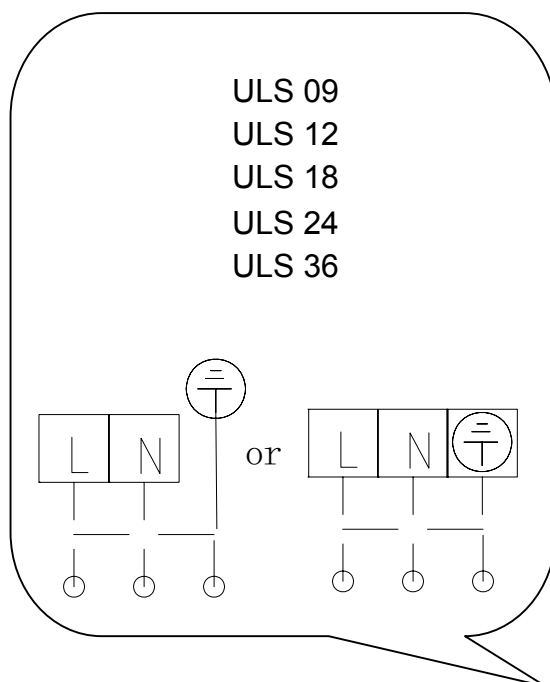

## CAUTION


- Wrong wiring may cause fire of electric shock.
- Do not pull the wire when fixing it with wire clamp and clasp.
- Do not let the wire too loose
- All the electrical work must be done by qualified personnel according to the local rules and this instruction.
- The rated voltage and the exclusive circuit must be used.
- Leakage circuit-breaker must be installed.
- Please use specified fuse.
- If the power supply cord of the unit is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- An all-pole disconnection air switch which have a contact separation of at least 3mm in all pole is needed.

Power supply terminal board

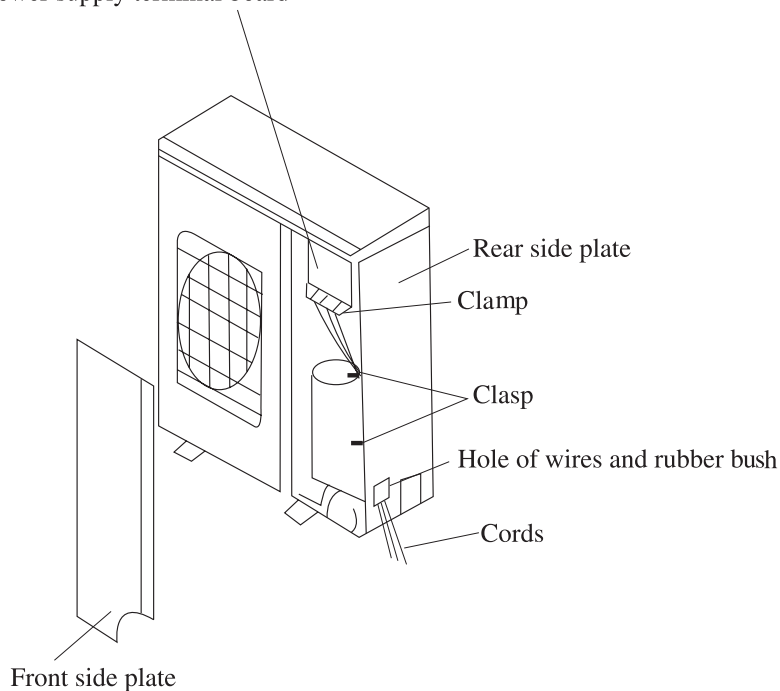

## ● Profile Dimensions of Outdoor Unit

### Profile Dimensions of Outdoor Unit

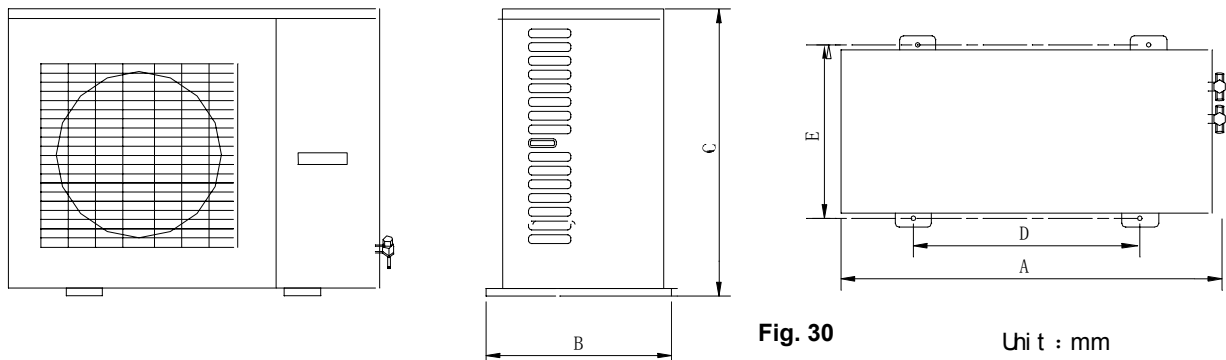

Model Item	ULS 09 ULS 12 ULS 18	ULS 24	ULS 36 ULT 36	ULT 45 ULT 50
A	848	1018	1018	950
B	320	412	412	412
C	540	700	840	1250
D	540	572	572	572
E	286	300	378	378

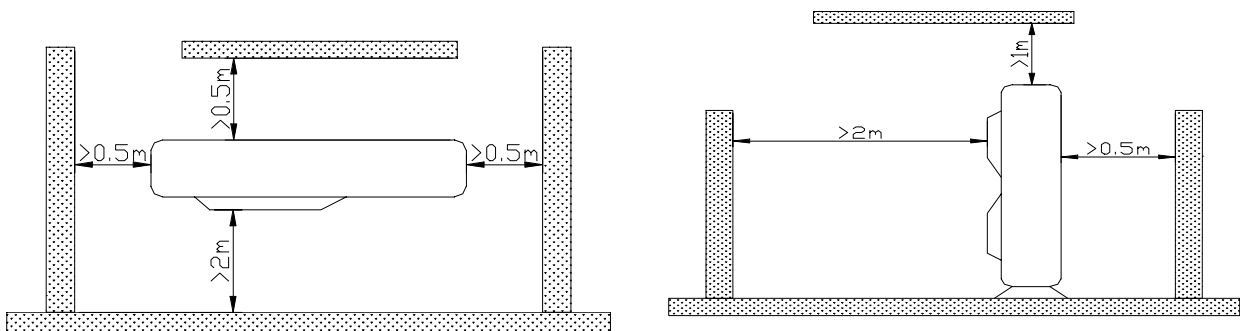


Fig.31

## Unit Installation Instructions




### Precautions on Installation of Outdoor Unit

To ensure the unit in proper function, selection of installation location must be in accordance with following principles:


- (1) Outdoor unit shall be installed so that the air discharged by outdoor unit will not return and that sufficient space for repair shall be provided around them achine.
- (2) The installation site must have good ventilation,so that the outdoor unit can take in and exhaust enoughair.Ensure that there is no obstacle for the airintake and exhaust of the outdoor unit.If there is any obstacle blocking the air intake or exhaust, remove it.
- (3) Place of installation shall be strong enough to support the weight of outdoor unit, and it shall be able to insulate noise and prevent vibration. Ensure that the wind and noise from the unit will not affect your neighbors.
- (4) Avoid direct sunshine over the unit. It is better to set up a sun shield as the protection.
- (5) Place of installation must be able to drain the rainwater and defrosting water.
- (6) Place of installation must ensure the machine will not be buried under snow or subject to the influence of rubbish or oil fog.
- (7) The installation site must be at a place where the air exhaust outlet does not face strong wind.

## Electric wiring connection

The section area of cables selected by users must not be smaller than the specifications show diagram. The signal wire between indoor and outdoor unit shall be installed in the shielded bushing, and the unshielded twisted pair cable (UTP) shall be used, the cross sectional area of the cables must be  $0.75 \text{ mm}^2$ .

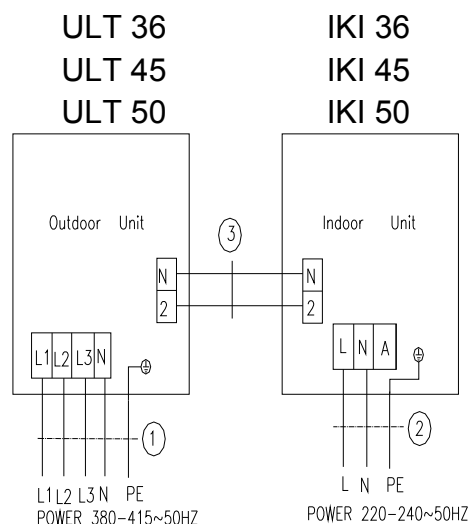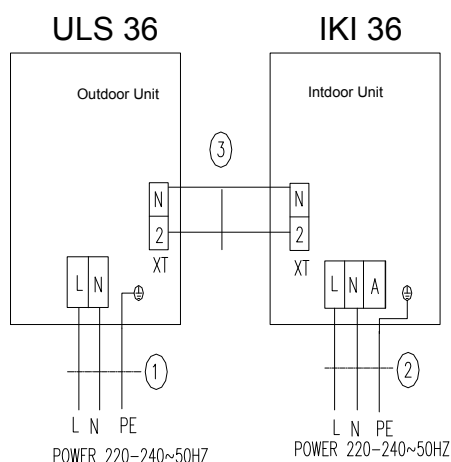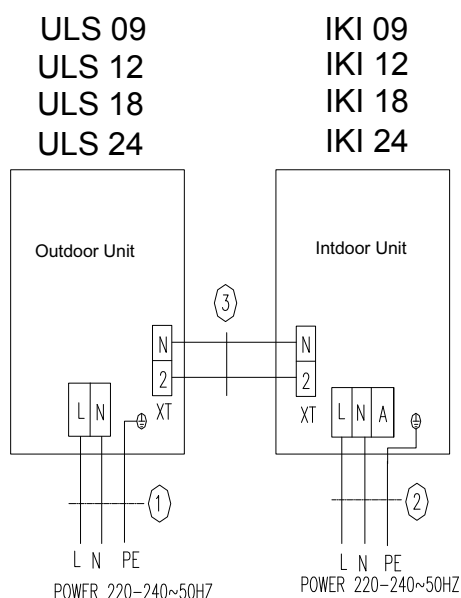

## ● Rated Parameter and Side for Fuse

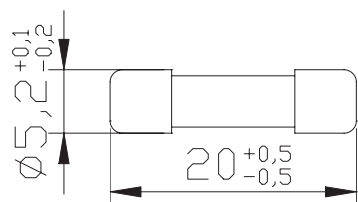Unit	Code	Rated parameter	Side
ULS 09 ULS 12 ULS 18 ULS 24 ULS 36 ULT 36 ULT 45 ULT 50	46010014	250V, 3. 15A	
All the indoor units	46010013	250V, 5A	

## Position and Method of Installing Wire Controller

1. One end of the control wire of the manual controller is connected with main board of electric box of indoor unit inside, it should be tightened by wire clamp, the other end should be connected with the manual controller (installation sketch map as shown in below). The control wire be used for the indoor unit and manual controller, which is the special communication wire, the length is 8 meters, the material be adopted for the control wire should be metallic substance. The manual controller could not be disassembled and the communication wire be used for the manual controller should not be changed by users optionally, the installation and maintenance should be carried out by the professional personnel.
2. First select an installation position. According to the size of the communication line of the wire controller, leave a recess or a embedded wire hole to bury the communication line.
3. If the communication line between the wire controller ( $85 \times 85 \times 16$ ) and the indoor unit is surface-mounted, use 1# metallic pipe and make matching recess in the wall (refer to Figure 41); If concealed installation is adopted, 1# metallic pipe can be used (Refer to Figure 42).
4. No matter if surface mounting or concealed mounting is selected, it is required to drill 2 holes (in the same level) which distance shall be the same as the distance (60mm) of installation holes in the bottom plate of the wire controller. Then insert a wood plug into each hole. Fix the bottom plate of the wire controller to the wall by using the two holes. Plug the communication line onto the control panel. Lastly install the panel of the wire controller.

### Caution:

During the installation of the bottom plate of the wire controller, pay attention to the direction of the bottom plate. The plate's side with two notches must be at the lower position, and otherwise the panel of the wire controller cannot be correctly installed.

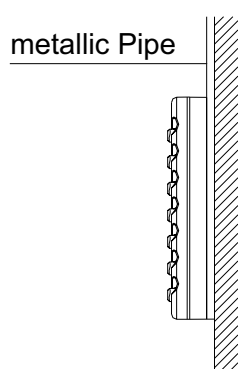
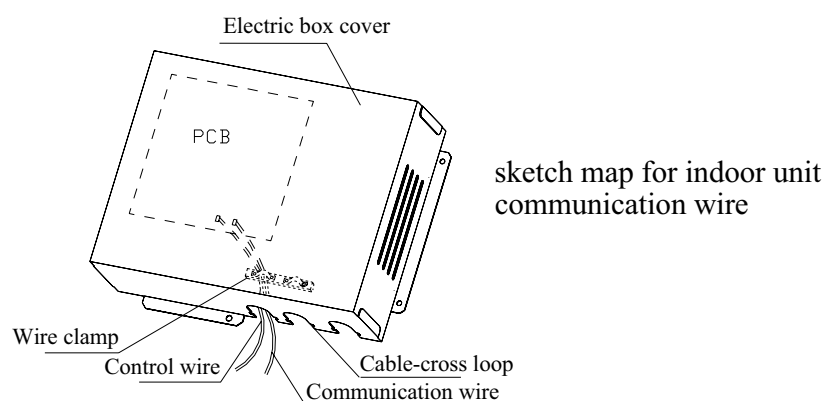


Figure 43 Surface Mounting of Cable

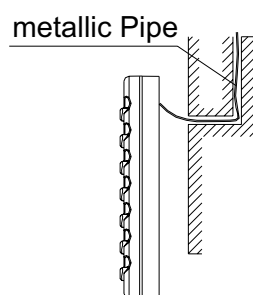


Figure 44 Concealed mounting of Cable

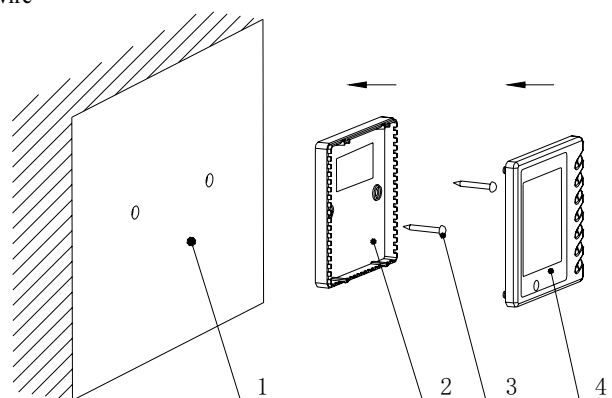


Figure 45 Schematic Diagram of Installation

No.	Name
1	Wall Surface
2	Bottom Plate of Wire Controller
3	Screw M4X10
4	Panel of Wire Controller

## Caution:

1. The communication distance between the main board and the wire controller is 8 meters.
2. The wire controller shall not be installed in a place where there is water drop or large amount of water vapor.



**Caution:** Before installing the electrical equipment, please pay attention to the following matters which have been specially pointed out by our designers:

- (1) Check to see if the power supply used conforms to the rated power supply specified on the nameplate.
- (2) The capacity of the power supply must be large enough.
- (3) The lines must be installed by professional personnel.

An electricity leakage protection switch and an air switch with gap between electrode heads larger than 3mm shall be installed in the fixed line.

1. Connection of single wire

- (1) Use wire stripper to strip the insulation layer (25mm long) from the end of the single wire.
- (2) Remove the screw at the terminal board of the air-conditioning unit.
- (3) User pliers to bend the end of the single wire so that a loop matching the screw size is formed.
- (4) Put the screw through the loop of the single wire and fix the loop at the terminal board.

2. Connection of multiple twisted wires

- (1) Use wire stripper to strip the insulation layer (10mm long) from the end of the multiple twisted wires.
- (2) Remove the screw at the terminal board of the air-conditioning unit.
- (3) Use crimping pliers to connect a terminal (matching the size of the screw) at the end of the multiple twisted wires.
- (4) Put the screw through the terminal of the multiple twisted wires and fix the terminal at the terminal board.



**Warning:**

If the power supply flexible line or the signal line of the equipment is damaged, only use special flexible line to replace it.


1. Before connecting lines, read the voltages of the relevant parts on the nameplate. Then carry out line connection according to the schematic diagram.
2. The air-conditioning unit shall have special power supply line which shall be equipped with electricity leakage switch and air switch, so as to deal with overload conditions.
3. The air-conditioning unit must have grounding to avoid hazard owing to insulation failure.
4. All fitting lines must use crimp terminals or single wire. If multiple twisted wires are connected to terminal board, arc may arise.
5. All line connections must conform to the schematic diagram of lines. Wrong connection may cause abnormal operation or damage of the air-conditioning unit.
6. Do not let any cable contact the refrigerant pipe, the compressor and moving parts such as fan.
7. Do not change the internal line connections inside the air-conditioning unit. The manufacturer shall not be liable for any loss or abnormal operation arising from wrong line connections.

## Connection of Signal Line of Wire Controller

1. Open the cover of the electric box of the indoor unit.
2. Pull the signal cable of the wire controller through the rubber ring.
3. Plug the signal line of the wire controller onto the 4-bit pin socket(CN9) at the circuit board of the indoor unit.
4. Use cable fastener to bundle and fix the signal cable of the wire controller.


## PIPE & ELECTRICAL WIRE CUTTING

- Use cutting tools easily found in the market.
- Measure precisely both outer & inner pipe.
- Provide a little bit longer pipe than the measurement.
- Wire must be 1.5 m. longer than the refrigerant tube.

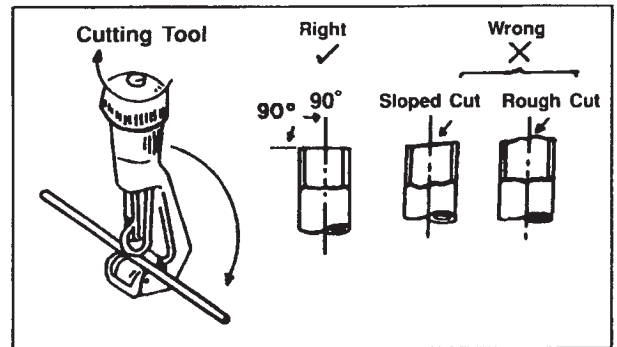


## REAMING

- Clean inside of the inner refrigerant tube.
- While reaming, the tube end must be on the top of the reamer to prevent any dust going back into the tube.

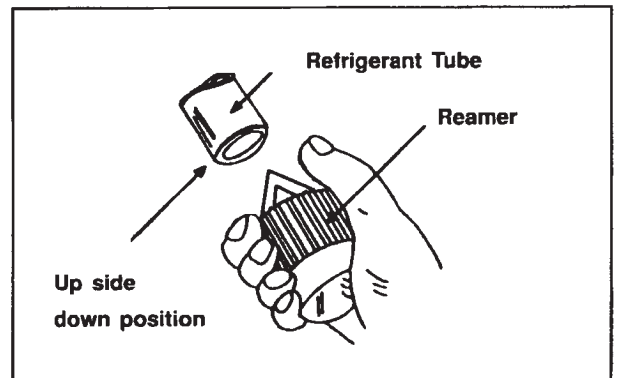


## FLARING THE PIPE END

- Flare both ends of the pipe with flaring kit by fitting the flare nut on the pipe before flaring. Set the die on the pipe so that pipe end is 0.5 mm. above top of the die. Check if the pipe end is even and perfectly round.

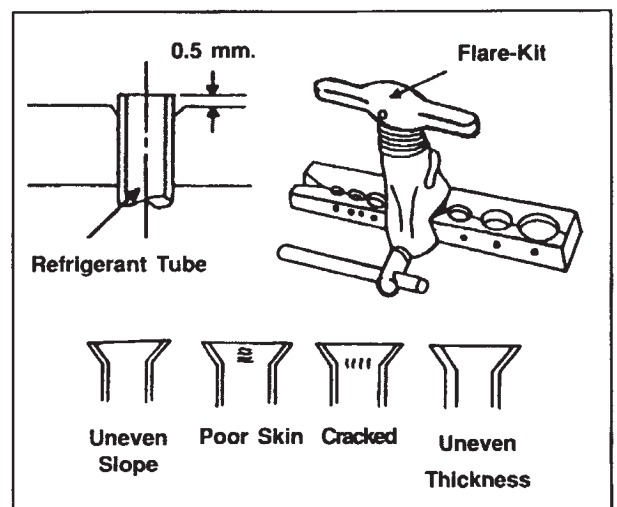

## WIRE CONNECTION AND TAPE COVERING

(See the picture on the right hand side)

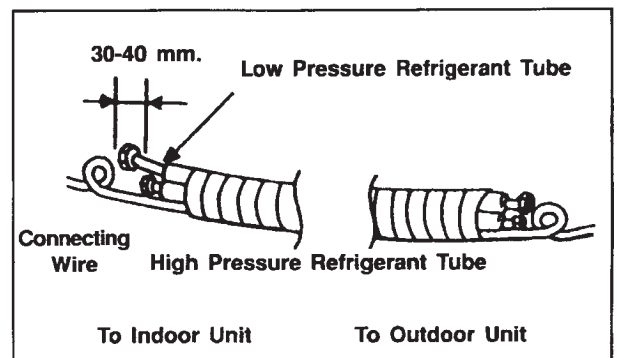




The refrigerant is R410A ,GWP=2020, ODP=0

Select copper pipes for gas and liquid as informed in specific table (see the pipe table below)

For dust and moisture protection, before assembly of the pipe and its insulation, both ends of the pipe must be covered.

Avoid pipe bending as much as possible. If it is necessary, the bending radius must be more than 3 cm. or 4 cm.

Item  Model	Size of Fitting Pipe (mm)		Max. Pipe Length (m)	Max. Height Difference between Indoor Unit and Outdoor Unit (m)	Amount of Additional Refrigerant to be Filled (For Extra Length of Pipe)
	Gas Pipe	Liquid Pipe			
IKI 09	3/8"	1/4"	20	15	30g/m
IKI 12	1/2"				
IKI 18					
IKI 24	5/8"	3/8"	30	15	60g/m
IKI 36	3/4"	1/2"	50	30	120g/m
IKI 45					
IKI 50					

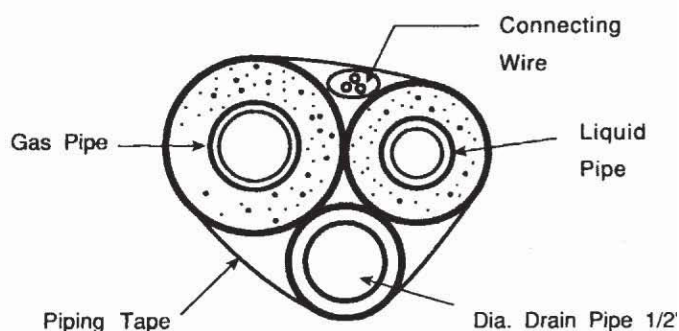

The connection between an indoor unit and an outdoor unit.

- Unscrew the flare nut for releasing pressure gas in the indoor unit. If there is no high pressure gas blowing out, it is the signal of a leaking indoor unit.
- Fit the flare nut to the liquid pipe. Flare the pipe's end with flare tool.
- Tighten both flare nuts into gas pipe and liquid pipe at the indoor unit with two holding spanners.


## AIR PURGING

The purpose of air purging is to get rid of moisture and air in the system, otherwise moisture and air may cause ineffectiveness of the compressor which directly affects the cooling capacity.

## PURGING BY USING VACUUM.


After tightening the flare nuts between the indoor and the outdoor units.

- Remove a blank cap of a three-way valve by using a torque wrench. Check if both high pressure and low pressure valves are in closed condition.
- Remove the nut of the service port.
- Connect a gauge into the service port and a vacuum pump.
- Vacuum until the gauge indicates at 30 inches mercury pressure.
- Remove gauge. Tighten up the nut of the service port.
- Use a hexagonal wrench to open both high pressure and low pressure valves to the end (counter clockwise).
- Tighten the blank cap of the three-way valve.

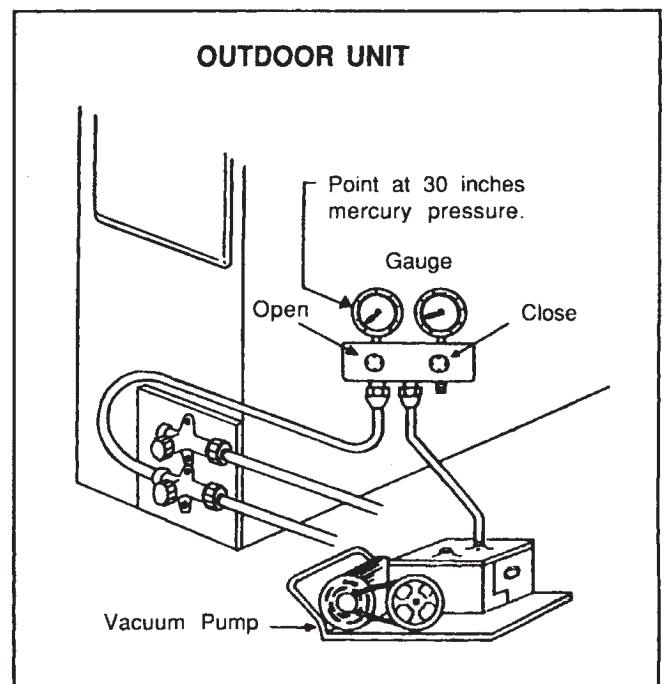


## GAS LEAKING CHECK

- Check leakage by apply soapsuds to every connection and inspect carefully. After checking, wipe them off completely.
- Cover indoor unit joint with pipe insulation and 4 plastic bands to prevent condensation at joints.

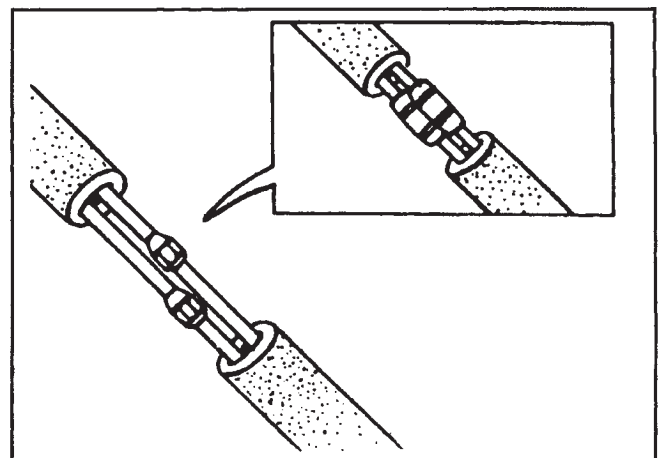

## IF THE OUTDOOR UNIT IS INSTALLED LOWER THAN THE INDOOR UNIT (picture 1)


1. A drain pipe should be above ground and the end of the pipe does not dip into water. All pipes must be restrained to the wall by saddles.
2. Taping of the pipes must be done from bottom to top.
3. All pipes are bound together by tape and restrained to the wall by saddles.

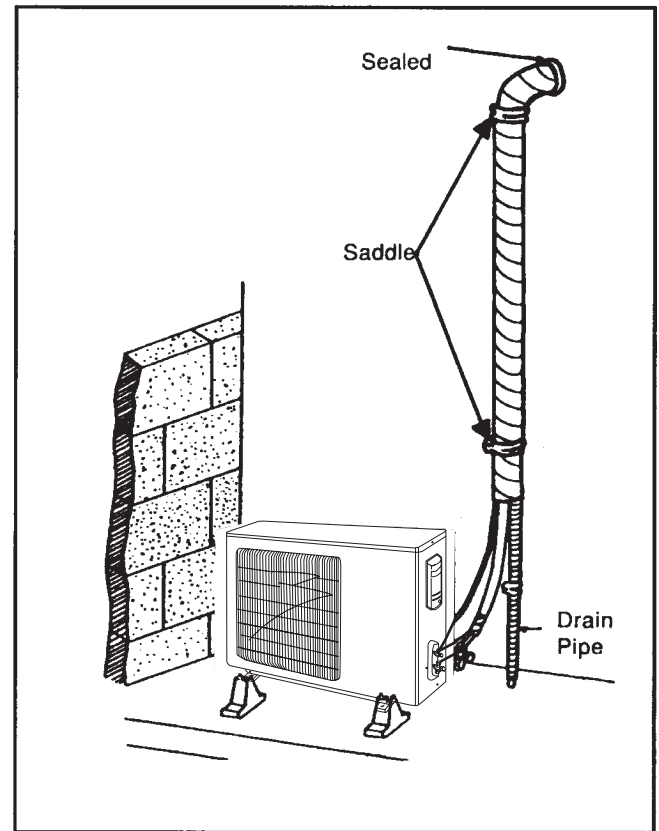

Picture 1

## IF THE OUTDOOR UNIT IS INSTALLED HIGHER THAN THE INDOOR UNIT (picture 2)

1. Taping should be done from lower to upper part.
2. All pipes are bound and taped together and trapped the pipes to prevent water returning to the room. (see picture)
3. Restrain all pipes to the wall with saddles.

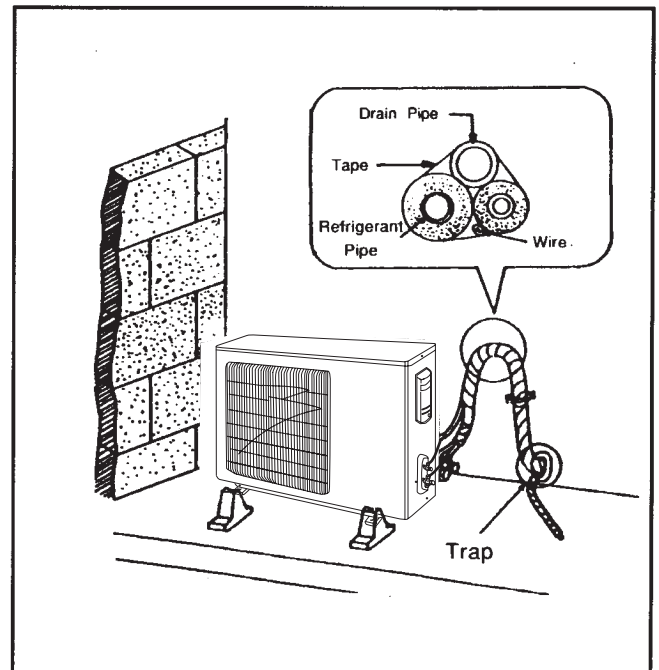

Picture 2

**Make sure the drain flows out**  **CAUTION**

## (1) Drain piping

- The drain pipe outlet direction can be chosen from either the right rear or right.
- The diameter of the drain pipe should be equal to or greater than the diameter of the connecting pipe.

(Vinyl tube; pipe size:20 mm; outer dimension:26 mm)

- Keep the drain pipe short and incline downwards at a gradient of at least 1/100 to prevent air pockets.(Refer to Fig.1)

- Use the attached drain hose ④ and clamp ⑤

Insert the drain hose completely into the drain socket. Tighten the clamp within the range of gray tape until the screw head is less than 4 mm from the hose.(Refer to Fig.2,3)

- Wrap the attached sealing pad ⑪ over the clamp and drain hose to insulate.

(Refer to Fig.3)

- No folding of drain hose inside the indoor unit.(Refer to Fig.4)

## (2) Confirm that smooth drainage is achieved after the piping work.

- Pour 600 cc of water into the drain pan from the air outlet for confirming drainage.(Refer to Fig.5)

(When drain hose is connected)

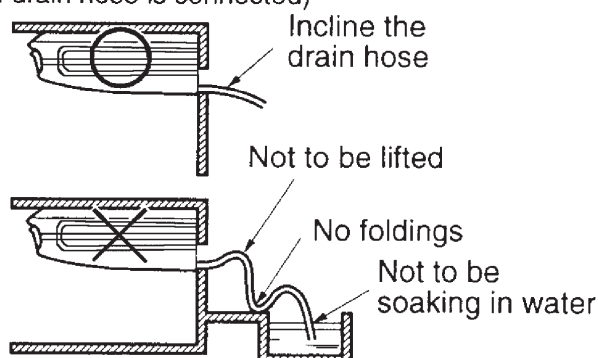


Fig.1

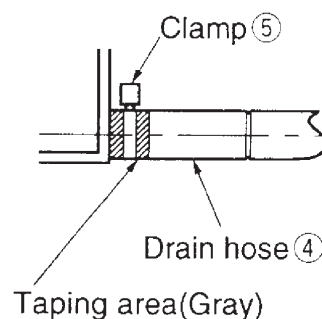


Fig.2

Cramp ⑤ (Accessory) Large sealing pad ⑪ (Accessory)

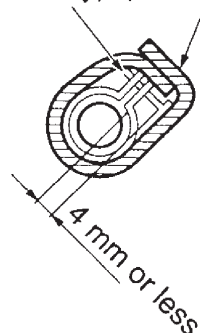


Fig.3

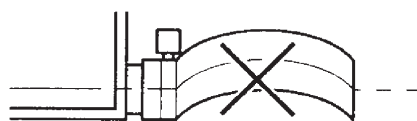


Fig.4

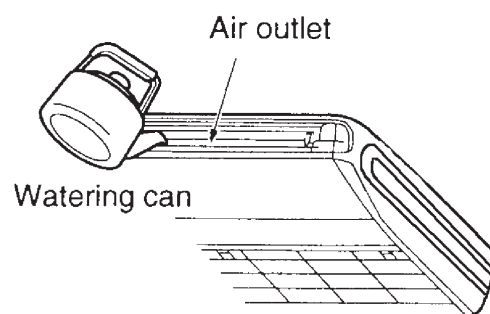


Fig.5

## ● Check after installation

Items to be checked	Possible malfunction	Situation
Has it been fixed firmly?	The unit may drop,shake or emit noise.	
Have you done the refrigerant leakage test?	It may cause insufficient refrigerating capacity.	
Is heat insulation sufficient?	It may cause condensation and dripping.	
Does the unit drain well?	It may cause condensation and dripping.	
Is the voltage in accordance with the rated voltage marked on the nameplate?	It may cause electric malfunction or damage the part.	
Is the electrical wiring and piping connection installed correctly and securely?	It may cause electric malfunction or damage the part.	
Has the unit been connected to a secure earth connection?	It may cause electrical leakage.	
Is the power cord specified?	It may cause electric malfunction or damage the part.	
Has the inlet and outlet been covered?	It may cause insufficient refrigerating capacity.	
Has the length of connection pipes and the refrigerant charge been record?	The refrigerating capacity is not accurate	




### WARNING!

1. This appliance is not intended for use by persons (including children) with reduced physical sensory or capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.

## EVALUATION OF THE PERFORMANCE

- Check electrical main wire's voltage.
- Use a thermometer to measure cool air both in and out.
- The difference between in-air and out-air temperature should not be less than 8℃.

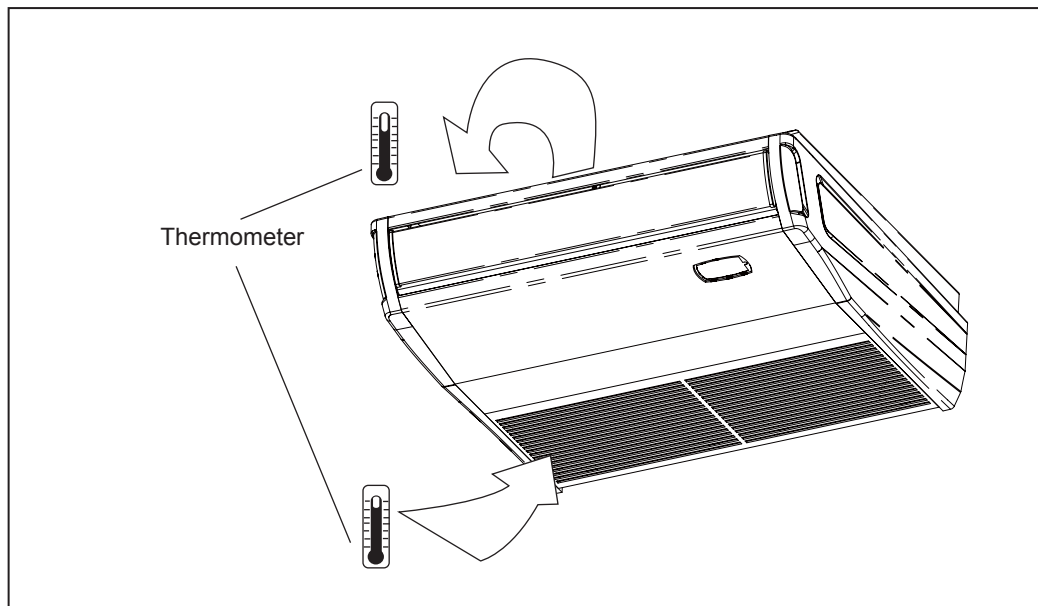

- The unit has Auto-restart function, it can remember the running model before power-broken.

● Be sure to use the exclusive accessories list above in the installation. or it will lead to water leakage, electric shock, fire, etc.

## Appendix:

Air conditioner nominal working condition and working range:

Test condition	Indoor side		Outdoor side	
	DB(℃)	WB(℃)	DB(℃)	WB(℃)
Nominal cooling	27	19	35	24
Nominal heating	20	— —	7	6
Rated cooling	32	23	43	26
Low temp. cooling	21	15	18 (-7)	— —
Rated heating	27	— —	24	18
Low temp. heating	20	— —	-7	-8

Note:

1. The design of this unit conforms to the requirements of EN14511 standard.
2. The air volume is measured at the relevant standard external static pressure.
3. Cooling (heating) capacity stated above is measured under nominal working conditions corresponding to standard external static pressure. The parameters are subject to change with the improvement of products, in which case the values on nameplate shall prevail.
4. In this table, the outdoor side DB temperature of low temp. cooling include two values, the one in the bracket is the working condition of the appliance with function of low temp. cooling .

